

**FARMALL® I10U**  
**FARMALL® I20U**  
**Tier 4B (final)**  
Tractor

**SERVICE MANUAL**

**Part number 51487919**

1<sup>st</sup> edition English

July 2018





## **SERVICE MANUAL**

**Farmall® 110U With 16x16 Semi-Powershift transmission**  
**Farmall® 120U With 16x16 Semi-Powershift transmission**

## Link Product / Engine

---

| Product                                                  | Market Product | Engine         |
|----------------------------------------------------------|----------------|----------------|
| Farmall® 110U With 16x16<br>Semi-Powershift transmission | North America  | F5GFL413V*C001 |
| Farmall® 120U With 16x16<br>Semi-Powershift transmission | North America  | F5GFL413U*C002 |

# Contents

---

## INTRODUCTION

|                                                                     |       |
|---------------------------------------------------------------------|-------|
| Engine.....                                                         | 10    |
| [10.001] Engine and crankcase .....                                 | 10.1  |
| [10.216] Fuel tanks .....                                           | 10.2  |
| [10.206] Fuel filters .....                                         | 10.3  |
| [10.202] Air cleaners and lines .....                               | 10.4  |
| [10.254] Intake and exhaust manifolds and muffler .....             | 10.5  |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment..... | 10.6  |
| [10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....     | 10.7  |
| [10.400] Engine cooling system .....                                | 10.8  |
| [10.414] Fan and drive .....                                        | 10.9  |
| [10.310] Aftercooler.....                                           | 10.10 |
| [10.218] Fuel injection system.....                                 | 10.11 |
| Clutch .....                                                        | 18    |
| [18.100] Clutch mechanical release control .....                    | 18.1  |
| [18.112] Slip clutch or flywheel damper .....                       | 18.2  |
| Transmission.....                                                   | 21    |
| [21.111] Semi-Powershift transmission .....                         | 21.1  |
| [21.133] Semi-Powershift transmission external controls .....       | 21.2  |
| [21.103] Semi-Powershift transmission hydraulic components.....     | 21.3  |
| [21.152] Semi-Powershift transmission internal components .....     | 21.4  |
| [21.160] Creeper .....                                              | 21.5  |
| [21.109] Transmission cooler and lines.....                         | 21.6  |
| Four-Wheel Drive (4WD) system .....                                 | 23    |
| [23.202] Electro-hydraulic control .....                            | 23.1  |
| [23.314] Drive shaft.....                                           | 23.2  |

|                                                               |           |
|---------------------------------------------------------------|-----------|
| <b>Front axle system .....</b>                                | <b>25</b> |
| [25.100] Powered front axle .....                             | 25.1      |
| [25.102] Front bevel gear set and differential .....          | 25.2      |
| [25.108] Final drive hub, steering knuckles, and shafts ..... | 25.3      |
| [25.122] Axle suspension control .....                        | 25.4      |
| <b>Rear axle system .....</b>                                 | <b>27</b> |
| [27.100] Powered rear axle .....                              | 27.1      |
| [27.106] Rear bevel gear set and differential .....           | 27.2      |
| [27.120] Planetary and final drives .....                     | 27.3      |
| <b>Power Take-Off (PTO) .....</b>                             | <b>31</b> |
| [31.104] Rear electro-hydraulic control .....                 | 31.1      |
| [31.114] Two-speed rear Power Take-Off (PTO) .....            | 31.2      |
| [31.116] Three-speed rear Power Take-Off (PTO) .....          | 31.3      |
| [31.142] Front Power Take-Off (PTO) control .....             | 31.4      |
| [31.146] Front Power Take-Off (PTO) .....                     | 31.5      |
| <b>Brakes and controls .....</b>                              | <b>33</b> |
| [33.202] Hydraulic service brakes .....                       | 33.1      |
| [33.110] Parking brake or parking lock .....                  | 33.2      |
| [33.220] Trailer brake hydraulic control .....                | 33.3      |
| [33.224] Trailer brake pneumatic control .....                | 33.4      |
| <b>Hydraulic systems .....</b>                                | <b>35</b> |
| [35.000] Hydraulic systems .....                              | 35.1      |
| [35.304] Combination pump units .....                         | 35.2      |
| [35.322] Regulated/Low pressure system .....                  | 35.3      |
| [35.204] Remote control valves .....                          | 35.4      |
| [35.100] Main lift system .....                               | 35.5      |
| [35.114] Three-point hitch control valve .....                | 35.6      |
| [35.116] Three-point hitch cylinder .....                     | 35.7      |

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)