

FARMALL® 35C
FARMALL® 40C
Tier 4B (final)
Compact Tractor

FARMALL® 35C ROPS: PIN LSMF35CRxx0010001 to LSMF35CRPH0010029
FARMALL® 40C Cab: PIN LSMF40CCxx0010001 to LSMF40CCJH0010025

SERVICE MANUAL

Part number 48144023

1st edition English
June 2017

CASE II
AGRICULTURE



SERVICE MANUAL

**Farmall® 35C Tier 4B (final), ROPS [LSMF35CRxx0010001 -
LSMF35CRPH0010029]**

**Farmall® 40C Tier 4B (final), Cab [LSMF40CCxx0010001 -
LSMF40CCJH0010025]**

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.218] Fuel injection system.....	10.4
[10.202] Air cleaners and lines	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.110] Clutch and components	18.2
Power coupling	19
[19.110] Flywheel damper	19.1
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.110] Master clutch housing	21.4
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
[23.101] Mechanical control	23.2
Front axle system	25
[25.100] Powered front axle	25.1

[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.106] Rear bevel gear set and differential.....	27.1
[27.120] Planetary and final drives	27.2
Hydrostatic drive.....	29
[29.200] Mechanical control	29.1
[29.100] Transmission and steering hydrostatic control	29.2
[29.204] Reservoir, cooler, and lines	29.3
[29.218] Pump and motor components.....	29.4
[29.202] Hydrostatic transmission	29.5
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO)	31.3
[31.120] Central Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.120] Mechanical service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.350] Safety and main relief valves	35.4
[35.204] Remote control valves	35.5
[35.114] Three-point hitch control valve	35.6
[35.116] Three-point hitch cylinder	35.7
[35.724] Front loader hydraulic system control.....	35.8

Hitches, drawbars, and implement couplings	37
[37.100] Drawbars and towing hitches	37.1
[37.108] Rear three-point hitch external controls.....	37.2
[37.110] Rear three-point hitch	37.3
Steering	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
[41.206] Pump	41.5
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels	44.2
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
[50.300] Cab pressurizing system	50.4
[50.AAA] Cab climate control generic sub-group.....	50.5
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.525] Cab engine controls.....	55.3
[55.201] Engine starting system	55.4
[55.301] Alternator.....	55.5
[55.640] Electronic modules	55.6
[55.031] Parking brake electrical system	55.7
[55.512] Cab controls.....	55.8

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com