

**FARMALL® 45C CVT
FARMALL® 55C CVT
Tier 4B (final)
Compact Tractor**

SERVICE MANUAL

Part number 47851945

1st edition English
February 2016





SERVICE MANUAL

Farmall® 45C CVT
Farmall® 55C CVT

Link Product / Engine

Product	Market Product	Engine
Farmall® 45C CVT Farmall 45C CVT, ROPS, TIER 4B (FINAL)	North America	R 753 IE4
Farmall® 45C CVT Farmall 45C CVT, Cab, TIER 4B (FINAL)	North America	R 753 IE4
Farmall® 55C CVT Farmall 55C CVT, ROPS, TIER 4B (FINAL)	North America	R 753 IE4
Farmall® 55C CVT Farmall 55C CVT, Cab, TIER 4B (FINAL)	North America	R 753 IE4

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.110] Balancer and damper	10.2
[10.202] Air cleaners and lines	10.3
[10.400] Engine cooling system	10.4
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.5
Transmission.....	21
[21.504] Continuously Variable Transmission (CVT)	21.1
Four-Wheel Drive (4WD) system	23
[23.101] Mechanical control	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.120] Central Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.120] Mechanical service brakes.....	33.2
Hydraulic systems.....	35

[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.204] Remote control valves	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
Steering.....	41
[41.200] Hydraulic control components.....	41.1
[41.206] Pump	41.2
[41.216] Cylinders	41.3
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.024] Transmission control system.....	55.2
[55.100] Harnesses and connectors.....	55.3
[55.201] Engine starting system	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.404] External lighting	55.7
[55.408] Warning indicators, alarms, and instruments	55.8
[55.518] Wiper and washer system.....	55.9
[55.640] Electronic modules	55.10
[55.DTC] FAULT CODES.....	55.11
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.116] Fenders and guards	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com