

**FARMALL® 55C**  
**FARMALL® 65C**  
**FARMALL® 75C**  
Tractor

**SERVICE MANUAL**

**Part number 84419878A**

English  
October 2011



## INTRODUCTORY NOTES

- *This manual is divided into sections identified by two-figure numbers and each section has independent page numbering.*
- *The different sections can easily be found by consulting the table of contents on the following pages.*
- *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- *The pages of future updates will be identified by the same print number followed by an additional digit: standard manual first edition 84419878A – 1st update 84419878A1 – 2nd update 84419878A2 – etc. The pages of the update can replace or supplement the pages of the standard manual; the necessary information for the procedure to add or replace the pages is given on the title page of the update. The publication will be completed with an appropriate index. If it is necessary to issue a new updated manual (2nd edition) it will have document number 84419878B, this indicates that the manual is composed of the standard version 84419878A completed with all the updates: 1st update 84419878A1 – 2nd update 84419878A2 – etc.*
- *The information contained in this manual was current on the date printed on each section. As CASE IH constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons, or to meet legal requirements in different countries. In the event of conflicting information, consult the CASE IH Sales and Service Departments.*

## IMPORTANT WARNINGS

- *All maintenance and repair work described in this manual must be performed exclusively by CASE IH service technicians, in strict accordance with the instructions given and using any specific tools necessary.*
- *Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.*
- *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer. In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

No part of the text or illustrations may be copied



PRINTED IN FRANCE

© CNH GLOBAL N.V.

Print no. **84419878A** – 06 – 2011

## CONTENTS

	Page	Date		Page	Date
<b>00 - GENERAL GUIDELINES</b>			<b>21 - GEAR TRANSMISSION</b>		
General instructions . . . . .	1-2	06-11	<b>Chapter 1 - Mechanical transmission</b>		
Safety regulations . . . . .	3-4-5	06-11	Main Data . . . . .	1-2	06-11
Tractor refuelling . . . . .	6	06-11	Torque Specifications . . . . .	2-3	06-11
<b>10 - ENGINE</b>			Tools . . . . .	4	06-11
<b>CHAPTER 1</b>			Sections . . . . .	5-6-7	06-11
Summary . . . . .	1	06-11	Description and operation . . . . .	8	06-11
General specifications . . . . .	2-3	06-11	Troubleshooting . . . . .	8-9	06-11
Engine removal-installation . . . . .	4-5-6-7-8-9-10	06-11	Removal-Installation - rear transmission - gearbox casing . . . . .	10-11-12-13	06-11
Removal-Installation fuel tank . . . . .	11-12	06-11	Disassembly-Assembly - transmission-gearbox casing . . . . .	17-18	06-11
Coolant radiator removal-installation . . . . .	13-14-15	06-11	Disassembly-Assembly - clutch casing . . . . .	19-20-21	06-11
Accelerator control cable adjustment . . . . .	16	06-11	Sealing compound application diagram . . . . .	22	06-11
<b>18 - CLUTCH</b>			Transmission oil cooler removal-installation . . . . .	23	06-11
Main Data . . . . .	1	06-11	<b>CHAPTER 3 - Power Shuttle transmission</b>		
Torque Specifications . . . . .	2	06-11	Main Data . . . . .	1-2	06-11
Tools . . . . .	2	06-11	Torque Specifications . . . . .	3	06-11
Sections . . . . .	3	06-11	Tools . . . . .	4	06-11
Troubleshooting . . . . .	4	06-11	Sections . . . . .	5-6-7	06-11
Removal-Installation - clutch . . . . .	5	06-11	Description and operation . . . . .	8	06-11
Clutch Overhaul . . . . .	6-7-8-9	06-11	Troubleshooting . . . . .	8	06-11
Checks and measurements - clutch . . . . .	10-11	06-11	Disassembly-Assembly - clutch casing . . . . .	9-10-11	06-11
Adjustments - clutch disengagement levers . . . . .	11	06-11	Main clutch adjustments . . . . .	12	06-11
Adjustments - clutch pedal . . . . .	12	06-11	<b>23 - DRIVE LINES</b>		
Sectional view of PTO clutch servo control . . . . .	13	06-11	Main Data . . . . .	1	06-11
Description and operation of PTO servo control . . . . .	14-15	06-11	Torque Specifications . . . . .	2	06-11
PTO servo control adjustment . . . . .	16	06-11	Sections . . . . .	3-4	06-11
PTO engaged switch adjustment . . . . .	17	06-11	Description and operation . . . . .	5	06-11
			Troubleshooting . . . . .	6	06-11
			Drive shafts and guard. Disassembly - Assembly . . . . .	7	06-11

	Page	Date
Removal-Installation - drive gear casing .....	8	06-11

## 25 - FRONT AXLE MECHANICAL TRANSMISSION

### CHAPTER 1 - Front mechanical transmission

Main Data .....	1-2	06-11
Torque Specifications ....	3-4	06-11
Tools .....	5	06-11
Sections .....	6	06-11
Removal-Installation - front axle .....	8-9-10	06-11
Front axle. Disassembly - Assembly .....	11-12-13-14-15-16-17-18	06-11
Replacing steering knuckle pins and bearings .....	19	06-11
Adjustments - steering knuckle bearings .....	20-21	06-11
Adjustments - bevel drive .....	22-23-24-25-26-27-28	06-11
Overhaul - front differential	29	06-11
LIM-SLIP self-locking differential .....	30-31	06-11
Checking leading wheel alignment .....	32	06-11
Disassembly-Assembly - front epicyclic final drive ..	33-34	06-11

## 27 - REAR MECHANICAL TRANSMISSION

Main Data .....	1-2	06-11
Torque Specifications ....	3-4	06-11
Tools .....	5	06-11
Sections .....	6-7	06-11
Description and operation .	8	06-11
Troubleshooting .....	8	06-11
Disassembly-Assembly - transmission-gearbox casing .....	9-10-11-12	06-11
Adjustments - differential lock engagement sleeve position .....	13	06-11

	Page	Date
Adjustments - bevel drive	14-15-16	06-11
Removal - Installation side gear casing .....	17-18-19-20	06-11
Disassembly-Assembly - drive wheel shaft .....	21-22	06-11

## 31 - POWER TAKE-OFF

### CHAPTER 1 - Mechanical power take-off

Main Data .....	1-2	06-11
Torque Specifications ....	3-4	06-11
Sections .....	5-6	06-11
Description and operation .	7-8	06-11
Troubleshooting .....	8	06-11

## 33 - BRAKES

Main Data .....	1-2	06-11
Torque Specifications ....	2	06-11
Sections .....	3	06-11
Description and operation .	4	06-11
Troubleshooting .....	5-6	06-11
Removal-Installation - service brake .....	7	06-11
Removal-Installation - service brake pump .....	8-9	06-11
Adjustments - service brake pedals travel .....	10	06-11
Service brake circuit air bleeding .....	11-12	06-11

## 35 - HYDRAULIC SYSTEMS

### CHAPTER 1 - Rear mechanical hydraulic lift

Main Data .....	2	06-11
Torque Specifications ....	2-3	06-11
Tools .....	3	06-11
Sections .....	4	06-11
Troubleshooting .....	5	06-11
Description and operation .	6-7-8-9-10-11	06-11
Lift internal controls. Disassembly - Assembly .....	12-13-14-15	06-11

	Page	Date
Draft reading unit Disassembly - Assembly .....	16-17	06-11
Lift arms shaft. Disassembly - Assembly .....	18-19	06-11
Removal-Installation - lift control valve .....	20	06-11
Adjusting the lift .....	21-22-23	06-11

## **CHAPTER 2 - Open centre system auxiliary control valves**

Main Data .....	2	06-11
Tools .....	2	06-11
Torque Specifications ....	2	06-11
Sections .....	3-4	06-11
Description and operation .	5-6-7-8	06-11
Auxiliary control valves. Disassembly - Assembly ...	9-10-11	06-11

## **CHAPTER 3 - Trailer brakes auxiliary control valves**

Sections .....	1	06-11
Description and operation .	1-2-3-4-5-6-7	06-11
Troubleshooting .....	8-9-10	06-11

## **CHAPTER 8 - Front Loader**

Main Data .....	1	06-11
Sections .....	2	06-11
Torque Specifications ....	3	06-11
Troubleshooting .....	4-5	06-11
Parking the front loader ...	6	06-11
Front loader arm connection bracket Removal-Installation .....	7	06-11
Replacement of control struts (mod. MSL) .....	8	06-11
Replacement of triangular articulation levers (mod. MSL) .....	9	06-11
Bucket support device removal-installation .....	10	06-11
Position indicator disassembly-assembly .....	11	06-11
Bushing replacement ....	12-13	06-11
Loader cylinder removal-installation .....	14	06-11

	Page	Date
Bucket control cylinder removal-installation .....	15	06-11
Replacement of pins .....	16	06-11

## **41 - STEERING**

### **CHAPTER 1 - Steering**

Main Data .....	2	06-11
Torque Specifications ....	2	06-11
Tools .....	3	06-11
Description and operation .	4-5-6	06-11
View of hydrostatic steering control valve components .	7	06-11
Troubleshooting .....	8-9	06-11
Replacement - hydrostatic steering wheel .....	10	06-11
Removal-Installation - hydrostatic steering control valve .....	11-12	06-11
Disassembly-Assembly - hydrostatic control valve ..	13-14-15-16-17-18-19-20-21-22-23-24-25-26-27-28	06-11
Hydrostatic steering control valve bench testing .....	29-30	06-11
Pressure relief valve testing	31	06-11
Steering control cylinder. Removal - Installation ....	32-33	06-11
Steering control cylinder. Disassembly-Assembly ..	34-35	06-11

## **50 - CAB HVAC SYSTEM**

Safety regulations .....	2	06-11
Main Data .....	3	06-11
Tools .....	4	06-11
Operating principles ....	5	06-11
Conditioning system components .....	6-7-8-9-10	06-11
Cab controls .....	11-12-13	06-11
Testing operation and cooling .....	14-15	06-11

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)