

**FARMALL® 90C**  
**FARMALL® 100C**  
**FARMALL® 110C**  
**FARMALL® 120C**  
**Efficient Power**  
**Tier 4B (final)**  
Tractor

**SERVICE MANUAL**

**Part number 47878246**

1<sup>st</sup> edition English

June 2015





## **SERVICE MANUAL**

**Farmall® 100C with cab, with Hi-Lo transmission , Farmall® 100C with cab, with mechanical or Power shuttle transmission , Farmall® 100C without cab, with Hi-Lo transmission , Farmall® 100C without cab, with mechanical or Power shuttle transmission , Farmall® 110C with cab, with Hi-Lo transmission , Farmall® 110C with cab, with mechanical or Power shuttle transmission , Farmall® 110C without cab, with Hi-Lo transmission , Farmall® 110C without cab, with mechanical or Power shuttle transmission , Farmall® 120C with cab, with Hi-Lo transmission , Farmall® 120C with cab, with mechanical or Power shuttle transmission , Farmall® 120C without cab, with Hi-Lo transmission , Farmall® 120C without cab, with mechanical or Power shuttle transmission , Farmall® 90C with cab, with Hi-Lo transmission , Farmall® 90C with cab, with mechanical or Power shuttle transmission , Farmall® 90C without cab, with Hi-Lo transmission , Farmall® 90C without cab, with mechanical or Power shuttle transmission**

## Link Product / Engine

Product	Market Product	Engine
Farmall® 100C without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 100C with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 100C without cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 100C with cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 110C without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 110C with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 110C without cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 110C with cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 120C without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 120C with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 120C without cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 120C with cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 90C without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 90C with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 90C without cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 90C with cab, with Hi-Lo transmission	North America	F5GFL413A*B006

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.202] Air cleaners and lines .....	10.3
[10.254] Intake and exhaust manifolds and muffler .....	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system .....	10.6
[10.414] Fan and drive .....	10.7
[10.310] Aftercooler.....	10.8
Clutch .....	18
[18.100] Clutch mechanical release control .....	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components .....	18.3
Transmission.....	21
[21.130] Mechanical transmission external controls.....	21.1
[21.112] Power shuttle transmission.....	21.2
[21.110] Master clutch housing .....	21.3
[21.134] Power shuttle transmission external controls .....	21.4
[21.154] Power shuttle transmission internal components .....	21.5
[21.160] Creeper .....	21.6
[21.162] Reverser .....	21.7
[21.168] Hi-Lo unit.....	21.8
[21.109] Transmission cooler and lines.....	21.9
[21.118] Transmission/Rear drive .....	21.10
[21.148] Transmission/Rear drive internal components .....	21.11
[21.AAA] Transmission generic sub-group .....	21.12

<b>Four-Wheel Drive (4WD) system .....</b>	<b>23</b>
[23.101] Mechanical control .....	23.1
[23.202] Electro-hydraulic control .....	23.2
[23.314] Drive shaft.....	23.3
<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.400] Non-powered front axle .....	25.4
<b>Rear axle system.....</b>	<b>27</b>
[27.106] Rear bevel gear set and differential .....	27.1
[27.120] Planetary and final drives .....	27.2
[27.100] Powered rear axle.....	27.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO) .....	31.3
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.104] Fixed displacement pump.....	35.1
[35.204] Remote control valves .....	35.2
[35.114] Three-point hitch control valve .....	35.3
[35.116] Three-point hitch cylinder .....	35.4

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)