

Farmall 45A
Farmall 50A
Tractor

SERVICE MANUAL

Part number 51453914

1st edition English

May 2018

© 2018 CNH Industrial (India) Pvt.Ltd. All Rights Reserved.





SERVICE MANUAL

Farmall® 45A

Farmall® 50A 50 Hp, Tier 2 Utility tractor, Two-Wheel Drive (2WD), Europe
Farmall® 50A 50 Hp, Tier 2 utility tractor, Four-Wheel Drive (4WD), Europe

Link Product / Engine

Product	Market Product	Engine
Farmall® 45A 45 Hp, Tier 2 utility tractor, Four-Wheel Drive (4WD), Europe	Europe	N844LT
Farmall® 50A 50 Hp, Tier 2 Utility tractor, Two-Wheel Drive (2WD), Europe	Europe	N844L
Farmall® 50A 50 Hp, Tier 2 utility tractor, Four-Wheel Drive (4WD), Europe	Europe	N844L

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.102] Pan and covers	10.2
[10.106] Valve drive and gears	10.3
[10.101] Cylinder heads	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.110] Balancer and damper	10.7
[10.114] Pump drives	10.8
[10.218] Fuel injection system.....	10.9
[10.254] Intake and exhaust manifolds and muffler	10.10
[10.400] Engine cooling system	10.11
[10.414] Fan and drive	10.12
[10.304] Engine lubrication system.....	10.13
[10.216] Fuel tanks	10.14
Clutch	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components	18.2
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls	21.5
[21.154] Power shuttle transmission internal components	21.6
Four-Wheel Drive (4WD) system	23

[23.304] Four-Wheel Drive (4WD) gearbox	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.114] Two-speed rear Power Take-Off (PTO)	31.2
Brakes and controls	33
[33.120] Mechanical service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.102] Pump control valves.....	35.4
[35.350] Safety and main relief valves	35.5
[35.322] Regulated/Low pressure system	35.6
[35.204] Remote control valves	35.7
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
Steering.....	41

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com