

Rowtrac™ 370 / 420 / 470 / 500
Steiger® 370 / 420 / 470 / 500 / 540 / 580 / 620
Quadtrac® 470 / 500 / 540 / 580 / 620
Tier 4B (final)
Tractor

PIN ZEF300001 and above

SERVICE MANUAL

Part number 47680525

1st edition English

March 2014



Link Product / Engine

Product	Market Product	Engine
null NA model [ZEF300001 -]	North America	F3HFE613D*B001
null NA model [ZEF300001 -]	North America	F3DFE613J*B001
null NA scraper model [ZEF300001 -]	North America	F3DFE613J*B001
null NA model [ZEF300001 -]	North America	F3DFE613G*B001
null NA scraper model [ZEF300001 -]	North America	F3DFE613G*B001
null NA model [ZEF300001 -]	North America	F3DFE613F*B001
null NA model [ZEF300001 -]	North America	F2CFE614A*B
null NA model [ZEF300001 -]	North America	F3HFE613G*B001
null NA model [ZEF300001 -]	North America	F3HFE613D*B001
null NA model [ZEF300001 -]	North America	F3HFE613B*B001
null NA standard wheeled [ZEF300001 -]	North America	F2CFE614A*B
null NA heavy duty wheeled [ZEF300001 -]	North America	F2CFE614A*B
null NA heavy duty wheeled [ZEF300001 -]	North America	F3HFE613G*B001
null NA heavy duty wheeled [ZEF300001 -]	North America	F3HFE613D*B001
null NA Wheeled scraper [ZEF300001 -]	North America	F3HFE613D*B001
null NA heavy duty wheeled [ZEF300001 -]	North America	F3HFE613B*B001
null NA wheeled scraper [ZEF300001 -]	North America	F3HFE613B*B001
null NA model [ZEF300001 -]	North America	F3HFE613B*B001
null NA scraper model [ZEF300001 -]	North America	F3HFE613B*B001
null NA heavy duty wheeled [ZEF300001 -]	North America	F3DFE613J*B001
null NA wheeled scraper [ZEF300001 -]	North America	F3DFE613J*B001
null NA heavy duty wheeled [ZEF300001 -]	North America	F3DFE613G*B001
null NA wheeled scraper [ZEF300001 -]	North America	F3DFE613G*B001
null NA heavy duty wheeled [ZEF300001 -]	North America	F3DFE613F*B001
null NA wheeled scraper [ZEF300001 -]	North America	F3DFE613F*B001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.202] Air cleaners and lines	10.3
[10.310] Aftercooler.....	10.4
[10.400] Engine cooling system	10.5
[10.414] Fan and drive	10.6
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.7
Transmission.....	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
[25.500] Front axle track yoke assembly	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
[27.610] Rear axle track yoke assembly	27.4
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control.....	31.1

[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.220] Gearbox	31.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.105] Charge pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.204] Remote control valves	35.5
[35.220] Auxiliary hydraulic pump and lines	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units	35.8
[35.600] High flow hydraulics	35.9
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
Frames and ballasting	39
[39.100] Frame	39.1
[39.110] Drawbar and hitch assembly	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Tracks and track suspension	48

[48.100] Tracks	48.1
[48.130] Track frame and driving wheels	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning	50.2
[50.300] Cab pressurizing system	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.301] Alternator	55.3
[55.302] Battery	55.4
[55.010] Fuel injection system	55.5
[55.014] Engine intake and exhaust system	55.6
[55.024] Transmission control system	55.7
[55.045] Front axle control system	55.8
[55.046] Rear axle control system	55.9
[55.048] Rear Power Take-Off (PTO) control system	55.10
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.11
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.12
[55.404] External lighting	55.13
[55.522] Cab Power Take-Off (PTO) controls	55.14
[55.640] Electronic modules	55.15
[55.035] Remote control valve electric control	55.16
[55.130] Rear three-point hitch electronic control system	55.17
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.18
[55.DTC] FAULT CODES	55.19

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com