

STX AND STEIGER SERIES TRACTORS MASTER TABLE OF CONTENTS

THIS MANUAL, 84257306, COVERS THE FOLLOWING STX AND STEIGER SERIES TRACTORS:
STX 280, 330, 380, 430, 480, and 530 Series
Steiger 280, 330, 380, 430, 480, and 530 Series
Steiger 335, 385, 435, 485, and 535 Series

NOTE: *Engine repair information is not contained within this tractor Service Manual. For engine repair, refer to appropriate engine service manual as follows:*

87515687 - *For 8.3 & 9.0L 6 Cylinder, 24 Valve CNH Engine with High Pressure Common Rail Fuel System.*

87523642 - *For 12.9L 6 Cylinder, Engine.*

87737593 - *For 12.9L 6 Cylinder, Turbo Compound Engine.*

STANDARD TORQUE SPECIFICATIONS SECTION 1000 (Book 1 - 87525655)

SAFETY SECTION 1001 (Book 1 - 87525655)

LUBRICATION AND MAINTENANCE SECTION 1002 (Book 1 - 87525655)

ENGINE OIL SELECTION 1002-3

Synthetic Lubricants 1002-3

ENGINE OIL VISCOSITY/TEMPERATURE USAGE RECOMMENDATION 1002-3

ENGINE COOLANT SOLUTIONS 1002-4

STX280 AND STX330 TRACTORS 1002-5

Lubricants and Capacities 1002-5

Lubrication and Maintenance Chart 1002-6

STX380, 430, 480 AND 530 TRACTORS 1002-8

Lubricants and Capacities 1002-8

Lubrication and Maintenance Chart 1002-9

SPECIFICATIONS SECTION 1003 (Book 1 - 87525655)

STX280 AND STX330 TRACTORS 1003-3

Diesel Engine 1003-3

Engine Lubrication System 1003-3

Fuel System 1003-3

Air Intake System 1003-3

Transmission - Power Shift 1003-3

Transmission - Manual Shift 1003-3

Brakes 1003-4

Axle Differential And Final Drives 1003-4

Power Takeoff (If Equipped) 1003-4

Hydraulic System 1003-4

Hitch System (If Equipped) 1003-4

Drawbar 1003-5

Approximate Base Shipping Weights 1003-5

Approximate Component Weights 1003-5

Maximum Tractor Operating Weight 1003-5

STX380, 430, 480 AND 530 TRACTORS 1003-6

Diesel Engine 1003-6

Engine Lubrication System 1003-7

Fuel System 1003-7

Air Intake System 1003-7

Transmission - Powershift 1003-7

Transmission - Manual Shift 1003-7

STX AND STEIGER SERIES TRACTORS MASTER TABLE OF CONTENTS

Brakes	1003-7
Axle Differential And Final Drives	1003-8
Power Takeoff (If Equipped)	1003-8
Hydraulic System	1003-8
TwinFlow Hydraulics (If Equipped)	1003-8
Hitch System (If Equipped)	1003-9
Drawbar	1003-9
Track And Undercarriage (If Equipped)	1003-9
Approximate Base Shipping Weights	1003-10
Approximate Component Weights	1003-10
Maximum Tractor Operating Weight	1003-10
ENGINE REMOVAL AND INSTALLATION - STX380/430 TRACTORS	SECTION 2001 (Book 1 - 87525655)
SPECIAL TORQUE VALUES	2001-3
RECOMMENDED TOOLS	2001-3
ENGINE REMOVAL	2001-4
ENGINE INSTALLATION	2001-13
AIR INDUCTION SYSTEM - STX380/430 TRACTORS	SECTION 2002 (Book 1 - 87525655)
SPECIAL TORQUE VALUES	2002-2
AIR INDUCTION SYSTEM	2002-3
AIR INDUCTION SYSTEM DESCRIPTION	2002-4
AIR INDUCTION SYSTEM	2002-4
AIR FILTER ELEMENTS	2002-4
PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL	2002-5
PRIMARY FILTER ELEMENT SERVICE	2002-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	2002-8
AIR CLEANER HOUSING REMOVAL	2002-9
ASPIRATOR STRATA TUBE CLEANING	2002-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	2002-11
ASPIRATOR SAFETY VALVE INSTALLATION	2002-11
AIR CLEANER HOUSING INSTALLATION	2002-12
RESTRICTION INDICATOR SWITCH INSTALLATION	2002-13
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	2002-13
VISCOUS FAN DRIVE TEST AND HYDRAULIC FAN DRIVE TEST	SECTION 2003 (Book 1 - 87525655)
VISCOUS FAN DRIVE TEST - STX280, STX330, STX380, STX430	2003-3
HYDRAULIC FAN DRIVE TEST - STX480 AND STX530	2003-5
ENGINE REMOVAL AND INSTALLATION - STX280/330 TRACTORS	SECTION 2004 (Book 1 - 87525655)
SPECIAL TORQUE VALUES	2004-2
SPECIAL TOOLS	2004-2
ENGINE REMOVAL	2004-3
ENGINE INSTALLATION	2004-10
ENGINE REMOVAL AND INSTALLATION - STX480/530 TRACTORS	SECTION 2005 (Book 1 - 87525655)
SPECIAL TORQUE VALUES	2005-2
RECOMMENDED TOOLS	2005-2
ENGINE REMOVAL	2005-3
ENGINE INSTALLATION	2005-13

STX AND STEIGER SERIES TRACTORS MASTER TABLE OF CONTENTS

AIR INDUCTION SYSTEM - STX280/330 TRACTORS.....	SECTION 2006 (Book 1 - 87525655)
SPECIAL TORQUE VALUES	2006-3
AIR INDUCTION SYSTEM	2006-4
AIR FILTER ELEMENTS	2006-4
ENGINE AIR INDUCTION SYSTEM	2006-5
Primary And Secondary Filter Element Removal	2006-5
PRIMARY FILTER ELEMENT SERVICE	2006-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	2006-7
AIR CLEANER HOUSING REMOVAL	2006-8
Aspirator Strata Tube Cleaning	2006-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	2006-12
ASPIRATOR SAFETY CHECK VALVE INSTALLATION	2006-13
AIR CLEANER HOUSING INSTALLATION	2006-14
RESTRICTION INDICATOR SWITCH INSTALLATION	2006-15
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	2006-16
AIR INDUCTION SYSTEM - STX480/530 TRACTORS.....	SECTION 2007 (Book 1 - 87525655)
SPECIAL TORQUE VALUES	2007-2
AIR INDUCTION SYSTEM	2007-3
AIR FILTER ELEMENTS	2007-4
Primary And Secondary Filter Element Removal	2007-5
Primary Filter Element Service	2007-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	2007-8
AIR CLEANER HOUSING REMOVAL	2007-9
ASPIRATOR STRATA TUBE CLEANING	2007-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	2007-11
ASPIRATOR SAFETY VALVE INSTALLATION	2007-11
AIR CLEANER HOUSING INSTALLATION	2007-12
RESTRICTION INDICATOR SWITCH INSTALLATION	2007-13
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	2007-13
ENGINE REMOVAL AND INSTALLATION, STEIGER 485 TRACTORS	SECTION 2008 (Book 1A - 87740903)
SPECIAL TORQUE VALUES	2008-3
RECOMMENDED TOOLS	2008-3
ENGINE REMOVAL	2008-4
ENGINE INSTALLATION	2008-15
AIR INDUCTION SYSTEM, STEIGER 385, 435 AND 485 TRACTORS.....	SECTION 2009 (Book 1A - 87740903)
SPECIAL TORQUE VALUES	2009-2
AIR INDUCTION SYSTEM	2009-3
AIR INDUCTION SYSTEM DESCRIPTION	2009-4
AIR INDUCTION SYSTEM	2009-4
AIR FILTER ELEMENTS	2009-4
PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL	2009-5
PRIMARY FILTER ELEMENT SERVICE	2009-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	2009-8
AIR CLEANER HOUSING REMOVAL	2009-9
ASPIRATOR STRATA TUBE CLEANING	2009-11
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	2009-12
ASPIRATOR SAFETY VALVE INSTALLATION	2009-12
AIR CLEANER HOUSING INSTALLATION	2009-13
RESTRICTION INDICATOR SWITCH INSTALLATION	2009-14
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	2009-15
NAO 2006 MODEL YEAR POWERSHIFT ELECTRICAL SCHEMATIC	POSTER 87517737
NAO 2007 MODEL YEAR POWERSHIFT ELECTRICAL SCHEMATIC	POSTER 87710063
NAO 2008 MODEL YEAR POWERSHIFT ELECTRICAL SCHEMATIC	POSTER 87708839

STX AND STEIGER SERIES TRACTORS MASTER TABLE OF CONTENTS

ELECTRICAL SYSTEM - HOW IT WORKS AND TROUBLESHOOTING	SECTION 4001 (Book 1 - 87525655)
SPECIAL TOOLS	4001-3
FUSE AND RELAY IDENTIFICATION DELUXE CAB POWERSHIFT TRANSMISSION	4001-4
FUSE AND RELAY IDENTIFICATION DELUXE CAB 24 SPEED TRANSMISSION	4001-6
INSTRUMENTATION AND CONTROLS	4001-8
AUXILIARY AUTO MODE SWITCH (IF EQUIPPED)	4001-11
CONNECTOR AND COMPONENT LOCATION	4001-13
ELECTRICAL SYSTEMS SCHEMATICS AND DIAGNOSTICS	4001-89
AUDIO SYSTEM CIRCUIT OPERATION	4001-90
CHARGING SYSTEM	4001-95
POWER MIRROR SYSTEM	4001-99
POWER SEAT SYSTEM	4001-107
STARTING SYSTEM	4001-112
WIPER / WASHER SYSTEM	4001-121
BATTERY SERVICING AND TESTING	SECTION 4002 (Book 1 - 87525655)
SAFETY RULES	4002-3
SPECIFICATIONS	4002-4
ACCESS TO BATTERIES	4002-5
280 and 330 Tractors	4002-5
380, 430, 480 and 530 Tractors	4002-6
REMOVAL AND INSTALLATION OF BATTERIES	4002-7
BATTERY MAINTENANCE	4002-7
Electrolyte Level	4002-7
Inspecting And Cleaning A Battery	4002-7
Battery Condition Check	4002-8
Specific Gravity Check	4002-8
Procedure	4002-10
Three Minute Charge Test	4002-11
Testing Battery Cells With Cadmium Probes	4002-12
Battery Leakage Test	4002-14
Battery Fast Charging	4002-14
Battery Charging	4002-15
Activating Charges Batteries.....	4003-15
STEERING HAND PUMP & PRIORITY/CONTROL VALVE REMOVE/INSTALL -	
STX380/430/480/530 TRACTORS.....	SECTION 5001 (Book 2 - 87525656)
SPECIAL TOOLS	5001-2
SPECIAL TORQUE VALUES	5001-2
STEERING HAND PUMP REMOVAL	5001-3
STEERING TUBE LINES REMOVAL	5001-5
STEERING PRIORITY/CONTROL VALVE REMOVAL	5001-7
STEERING PRIORITY/CONTROL VALVE INSTALLATION	5001-8
STEERING TUBE LINES INSTALLATION	5001-9
STEERING HAND PUMP INSTALLATION	5001-11
STEERING SYSTEM - HOW IT WORKS.....	SECTION 5002 (Book 2A - 87618150)
ELECTROHYDRAULIC STEERING SYSTEM (EHPS)	5002-3
PRIORITY / STEERING CONTROL VALVE (EHPS)	5002-4
EHPS STEERING SYSTEM	5002-6
Engine Running Steering in Neutral Position	5002-7
Engine Running, Turning Left	5002-9
EHPS Steering System	5002-11
280 AND 330 MODELS STEERING LAYOUT	5002-12
380, 430, 480 AND 530 MODELS STEERING LAYOUT	5002-13

STX AND STEIGER SERIES TRACTORS MASTER TABLE OF CONTENTS

CENTER CONSOLE, STEERING COLUMN, PEDALS AND SWITCHES	SECTION 5003 (Book 2 - 87525656)
SPECIAL TOOLS	5003-3
SPECIAL TORQUE VALUES	5003-3
STEERING WHEEL REMOVAL	5003-4
TRANSMISSION SHIFT LEVER REMOVAL	5003-4
CENTER CONSOLE COVER REMOVAL	5003-7
CENTER CONSOLE COVER INSTALLATION	5003-9
TRANSMISSION SHIFT INSTALLATION	5003-11
STEERING WHEEL INSTALLATION	5003-14
STEERING COLUMN REMOVAL	5003-15
STEERING COLUMN INSTALLATION	5003-17
TILT STEERING COLUMN RELEASE CABLE REMOVAL	5003-20
TILT STEERING COLUMN RELEASE CABLE INSTALLATION	5003-21
CLUTCH AND BRAKE PEDAL ASSEMBLY REMOVAL	5003-23
CLUTCH AND BRAKE PEDAL ASSEMBLY INSTALLATION	5003-25
DECELERATION SWITCH REMOVAL	5003-28
DECELERATION SWITCH INSTALLATION	5003-29
CLUTCH POTENTIOMETER REMOVAL	5003-30
CLUTCH POTENTIOMETER INSTALLATION	5003-31
CLUTCH POTENTIOMETER CALIBRATION	5003-32
CLUTCH POTENTIOMETER CALIBRATION	5003-34
DIFFERENTIAL LOCK BRAKE SWITCH REMOVAL	5003-37
DIFFERENTIAL LOCK BRAKE SWITCH INSTALLATION	5003-37
HVAC PLENUM ACTUATOR MOTOR AND LOUVER REMOVAL	5003-39
HVAC PLENUM ACTUATOR MOTOR AND LOUVER INSTALLATION	5003-42
TRANSMISSION SHIFT LEVER DISASSEMBLY	5003-45
TRANSMISSION SHIFT LEVER ASSEMBLY	5003-52
STEERING COLUMN REPAIR	SECTION 5004 (Book 2 - 87525656)
TILT STEERING COLUMN DISASSEMBLY	5004-3
TILT STEERING COLUMN ASSEMBLY	5004-5
ACCUSTEER® STEERING SYSTEM - HOW IT WORKS	SECTION 5005 (Book 2A - 87618150)
SYSTEM COMPONENTS	5005-2
ELECTROHYDRAULIC POWER STEERING SYSTEM (EHPS) WITH ACCUSTEER®	5005-3
PRIORITY / STEERING CONTROL VALVE (EHPS)	5005-5
NEUTRAL POSITION - NO STEERING	5005-6
FOLDOUT - NEUTRAL POSITION - NO STEERING	5005-7
STEERING LEFT IN COMBINATION MODE (LESS THAN 5 DEGREES)	5005-8
FOLDOUT - STEERING LEFT, COMBINATION MODE (Less than 5 Degrees)	5005-9
STEERING LEFT IN COMBINATION MODE (MORE THAN 10 DEGREES)	5005-10
FOLDOUT - STEERING LEFT, COMBINATION MODE (More than 10 Degrees)	5005-11
EMERGENCY STEERING	5005-12
ACCUSTEER®, ARTICULATED REAR STEERING LAYOUT	5005-13
ACCUSTEER®, FRONT STEERING LAYOUT	5005-14
STEERING HAND PUMP & PRIORITY/CONTROL VALVE REMOVE/INSTALL - STX280/330	SECTION 5011 (Book 2 - 87525656)
SPECIAL TOOLS	5011-2
SPECIAL TORQUE VALUES	5011-2
STEERING HAND PUMP REMOVAL	5011-3
STEERING TUBE LINES REMOVAL	5011-5
STEERING PRIORITY/CONTROL VALVE REMOVAL	5011-7
STEERING PRIORITY/CONTROL VALVE INSTALLATION	5011-10
STEERING TUBE LINES INSTALLATION	5011-13
STEERING HAND PUMP INSTALLATION	5011-15

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com