

SRI30 SR200
SRI50 SR220
SRI75 SR250
SVI85 SV250
SV300

Alpha Series Skid Steer Loader

TR270
TR320
TV380

Alpha Series Compact Track Loader

SERVICE MANUAL

Part number 84423866

1st edition English

July 2011



Contents

INTRODUCTION

HYDRAULIC, PNEUMATIC, ELECTRICAL, ELECTRONIC SYSTEMS A

PRIMARY HYDRAULIC POWER SYSTEM.....	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM.....	A.12.A
HYDRAULIC COMMAND SYSTEM.....	A.14.A
HIGH-FLOW HYDRAULIC POWER SYSTEM.....	A.16.A
ELECTRICAL POWER SYSTEM	A.30.A
LIGHTING SYSTEM.....	A.40.A
ELECTRONIC SYSTEM	A.50.A
FAULT CODES.....	A.50.A

ENGINE AND PTO IN B

ENGINE	B.10.A
FUEL AND INJECTION SYSTEM.....	B.20.A
AIR INTAKE SYSTEM.....	B.30.A
ENGINE COOLANT SYSTEM	B.50.A
STARTING SYSTEM	B.80.A

TRANSMISSION, DRIVE AND PTO OUT C

TRANSMISSION Hydrostatic.....	C.20.F
-------------------------------	--------

AXLES, BRAKES AND STEERING..... D

Final drive	D.15.A
Final drive Hydraulic drive	D.15.C
STEERING Mechanical	D.20.B
PARKING BRAKE Hydraulic	D.32.C
WHEELS AND TRACKS Tracks	D.50.B
WHEELS AND TRACKS Wheels.....	D.50.C

FRAME AND CAB E

FRAME Primary frame	E.10.B
SHIELD.....	E.20.A

USER CONTROLS AND SEAT	E.32.A
USER CONTROLS AND SEAT Operator seat	E.32.C
USER PLATFORM	E.34.A
ENVIRONMENT CONTROL Heating system	E.40.B
ENVIRONMENT CONTROL Air-conditioning system	E.40.C
SAFETY SECURITY ACCESSORIES Safety	E.50.B
FRAME POSITIONING	F
STABILISING Ballasting	F.20.B
TOOL POSITIONING	G
LIFTING	G.10.A
TILTING	G.20.A
LEVELLING	G.30.A
SECONDARY FUNCTIONS Hydraulic	G.90.C
HITCH AND WORKING TOOL	H
BOOM Lift	H.20.B
ARM TOOL ATTACHMENT Tilt	H.30.C
SINGLE ARM Lift	H.40.B
SINGLE ARM TOOL ATTACHMENT Tilt	H.50.C
EXCAVATING AND LANDSCAPING	J
DIGGING Non-articulated digging tools	J.20.B
CARRYING Unarticulated tools	J.50.B
COUPLING Mechanical coupling	J.80.B
COUPLING Hydraulic coupling	J.80.C



INTRODUCTION

Contents

INTRODUCTION

Foreword - Ecology and the environment	3
Safety rules	4
<small>S-Series, T-Series</small>	
Safety rules - Personal safety	5
Safety rules	6
Basic instructions - How To Use and Navigate Through This Manual	7
Basic instructions - Important notice regarding equipment servicing	12
Basic instructions - Shop and Assembly	13
Torque - Minimum tightening torques for normal assembly	15
<small>S-Series, T-Series</small>	
Torque - Standard torque data for hydraulics	20
General specification - Biodiesel Fuels	22
General specification - General Welding	23

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com