

**SRI30**  
**SRI60**  
**Tier 4B (final)**  
**Alpha Series Skid Steer Loader**

*SRI30 PIN NDM442151 and above*  
*SRI60 PIN NDM477801 and above*

**SERVICE MANUAL**

**Part number 47712039**

English

April 2014

*Replaces part number 47465734*

**CASE**  
CONSTRUCTION

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
SR130 TIER 4 [NDM442151 - ]	North America	N844L-F-36SL
SR160 TIER 4 [NDM477801 - ]	North America	N844LT-F-45SL

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.414] Fan and drive .....	10.2
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment .....	10.3
Front axle system .....	25
[25.450] Chain drive system.....	25.1
Rear axle system.....	27
[27.650] Chain drive system .....	27.1
Hydrostatic drive.....	29
[29.202] Hydrostatic transmission .....	29.1
[29.200] Mechanical control .....	29.2
[29.218] Pump and motor components.....	29.3
Brakes and controls .....	33
[33.110] Parking brake or parking lock .....	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.128] Auxiliary hydraulic function control .....	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
[35.350] Safety and main relief valves .....	35.5
[35.359] Main control valve.....	35.6
[35.701] Front loader arm hydraulic system .....	35.7
[35.723] Front loader bucket hydraulic system .....	35.8
[35.724] Front loader hydraulic system control.....	35.9

[35.734] Tool quick coupler hydraulic system .....	35.10
<b>Frames and ballasting .....</b>	<b>39</b>
[39.140] Ballasts and supports .....	39.1
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
[50.200] Air conditioning.....	50.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system.....	55.2
[55.011] Fuel tank system .....	55.3
[55.012] Engine cooling system .....	55.4
[55.014] Engine intake and exhaust system.....	55.5
[55.015] Engine control system.....	55.6
[55.019] Hydrostatic drive control system .....	55.7
[55.031] Parking brake electrical system .....	55.8
[55.036] Hydraulic system control .....	55.9
[55.100] Harnesses and connectors.....	55.10
[55.302] Battery.....	55.11
[55.404] External lighting .....	55.12
[55.512] Cab controls.....	55.13
[55.525] Cab engine controls.....	55.14
[55.640] Electronic modules.....	55.15
[55.DTC] FAULT CODES.....	55.16
<b>Front loader and bucket.....</b>	<b>82</b>
[82.100] Arm.....	82.1

[82.300] Bucket .....	82.2
Platform, cab, bodywork, and decals .....	90
[90.154] Cab doors and hatches .....	90.1

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)