

**SR210 / SR240 / SV280**  
**Tier 4B (final)**

Alpha Series Skid Steer Loader

*PIN NGM418237 and above; PIN NHM435463 and above*

**TR270 / TR310 / TV370**  
**Tier 4B (final)**

Alpha Series Compact Track Loader

*PIN NGM418237 and above; PIN NHM435463 and above*

**SERVICE MANUAL**

**Part number 48068130**

1<sup>st</sup> edition English

January 2018



# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.400] Engine cooling system .....	10.3
[10.414] Fan and drive .....	10.4
[10.304] Engine lubrication system.....	10.5
Power coupling.....	19
[19.121] Pump-drive assembly .....	19.1
Front axle system .....	25
[25.450] Chain drive system.....	25.1
Rear axle system.....	27
[27.650] Chain drive system.....	27.1
Hydrostatic drive.....	29
[29.200] Mechanical control .....	29.1
[29.218] Pump and motor components.....	29.2
[29.202] Hydrostatic transmission .....	29.3
Brakes and controls .....	33
[33.110] Parking brake or parking lock .....	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.359] Main control valve .....	35.4
[35.525] Auxiliary hydraulic valves and lines .....	35.5
[35.600] High flow hydraulics.....	35.6

[35.724] Front loader hydraulic system control .....	35.7
[35.701] Front loader arm hydraulic system .....	35.8
[35.723] Front loader bucket hydraulic system .....	35.9
[35.734] Tool quick coupler hydraulic system .....	35.10
<b>Frames and ballasting .....</b>	<b>39</b>
[39.140] Ballasts and supports .....	39.1
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels .....	44.1
[44.520] Rear wheels .....	44.2
<b>Tracks and track suspension .....</b>	<b>48</b>
[48.130] Track frame and driving wheels .....	48.1
[48.100] Tracks .....	48.2
[48.134] Track tension units .....	48.3
[48.138] Track rollers .....	48.4
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.200] Air conditioning .....	50.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system .....	55.2
[55.011] Fuel tank system .....	55.3
[55.012] Engine cooling system .....	55.4
[55.019] Hydrostatic drive control system .....	55.5
[55.036] Hydraulic system control .....	55.6
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system .....	55.7
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls .....	55.8
[55.100] Harnesses and connectors .....	55.9
[55.201] Engine starting system .....	55.10

[55.202] Cold start aid .....	55.11
[55.301] Alternator.....	55.12
[55.302] Battery.....	55.13
[55.404] External lighting .....	55.14
[55.408] Warning indicators, alarms, and instruments .....	55.15
[55.512] Cab controls.....	55.16
[55.518] Wiper and washer system.....	55.17
[55.525] Cab engine controls.....	55.18
[55.640] Electronic modules .....	55.19
[55.991] Telematics .....	55.20
[55.DTC] FAULT CODES.....	55.21
<b>Front loader and bucket.....</b>	<b>82</b>
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.160] Cab interior trim and panels.....	90.2
[90.154] Cab doors and hatches .....	90.3
[90.102] Engine shields, hood latches, and trims .....	90.4
[90.120] Mechanically-adjusted operator seat.....	90.5
[90.124] Pneumatically-adjusted operator seat.....	90.6



## **INTRODUCTION**

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)