



W8B, W9B, W10B LOADERS

TABLE OF CONTENTS

SERIES/SECTION	SECTION NO.	FORM NO.
10 SERIES - GENERAL		
Specifications for Case Engines (various engines listed)	CC	9-74562
20 SERIES - ENGINE		
Cylinder Heads, Valve Systems, Rocker Arms, Decompressor (Diesel Engine)	K	9-76972
Cylinder Heads, Valve Systems, Rocker Arms (Spark Ignition Engine)	L	9-76962
Assemblies in Engine Block	M	9-75222
Front Mounted Oil Pump	M, Supp't	9-78012
Water Pump	3M	9-76741
Spark Ignition Governor	4M	9-76751
Governor Linkage	None	9-75711
30 SERIES - FUEL SYSTEM		
Fuel Injectors	I	9-75421
62 Series Gasoline Carburetor	NN	9-74561
40 SERIES - HYDRAULIC		
Relief Valve Pressure Settings	None	9-74562
Hydraulic Cylinders	A	9-76621
25X Series Gear Type Hydraulic Pump	3B	9-74561
VDP-4 and VY-5 Hydraulic Control Valve	D	9-74562
VDP-14 Hydraulic Control Valve	DD	9-74561
Model 32 Backhoe	3D	9-75091
Models 33 and 34 Backhoe	3D	9-72821
Loader Hydraulic System, After S/N 9807379	4D	9-99795
50 SERIES - STEERING		
VTM Vane Type Power Steering Pump	PP	9-74561
Combined Unit Power Steering Cylinder and Valve, Steering Linkage, Steering Gear Box	Q	9-74563
60 SERIES - POWER TRAIN		
Single Reduction Differentials, Universal Joints, Drive Shafts	T	9-74561
Planetaries and Axles	U	9-74561
C-270 Series Torque Converter	X	9-74563
2000 Series Transmission	Y	9-74563
70 SERIES - BRAKES		
H Series Brake Shoes, Drums, Wheel Cylinders	W	9-75151
"01" Series Brake Cylinder, Brake Shoes, Drums	W	9-74562
3W Hydrovac Brake System	3W	9-74563

SERIES/SECTION

SECTION NO.

FORM NO.

80	SERIES - ELECTRICAL		
	W8B, W9B, W10B, Gasoline Electrical System,		
	Without Alternator	None	9-76671
	W8B, W9B, W10B Gasoline Electrical System		
	With Alternator, S/N 9800446 and After	None	9-76682
	Electrical System - Cranking Circuit, Charging		
	Circuit (24 Volt System).	F	9-75202
	Electrical System - Alternator Charging		
	Circuit (12 Volt System).	FF	9-76331
	Electrical System - Charging Circuit, Cranking		
	Circuit, Ignition System	3F	9-76721
	Alternator and Wiring Diagrams (With		
	Motorola Alternator)	4F	9-99785
90	SERIES - MOUNTED EQUIPMENT		
	Refer to Sections 3D and 4D in 40 Series.		

SECTION

K

SERVICING THE



CYLINDER HEADS



VALVE SYSTEMS



ROCKER ARMS



DECOMPRESSOR

ON

CASE POWRCEL DIESEL ENGINES

TABLE OF CONTENTS

CYLINDER HEAD AND COMPONENTS - Disassembly and Installation	K-2 thru K-5
DECOMPRESSOR (If So Equipped) - Disassembly and Assembly	K-6
ROCKER ARMS AND SHAFTS - Disassembly, Inspection and Assembly	K-8
CYLINDER HEAD AND VALVES - Disassembly and Assembly	K-10
EXHAUST VALVE ROTATORS	K-10
VALVES, GUIDES AND SPRINGS - Inspection	K-12
INTAKE AND EXHAUST VALVES - Refacing	K-14
INTAKE AND EXHAUST VALVE SEATS - Grinding	K-15
LOCATING TOP DEAD CENTER AND TAPPET ADJUSTMENT	K-16

CYLINDER HEAD AND COMPONENTS

(Refer to Figure K-1)

Removal

Steam clean the engine completely before doing any disassembly or service work.

Drain cooling system. Remove the intake, exhaust and water manifolds. Remove the rocker arm covers. Disconnect and remove the decompressor if so equipped, Page K-6.

Remove the rocker arm assemblies and tag them for proper installation. (Refer to Page K-8.

Disconnect the high pressure fuel lines to

the injectors and cap them. Disconnect the fuel leak-off tubes between each cylinder head and cap them.

Remove the push rods and tag or store them in a holder or rack so they can be installed in their same locations.

Remove the cylinder head bolts or nuts and lift the heads off the engine. Remove the head gaskets and discard them.

Inspection and Installation

Remove all carbon and clean all parts before installation.

STANDARD HEAD GASKETS

If you are installing the standard gasket, install the new gasket with new rubber seals. The gasket must be installed with either the copper side up or the side with the case part number up. Continued on Page K-5.

FIRE RING HEAD GASKETS

If you are installing the fire ring head gasket, inset B, cylinder sleeve protrusion

must be checked to determine which fire ring to install. Only the standard fire ring is included in the valve grind gasket kit, however a thicker fire ring (.004") is available if the protrusion checks indicate a need for it. The thicker fire ring can be identified by a blue marking stripe.

Refer to Pages K-4 and K-5 for the procedure to follow when installing the fire ring cylinder head gasket.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com