



Service Repair Manual

Model

245 EXCAVATOR

Product: EXCAVATOR

Model: 245 EXCAVATOR 95V

Configuration: 245 EXCAVATOR 95V00471-UP (MACHINE) POWERED BY 3406 ENGINE

Disassembly and Assembly 26SI Series Alternator

Media Number -REN1252-01

Publication Date -01/10/1999

Date Updated -09/10/2001

i01167081

Alternator - Disassemble

SMCS - 1405-015

Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	6V-7070	Digital Multimeter	1
B		Variable Power Supply	1

Start By:

- Remove the alternator. Refer to Disassembly and Assembly, "Alternator - Remove" for the machine that is being serviced.

Note: Cleanliness is an important factor. Before the disassembly procedure, the exterior of the component should be thoroughly cleaned. This will help to prevent dirt from entering the internal mechanism.

- Remove the pulley nut, the washer, the pulley, and the fan.
-



Illustration 1

g00627790

2. Remove 4 screws (1). Remove plate (2) .



Illustration 2

g00627792

3. Remove 7 screws (3). Remove cover (4) .



Illustration 3

g00627794

4. Remove gasket (5) .



Illustration 4

g00627796

5. Remove 2 insulated screws (6). Remove the 3 leads.

Note: The regulator and the mounting plate are coated with dielectric grease. If the grease is removed, reapply the grease.

6. Remove nut (7) .



Illustration 5

g00627804

7. Remove grounded mounting screw (8) .
 8. Remove regulator (9) .
-



Illustration 6

g00627808

9. Remove mounting plate (10). The mounting plate may be stuck to the regulator.

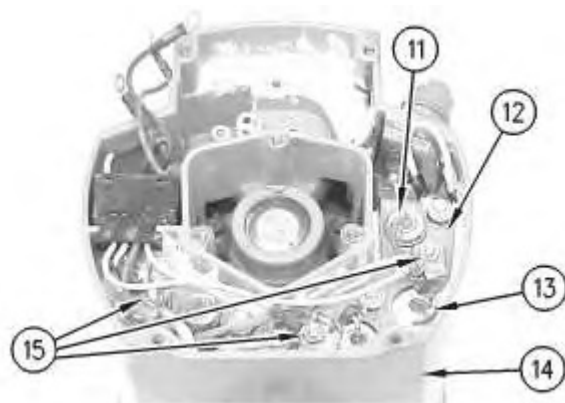


Illustration 7

g00627810

Note: The 3 output diodes (11) are located in heat sink (12). These diodes are identical in polarity. Diode (11) has red insulation on the wire. The 3 ground diodes (13) are located in housing (14). These diodes are identical in polarity. Diode (13) has black insulation on the wire.

10. Remove 3 nuts (15). Disconnect 3 stator phase leads. Disconnect 3 phase leads. Disconnect 6 diode leads.

Table 2

Alternator Ground	Current Flow of the Output Diodes	Current Flow of the Ground Diodes
Negative	Lead to the Heat Sink	Housing to the Lead
	Red Wire	Black Wire

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com