# **CATERPILLAR®**

## Service Repair Manual

### **Models**

303.5E2CR Mini Hydraulic Excavator

Model: 303.5E2 CR MINI HYD EXCAVATOR CR6

Configuration: 303.5E2CR Mini Hydraulic Excavator CR600001-UP (MACHINE) POWERED BY C1.7 Engine

#### **Disassembly and Assembly**

## C1.7, C1.8 and C2.4 Tier 4 Interim and EU Stage 3A Engines for Caterpillar Built Machines

Media Number -UENR0128-11

Publication Date -01/08/2015

Date Updated -09/06/2016

i05243388

#### **Governor and Camshaft - Install**

**SMCS** - 1264-012; 1265-012; 1716-012

#### **Installation Procedure**

#### **NOTICE**

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

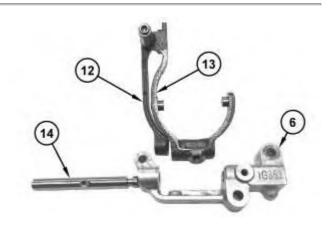


Illustration 1 g02729574

1. Position brackets (13) and (12) in line with bracket (6) and install shaft (14).



Illustration 2 g02729844

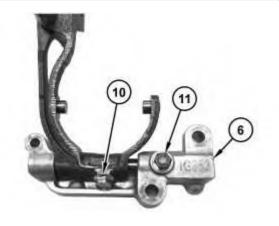


Illustration 3 g02729573

- 2. Install bolt (11) into bracket (6). Install the washer and bolt (10).
- 3. Install camshaft (4).
- 4. Lift camshaft (4) and install bracket (6) as a unit.

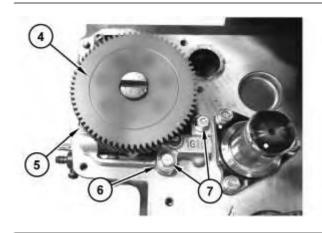


Illustration 4 g02729570

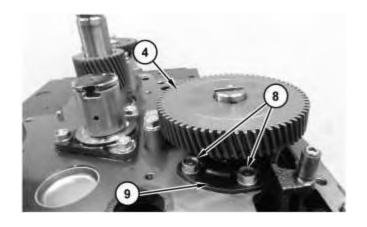


Illustration 5 g02729685

- 5. Lift camshaft (4). Position bracket (6) and bolt (5).
- 6. Install bracket (9) and bolts (8).
- 7. Install bolts (7) and tighten bolt (5) to secure camshaft (4).

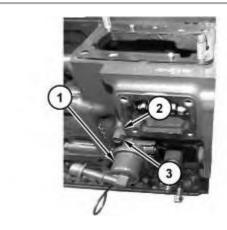


Illustration 6 g02729569

8. Install a new gasket (2) and position supply pump (1). Install bolts (2).

#### **End By:**

- a. Install the fuel injection pump.
- b. Install the idler gear.

Model: 303.5E2 CR MINI HYD EXCAVATOR CR6

Configuration: 303.5E2CR Mini Hydraulic Excavator CR600001-UP (MACHINE) POWERED BY C1.7 Engine

#### **Disassembly and Assembly**

## C1.7, C1.8 and C2.4 Tier 4 Interim and EU Stage 3A Engines for Caterpillar Built Machines

Media Number -UENR0128-11

Publication Date -01/08/2015

Date Updated -09/06/2016

i05243381

#### **Governor and Camshaft - Disassemble**

**SMCS** - 1264-015; 1265-015; 1716-015

### **Disassembly Procedure**

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	8H-0663	Bearing Puller	1

#### **Start By:**

a. Remove governor and camshaft.

#### **NOTICE**

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com