



Service Repair Manual

Models

304E Mini Hydraulic Excavator

Product: MINI HYD EXCAVATOR
Model: 304E MINI HYD EXCAVATOR TSR
Configuration: 304E Mini Hydraulic Excavator TSR00001-UP (MACHINE)

Disassembly and Assembly 303E CR, 303.5E, 304E, 305.5E and 305E Mini Hydraulic Excavators Machine Systems

Media Number -UENR0148-04

Publication Date -01/10/2016

Date Updated -25/10/2016

i04777975

Evaporator Coil - Remove and Install

SMCS - 7343-010

Removal Procedure

Start By:

- a. Remove the heating and air conditioning unit.



Illustration 1

g01226046

1. Remove screws (1).
-

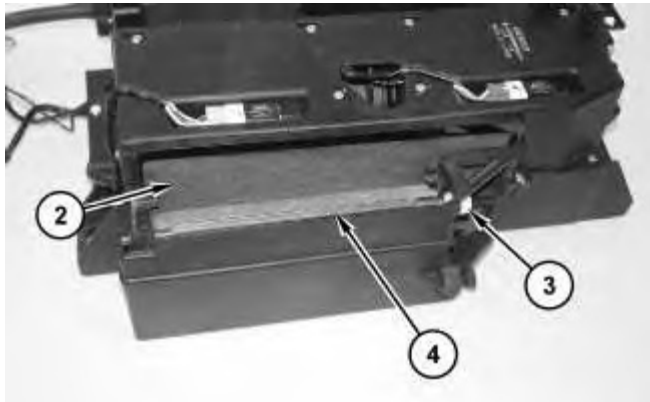


Illustration 2

g01226042

2. Remove cab air filter (2). Remove cap (3) and louver (4).



Illustration 3

g01226033

3. Disconnect harness assemblies (5) and (6).

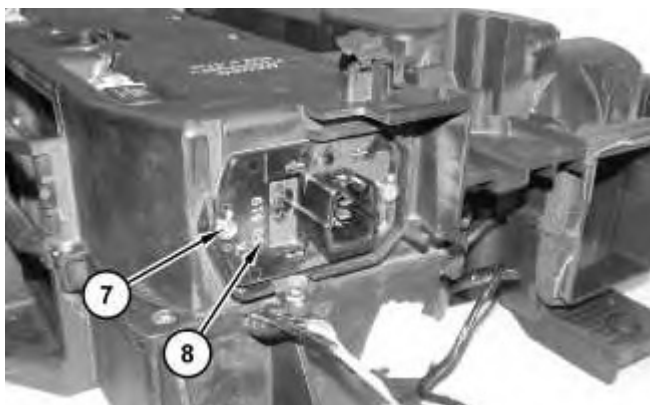


Illustration 4

g01225163

4. Remove screws (7) and switch assembly (8).

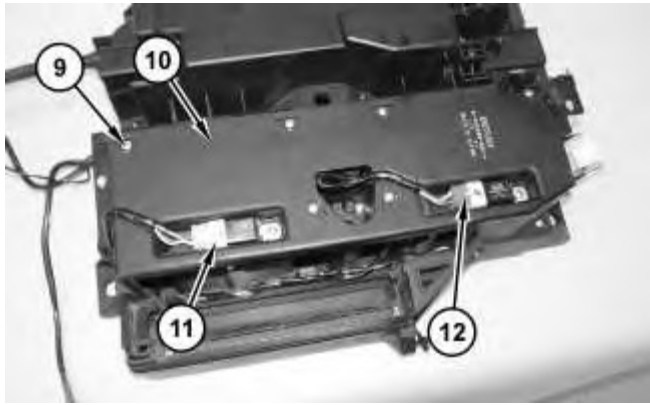


Illustration 5

g01226099

5. Disconnect relay assemblies (11) and (12). Remove screws (9) and cover (10).

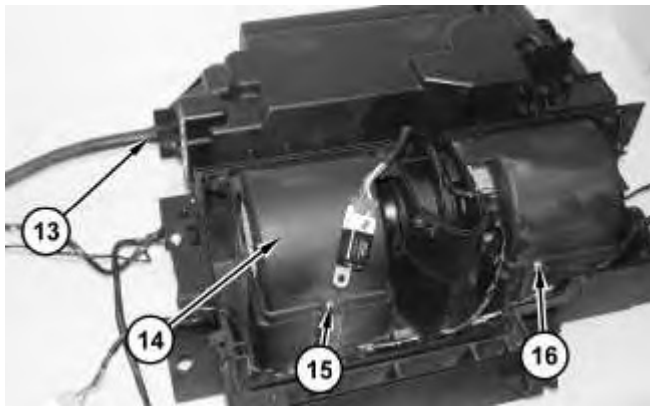


Illustration 6

g01226109

6. Remove hose (13). Remove screws (15) and (16). Remove cover (14).



Illustration 7

g01226380

7. Remove evaporator coil (17).

Installation Procedure



Illustration 8

g01226380

1. Install evaporator coil (17).

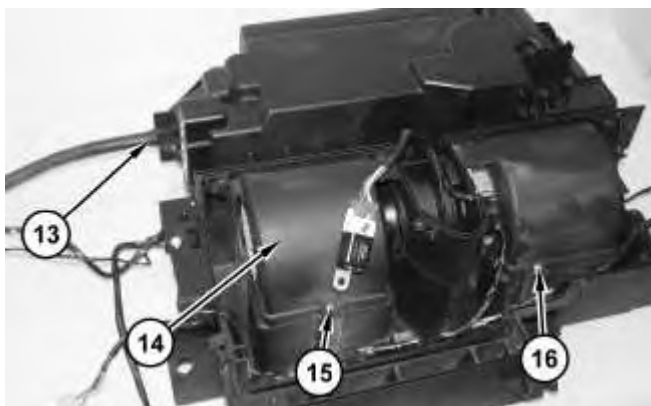


Illustration 9

g01226109

2. Install cover (14). Install screws (15) and (16). Install hose (13).

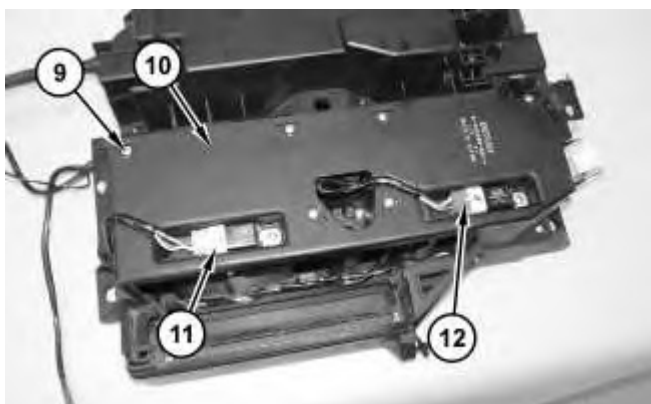


Illustration 10

g01226099

3. Install cover (10) and screws (9). Connect relay assemblies (11) and (12).
-

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com