



Service Repair Manual

Model

320C and 320C L 320CL Excavator

Product: EXCAVATOR

Model: 320C EXCAVATOR SBN

Configuration: 320C & 320C L Excavators SBN00001-UP (MACHINE) POWERED BY 3066 Engine

Disassembly and Assembly 3064 and 3066 Engines for Caterpillar Built Machines

Media Number -SEN5553-10

Publication Date -01/05/2012

Date Updated -15/05/2012

i01567208

Flywheel - Remove

SMCS - 1156-011

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	138-7575	Link Bracket	1
B		Forcing screws M16 X 2	2

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.



Illustration 1

g00605492

1. Remove twelve bolts (1) and washers from the adapter (2) .
2. Remove the adapter (2) from the flywheel housing.


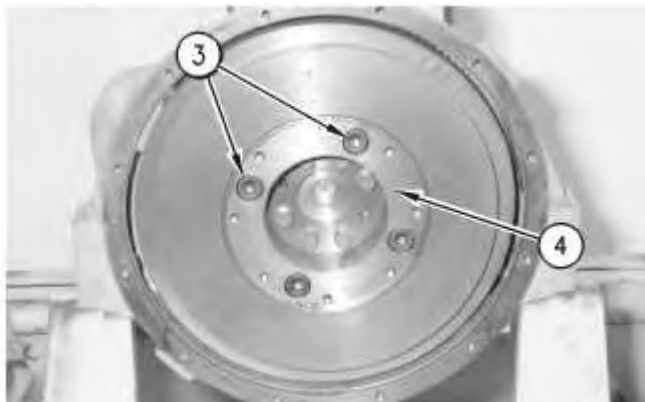


Illustration 2

g00605497

3. Remove four socket head bolts (3) from the inner ring (4) .
4. Remove the inner ring (4) from the flywheel.

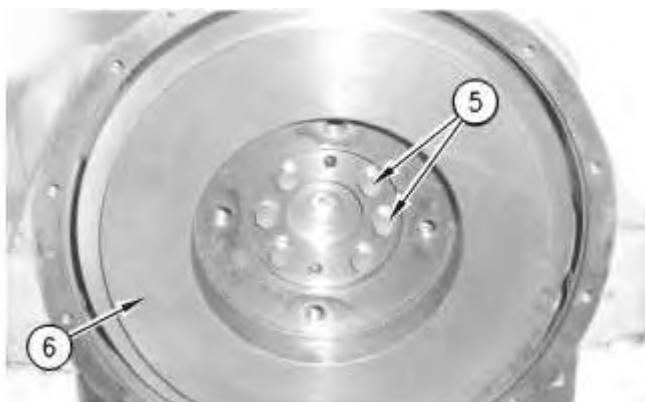

5. Remove six bolts (5) that secure flywheel (6) to the crankshaft. Check all bolts for stripped threads. Replace the bolts, if necessary.

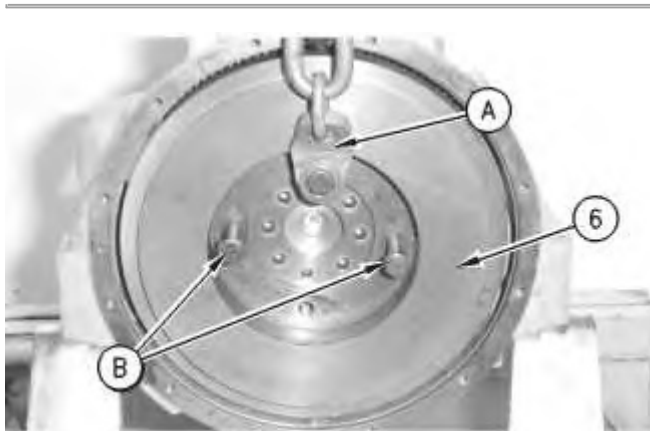


Illustration 4

g00605504

6. Install Tool (A), a strap, and a suitable lifting device onto the flywheel (6).
7. Use Tool (B) in order to remove the flywheel and ring gear out of the housing. The weight of the flywheel is 50 kg (110 lb).
8. Perform the following procedure in order to remove the flywheel ring gear.

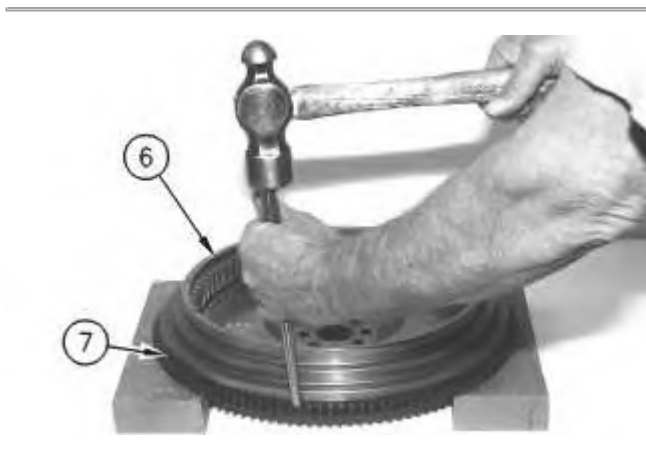


Illustration 5

g00613038

- a. Place the flywheel and ring gear assembly on a suitable support.

Note: Check the flywheel ring gear for the following conditions: cracks, damaged dowel holes, worn ring gear and damaged ring gear.

Note: Identify the orientation of the old ring gear on the flywheel for proper positioning, when the new ring gear is installed.



WARNING

Always wear protective gloves when handling parts that have been heated.

- b. Heat ring gear (7) uniformly.
- c. Remove the ring gear (7) by tapping the ring gear all the way around the flywheel (6) .
- d. Reposition the flywheel in order to remove the ring gear.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com