# **CATERPILLAR®**

# Service Repair Manual

## **Models**

322C FM EXCAVATOR

Model: 322C FM EXCAVATOR M2H

Configuration: 322C Forest Swing Machine M2H00001-UP (MACHINE) POWERED BY 3126B Engine

## **Disassembly and Assembly 3126B Engines for Caterpillar Built Machines**

Media Number -SENR9581-06 Publication Date -01/08/2018

Date Updated -17/08/2018

i01982085

## **Crankshaft Front Seal - Remove**

**SMCS - 1160-011** 

### **Removal Procedure**

Table 1

Required Tools				
Tool	Part Number	Part Description	Qty	
A	1U-7600	Slide Hammer Puller	1	
В	1U-8145	Drill Bit	1	

#### **Start By:**

a. Remove the vibration damper and the pulley. Refer to Disassembly and Assembly, "Vibration Damper and Pulley - Remove and Install".

#### **NOTICE**

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

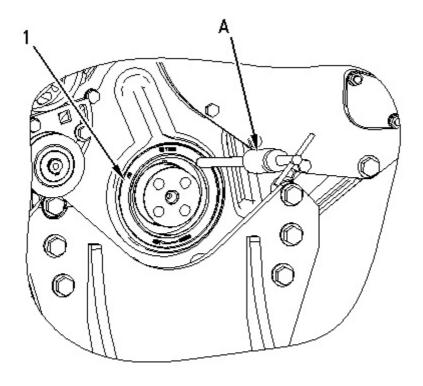


Illustration 1 g00989224

- 1. Use Tooling (B) and carefully drill three evenly spaced holes in crankshaft front seal (1).
- 2. Alternate between the drilled holes and use Tooling (A) to remove crankshaft front seal (1).

<u>Copyright 1993 - 2019 Caterpillar Inc.</u> All Rights Reserved.

Private Network For SIS Licensees.

Thu Oct 31 21:38:09 UTC+0800 2019

Model: 322C FM EXCAVATOR M2H

Configuration: 322C Forest Swing Machine M2H00001-UP (MACHINE) POWERED BY 3126B Engine

## **Disassembly and Assembly 3126B Engines for Caterpillar Built Machines**

Media Number -SENR9581-06 Pu

Publication Date -01/08/2018

Date Updated -17/08/2018

i01982092

## **Crankshaft Front Seal - Install**

**SMCS** - 1160-012

### **Installation Procedure**

#### Table 1

Required Tools				
Tool	Part Number	Part Description	Qty	
С	1U-7430	Front Seal Installer	1	

#### **NOTICE**

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

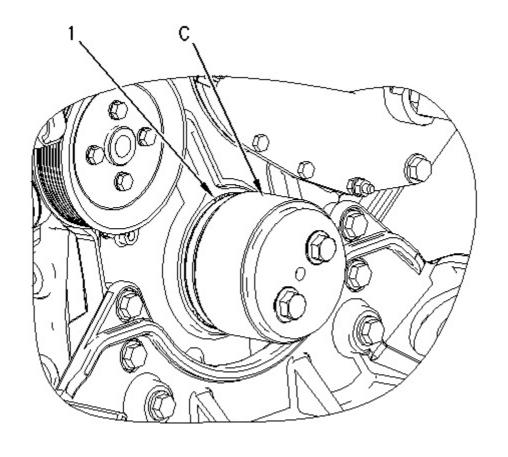


Illustration 1 g00989228

1. Use Tooling (C) to install crankshaft front seal (1).

**Note:** The crankshaft seal is designed to be installed dry.

### **End By:**

a. Install the vibration damper and the pulley. Refer to Disassembly and Assembly, "Vibration Damper and Pulley - Remove and Install".

Copyright 1993 - 2019 Caterpillar Inc. All Rights Reserved.

Private Network For SIS Licensees.

Thu Oct 31 21:39:05 UTC+0800 2019

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com