



Service Repair Manual

Models

430F2 Backhoe Loader

Product: BACKHOE LOADER

Model: 430F2 BACKHOE LOADER LYE

Configuration: 430F2 IT Center Pivot Backhoe Loader LYE00001-UP (MACHINE) POWERED BY C4.4 Engine

Disassembly and Assembly 3054C Engines for Caterpillar Built Machines

Media Number -SEN5069-18

Publication Date -01/05/2015

Date Updated -19/09/2018

i02299758

Camshaft Bearings - Remove and Install

SMCS - 1211-010

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	8S-2241	Camshaft Bearing Tool Group	1
	8H-0684	Ratchet Wrench	1

Start By:

- Remove the camshaft. Refer to Disassembly and Assembly, "Camshaft - Remove and Install".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

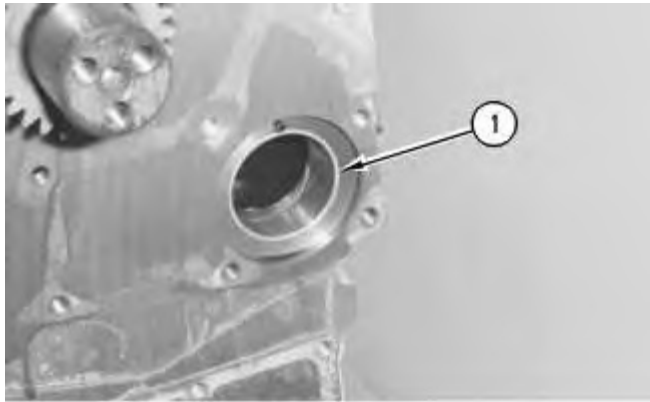


Illustration 1

g00546333

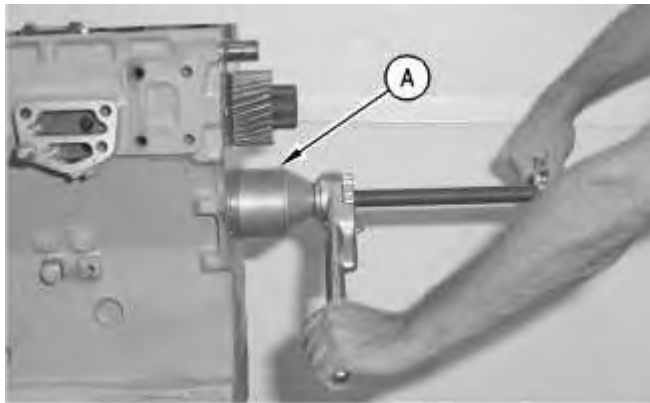


Illustration 2

g00546238

1. Use the Tooling (A) in order to remove the camshaft bearing (1) from the cylinder block.

Installation Procedure

Table 2

Required Tools			
Tool	Part Number	Part Description	Qty
A	8S-2241	Camshaft Bearing Tool Group	1
	8H-0684	Ratchet Wrench	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

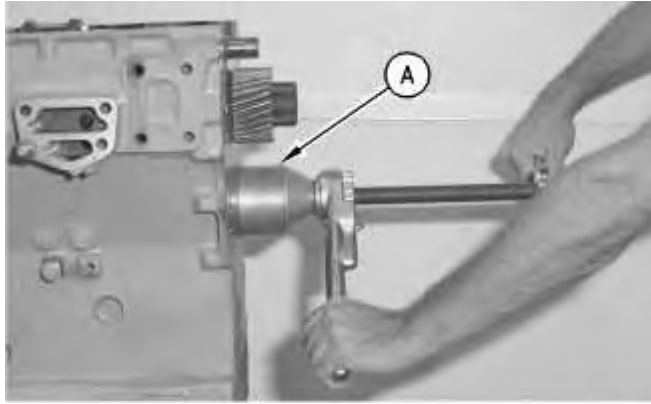


Illustration 3

g00546238

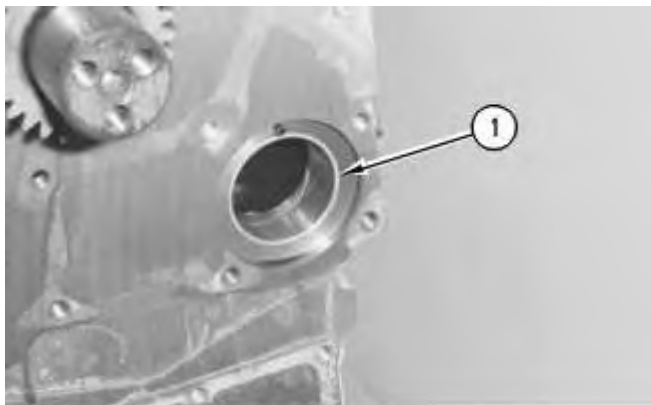


Illustration 4

g00546333

1. Use the Tooling (A) in order to install the camshaft bearing (1) into the bore in the cylinder block.

Note: Align the oil hole in camshaft bearing (1) with the oil hole in the bore in the cylinder block.

Note: The camshaft bearing must be inserted until the front edge of the bearing is flush with the face of the recess in the cylinder block.

End By:

- a. Install the camshaft. Refer to Disassembly and Assembly, "Camshaft - Remove and Install".

Product: BACKHOE LOADER

Model: 430F2 BACKHOE LOADER LYE

Configuration: 430F2 IT Center Pivot Backhoe Loader LYE00001-UP (MACHINE) POWERED BY C4.4 Engine

Disassembly and Assembly 3054C Engines for Caterpillar Built Machines

Media Number -SEN5069-18

Publication Date -01/05/2015

Date Updated -19/09/2018

i05003149

Engine Oil Pan - Remove and Install

SMCS - 1302-010

Removal Procedure

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat products.

Dispose of all fluids according to local regulations and mandates.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com