# **CATERPILLAR®**

# Service Repair Manual

# Model

432E BACKHOE LOADER

Model: 432E BACKHOE LOADER BXE

Configuration: 432E Backhoe Loader Parallel Lift Side Shift Boom BXE00001-UP (MACHINE) POWERED BY 3054C Engine

# **Disassembly and Assembly 3054C Engines for Caterpillar Built Machines**

Media Number -SENR5069-18

Publication Date -01/05/2015

Date Updated -19/09/2018

i02308847

## V-Belts - Remove and Install

**SMCS -** 1357-010

## **Removal Procedure**

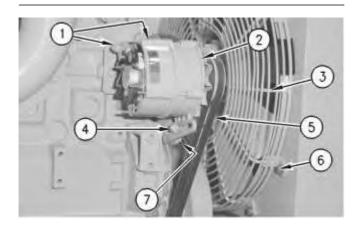


Illustration 1

g00932341

Typical example

- 1. If necessary, remove the setscrews (6) that fasten the fan guard (3) to the fan shroud. Remove the fan guard (3).
- 2. Loosen the nut (1), the clamping screw (4), and the setscrew (7). Slide the alternator (2) toward the engine.

**Note:** If the nut (1) is loose on the setscrew, remove the nut and discard the nut.

3. Maneuver the V-belts (5) around the fan and remove the V-belts.

**Note:** Never replace one V-belt. Always replace sets of V-belts, if equipped.

# **Installation Procedure**

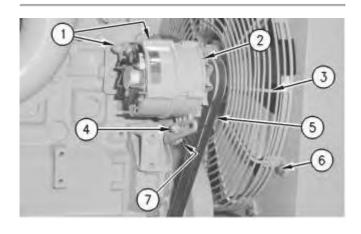


Illustration 2
Typical example

g00932341

- 1. Install the V-belts (5) behind the fan and on the correct pulleys.
- 2. Adjust the tension on the V-belts (5) by moving the alternator (2) away from the engine. After the correct belt tension is set, tighten the clamping screw (4) to a torque of 78 N·m (58 lb ft). Refer to Testing and Adjusting, "V-Belt Test" for the correct tension of the V-belts

**Note:** If the V-belt cannot be checked with a gauge, press on the V-belt at the center of the longest free length in order to check the deflection. Under a moderate amount of pressure, the V-belt should have a deflection of 10.0 mm (0.40 inch).

- 3. Tighten the setscrew (7) to a torque of 22 N·m (16 lb ft).
- 4. If necessary, install a new nut (1). Tighten the nut to a torque of 22 N·m (16 lb ft).
- 5. If the fan guard was previously removed, put the fan guard (3) in position on the fan shroud. Install the setscrews (6) that fasten the fan guard to the fan shroud.

Copyright 1993 - 2019 Caterpillar Inc.

All Rights Reserved.

Private Network For SIS Licensees.

Sat Sep 21 23:22:31 UTC+0800 2019

Model: 432E BACKHOE LOADER BXE

Configuration: 432E Backhoe Loader Parallel Lift Side Shift Boom BXE00001-UP (MACHINE) POWERED BY 3054C Engine

#### **Disassembly and Assembly** 3054C Engines for Caterpillar Built Machines

Media Number -SENR5069-18

Publication Date -01/05/2015

Date Updated -19/09/2018

i02308856

## Fan - Remove and Install

**SMCS - 1356-010** 

## **Removal Procedure**

#### **Start By:**

a. Remove the V-Belts. Refer to Disassembly and Assembly, "V-Belts - Remove and Install".

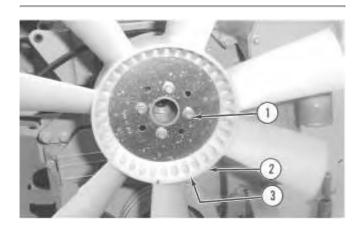


Illustration 1

g00542576

- 1. Remove the setscrews (1).
- 2. Remove the fan (2).
- 3. If equipped, remove the extension (3).



Illustration 2

g00907071

4. Remove the fan pulley (4).

# **Installation Procedure**

1. Inspect the condition of the fan pulley (4) and the fan (2). If necessary, replace the fan pulley or the fan.



Illustration 3

g00907071

2. Install the fan pulley (4).

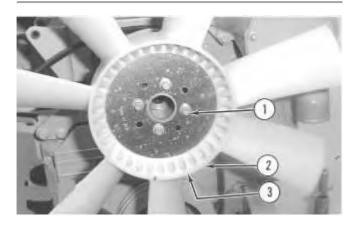


Illustration 4 g00542576

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com