# **CATERPILLAR®**

# Service Repair Manual

### **Models**

442D BACKHOE LOADER

Model: 442D BACKHOE LOADER BRY

Configuration: 442D Backhoe Loader BRY00001-00746 (MACHINE) POWERED BY 3054 Engine

#### **Disassembly and Assembly** 416D, 420D, 424D, 428D, 430D, 432D, 438D and 442D Backhoe Loaders Power

Media Number -RENR3578-12

Publication Date -01/04/2010

Date Updated -13/04/2010

i01493862

### **Drive and Steering Axle (Rear) - Install**

**SMCS - 3020-012-RE** 

#### **Installation Procedure**

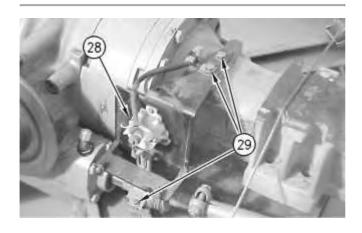


Illustration 1

1. Install the sensor and bracket (28). Install 3 bolts (29) and the washers.

g00775630

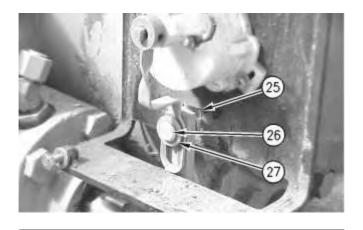


Illustration 2 g00775627

2. Install pin (26) and washer (27). Install clip (25).

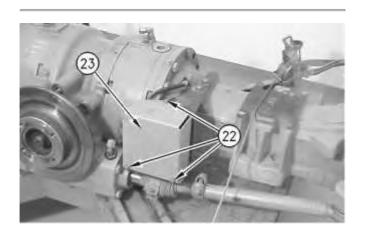


Illustration 3 g00775621

3. Install cover (23). Install 3 bolts (22).



Illustration 4 g00775620

4. Install bracket (21) for the parking brake.



Illustration 5 g00775608

5. Use a suitable lifting device in order to move the axle.

**Note:** The axle weighs approximately 500 kg (1102 lb).



Illustration 6 g00775593

6. Use a hydraulic jack (19) in order to position the axle under the machine in the proper place.



Illustration 7 g00775604

7. Install 4 nuts (20), the washers, and the plate. Repeat for the other side.

8. Move the hydraulic jack away from the rear axle.

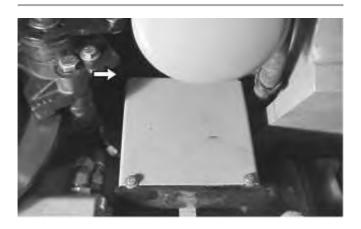


Illustration 8 g00775570

9. Connect the wire for the sensor for the rear steer.

**Note:** The wire is located in the area of the pointer.

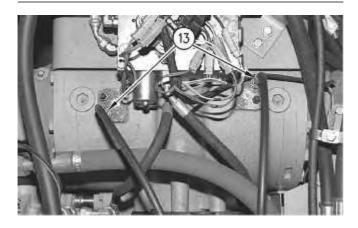


Illustration 9 g00775484

10. Install 2 hydraulic hoses (13) on the top of the axle.

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com