



# Service Repair Manual

## **Models**

# 442E BACKHOE LOADER

---

Product: BACKHOE LOADER

Model: 442E BACKHOE LOADER GKZ

Configuration: 442E Backhoe Loader Parallel Lift Side Shift Boom GKZ00001-UP (MACHINE) POWERED BY 3054C Engine

## Disassembly and Assembly

### 414E, 416E, 420E, 422E, 428E, 430E, 432E, 434E, 442E and 444E Backhoe Loaders Power Train

Media Number -REN6475-13

Publication Date -01/07/2017

Date Updated -13/07/2017

i02557467

## Transmission (Power Shift) - Disassemble

SMCS - 3030-015-PM; 3066-015

### Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1U-7502	Transmission Repair Stand	1
B	138-7575	Link Bracket	1
C	152-7085 <sup>(1)</sup>	Transmission Shaft Handler	1
	189-0409	Shackle As	1
D	1P-0074	Slide Hammer Puller Gp	1
E	8H-0663	Bearing Puller Assembly	1
	6V-3010	Puller Gp	1
	126-7177	Puller Leg	1
F	1U-6405	Three Jaw Puller	1
G	152-7055	Spring Compressor	1
H	2P-8312	Retaining Ring Pliers	1

<sup>(1)</sup> CE Compliant

**Start By:**

- a. Remove the transmission. Refer to Disassembly and Assembly, "Transmission (Power Shift) - Remove".

**Note:** The transmission will be disassembled in major components. The major components will then be disassembled.

**Note:** Cleanliness is an important factor. Before the disassembly procedure, the exterior of the component should be thoroughly cleaned. This will help to prevent dirt from entering the internal mechanism.

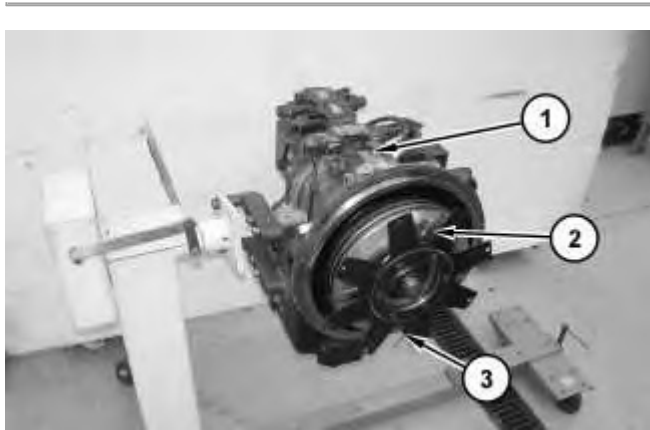


Illustration 1

g01244665

1. Use a suitable lifting device in order to mount transmission assembly (1) onto Tooling (A). The weight of transmission assembly (1) is approximately 255 kg (562 lb). Remove cable strap (3) and remove torque converter (2).


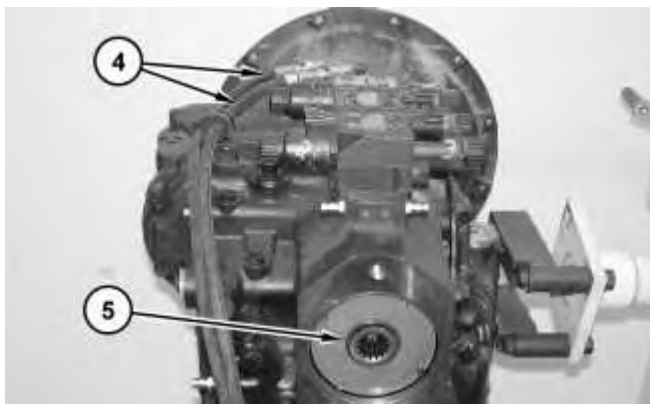


Illustration 2

g01244668

2. Remove hose assemblies (4) and coupler (5).
-

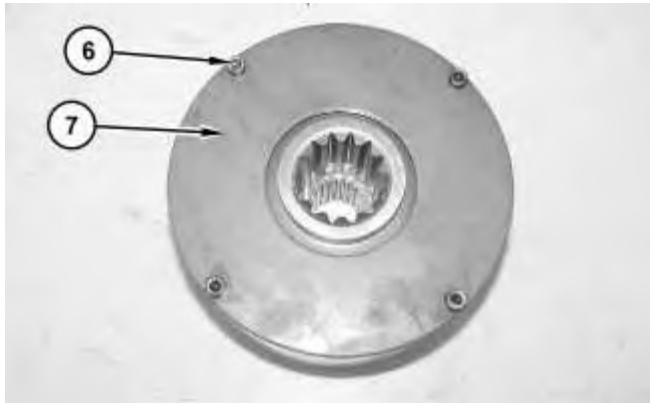

---

Illustration 3

g01244669




---

Illustration 4

g01244704

3. Remove bolts (6) and plate (7). Remove gear (8).

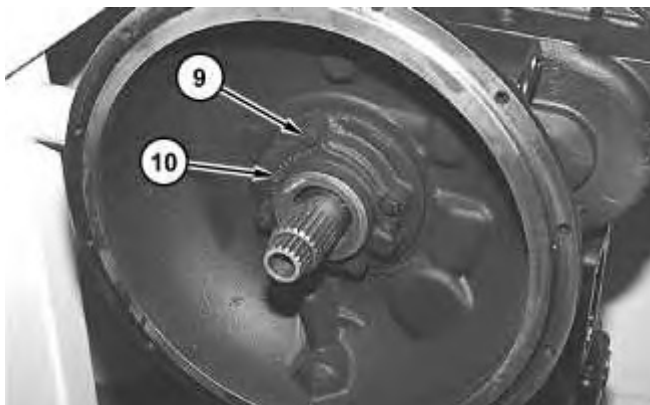

---

Illustration 5

g01245246

4. Remove bolts (9) and pump group (10).
-



Illustration 6

g01245252

5. Remove seal (11).

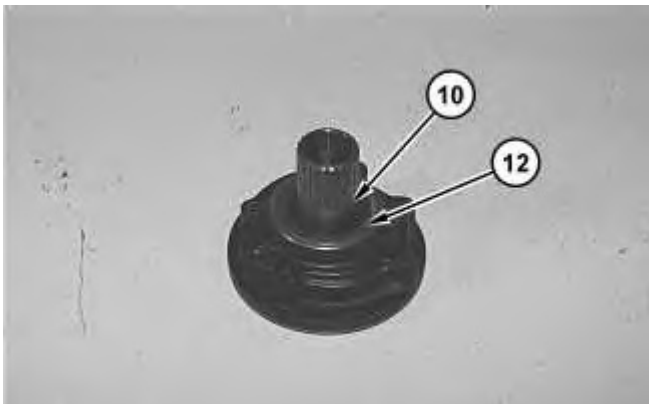


Illustration 7

g01245256

6. Remove lip seal (12) from pump group (10).

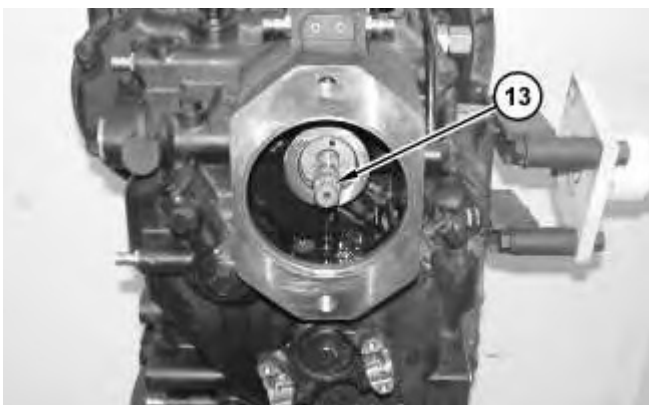


Illustration 8

g01244672

7. Slide shaft (13) from the transmission.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)