



Service Repair Manual

Models

962K Wheel Loader

Product: WHEEL LOADER

Model: 962K WHEEL LOADER T6A

Configuration: 962K Wheel Loader T6A00001-UP (MACHINE) POWERED BY C7.1 Engine

Disassembly and Assembly 950K and 962K Wheel Loaders Machine Systems

Media Number -KENR5805-00

Publication Date -01/10/2011

Date Updated -03/10/2011

i04551576

Piston Pump (Implement) - Assemble

SMCS - 5070-016-II; 5070-016; 5070-016-FD; 5084-016-QP; 5084-016

Assembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
B	136-1452	Retaining Ring Pliers As	1
C	-	Loctite 271	-
D	6V-2055	Grease	1



Illustration 1

g02722272

1. Install cover (58) and bolts (57) .

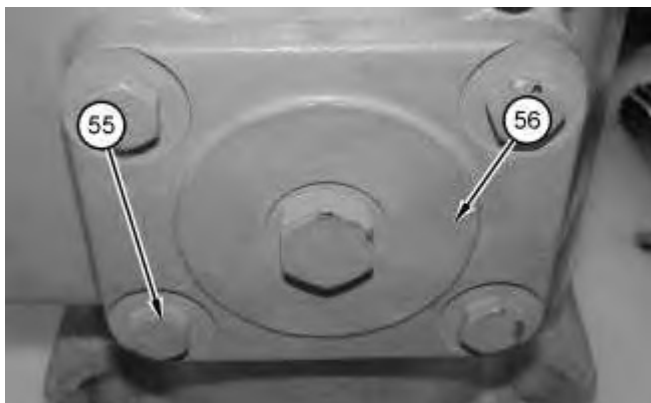


Illustration 2

g02722269

2. Install cover (56) and bolts (55) .


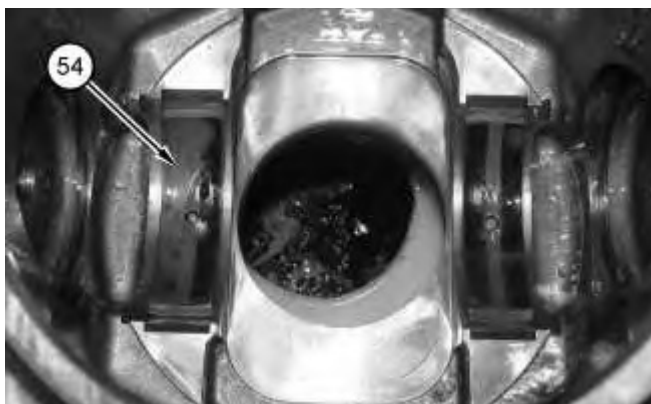


Illustration 3

g02722268

3. Install bearings (54) .

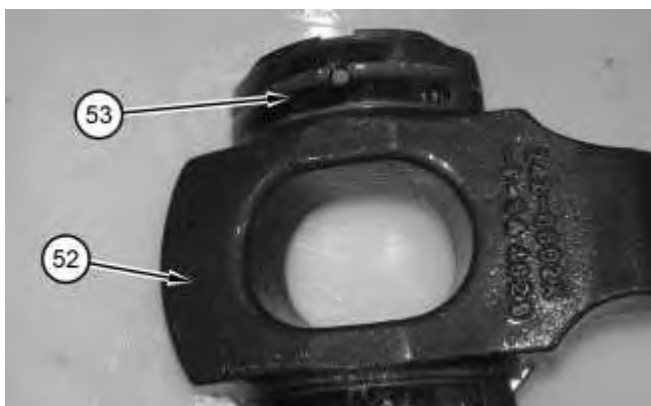

4. Install bearings (53) onto swashplate (52) .

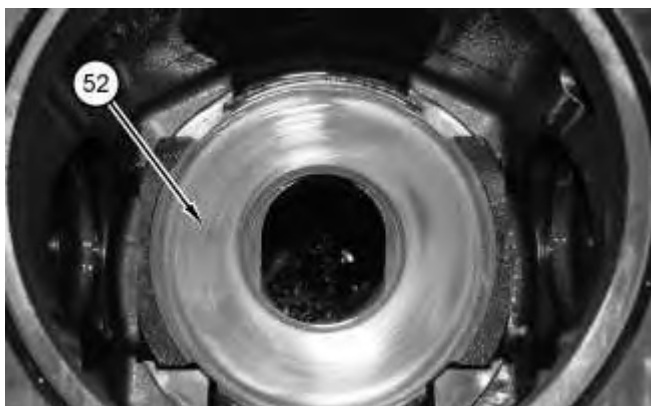


Illustration 5

g02722266

5. Install swashplate (52) .



Illustration 6

g02722265

6. Raise the temperature of bearing (51) .
 7. Install retaining ring (50) and bearing (51) onto shaft assembly (49) .
-

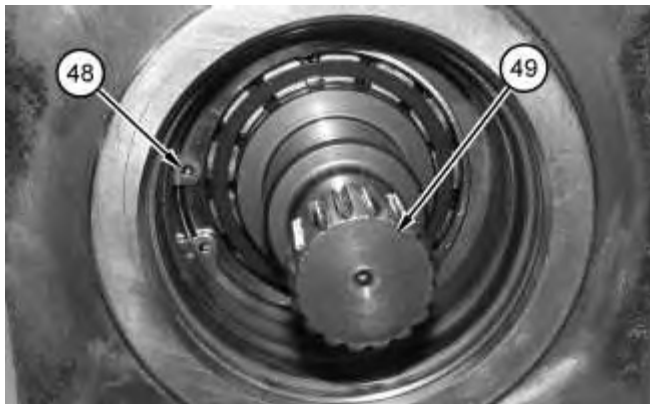


Illustration 7

g02722264

8. Install shaft assembly (49) .
9. Use Tooling (B) in order to install retaining ring (48) .



Illustration 8

g02722263

10. Install lip seals (47) .

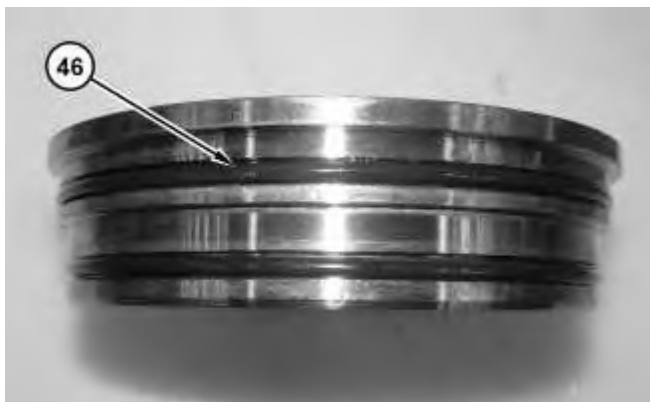


Illustration 9

g02722262

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com