



Service Repair Manual

Models

963 TRACK LOADER

Product: TRACK LOADER

Model: 963 TRACK LOADER 48Z

Configuration: 963 TRACK TYPE LOADER 48Z00232-UP (MACHINE) POWERED BY 3304 ENGINE

Disassembly and Assembly 26SI Series Alternator

Media Number -REN1252-01

Publication Date -01/10/1999

Date Updated -09/10/2001

i01167078

Alternator - Assemble

SMCS - 1405-016

Assembly Procedure

Note: Cleanliness is an important factor. Before assembly, all parts should be thoroughly cleaned in cleaning fluid. Allow the parts to air dry. Wiping cloths or rags should not be used to dry parts. Lint may be deposited on the parts which may cause later trouble. Inspect all parts. If any parts are worn or damaged, use new parts for replacement.

Note: Do not strike the diodes. The shock of such an impact can damage the diodes. Use proper tools in order to press the diodes in the mountings.

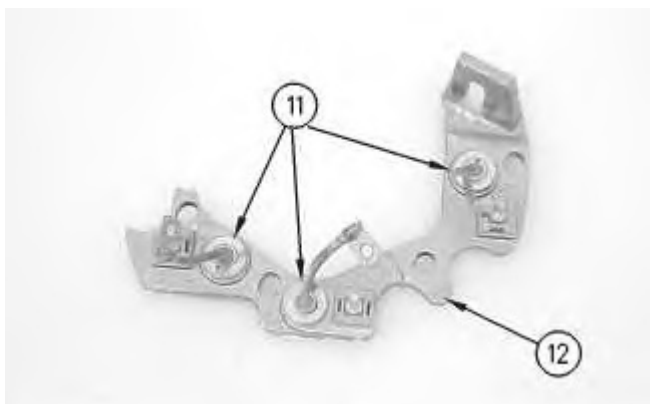


Illustration 1

g00628072

1. Install 3 diodes (11) in heat sink (12) .
-

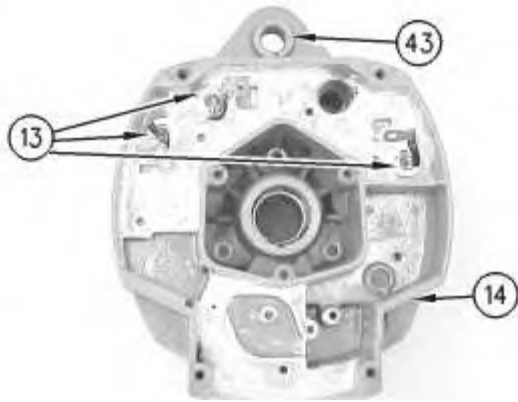


Illustration 2

g00628068

Note: Do not strike the bushing. Shocks from striking the housing can cause damage.

2. Press bushing (43) in housing (14) .
3. Install 3 diodes (13) in housing (14) .



Illustration 3

g00628067

4. Press collar (42) on rotor (39) .
 5. Slide retainer (41) on rotor (39) .
 6. Press bearing (40) on rotor (39) .
-

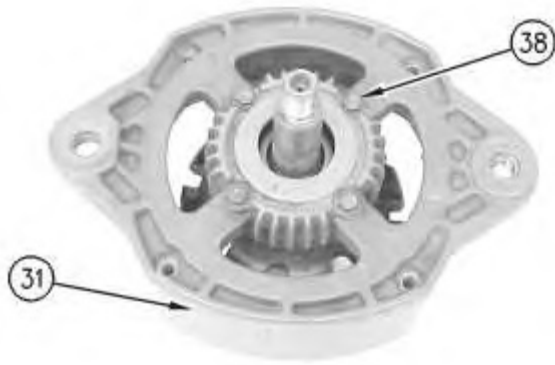


Illustration 4

g00628063

7. Press housing (31) on rotor (39) and bearing (40) .
8. Install 4 screws (38) in housing (31) .

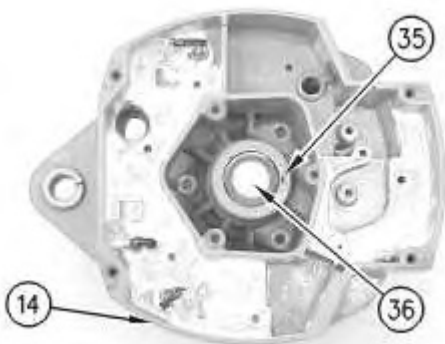


Illustration 5

g00628057

Note: Do not strike the bearing. Shocks from striking the housing can cause damage.

9. Install the inner race. Press bearing (37) into the housing.



10. Press cap (36) in housing (14) .

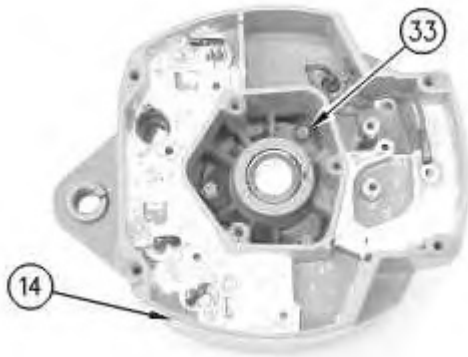


Illustration 7

11. Install the coil and support (34) in housing (14). Guide the field leads and the grommet through the hole as the coil is installed in housing (14). Install 3 screws (33) .



Illustration 8

12. Press the stator (32) and housing (14) together. Guide the stator leads and the grommet through the hole as the stator is installed in housing (14) .
-

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com