CATERPILLAR®

Service Repair Manual

Models

966E WHEEL LOADER

Model: 966D WHEEL LOADER 35S

Configuration: 966E WHEEL LOADER 35S02524-UP (MACHINE) POWERED BY 3306 ENGINE

Disassembly and Assembly

3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SENR5598-09 Publication Date -01/01/2013

Date Updated -25/01/2013

i01139602

Fuel Injection Pump Housing - Disassemble

SMCS - 1253-015

Disassembly Procedure

Table 1

| Required Tools | | | |
|----------------|-------------|-----------------------|-----|
| Tool | Part Number | Part Description | Qty |
| A | 1P-1860 | Retaining Ring Pliers | 1 |

Start By:

- A. Disassemble the governor. Refer to Disassembly and Assembly, "Governor Disassemble".
- B. Remove the fuel injection pumps. Refer to Disassembly and Assembly, "Fuel Injection Pump Remove".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

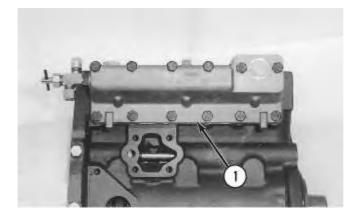


Illustration 1 g00456860

1. Remove cover (1) and the gasket.

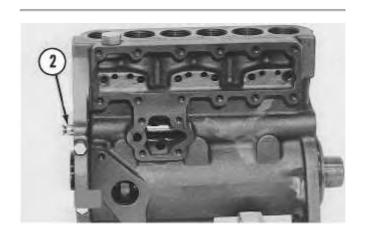


Illustration 2 g00456923

2. Remove fuel rack (2) from the fuel injection pump housing.

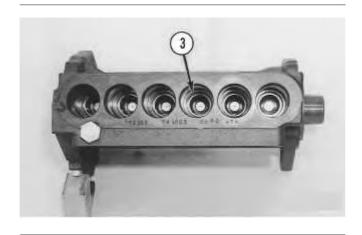


Illustration 3 g00456924

Note: If the original lifters are being reused in the fuel injection pump housing, place identification marks on the lifters in order to identify the locations.

3. Remove lifters (3) from the fuel injection pump housing.

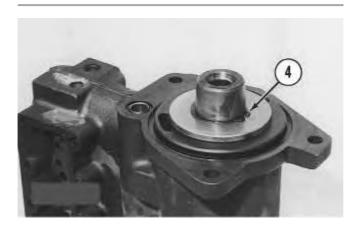


Illustration 4 g00456925

4. Position the fuel injection pump housing on wood blocks, as shown. Use Tool (A) in order to remove snap ring (4).

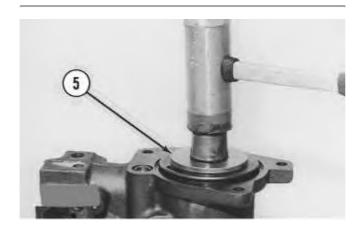


Illustration 5 g00456926

5. Use a soft hammer to push the camshaft toward the governor end of the fuel injection pump housing in order to loosen washer (5). Remove washer (5).

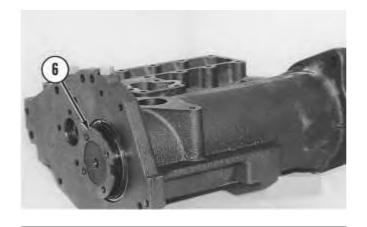


Illustration 6 g00456927

6. Remove camshaft (6).

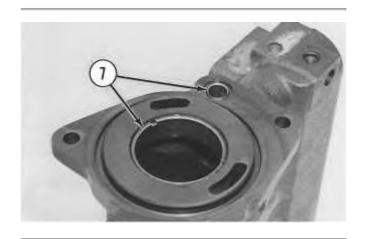


Illustration 7 g00456928

7. Remove bearings (7) from the drive end of the fuel injection pump housing.

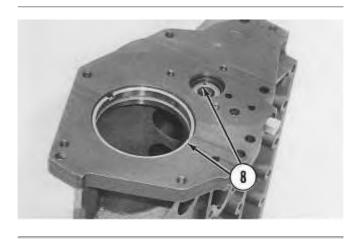


Illustration 8 g00456930

8. Remove bearings (8) from the governor end of the fuel injection pump housing.

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com