



Service Repair Manual

Models

966F SERIES II WHEEL LOADER

Product: WHEEL LOADER

Model: 966F WHEEL LOADER 8BG

Configuration: 966 F SERIES II WHEEL LOADER 8BG02000-02680 (MACHINE) POWERED BY 3306 ENGINE

Disassembly and Assembly 966F WHEEL LOADER POWER TRAIN

Media Number -SEN4771-04

Publication Date -01/12/2005

Date Updated -18/02/2005

SEN47710016


Differential (Standard)

SMCS - 3258-015; 3258-016


Disassemble Differential (Standard)

Start By:


- a. remove differentials and pinion assemblies

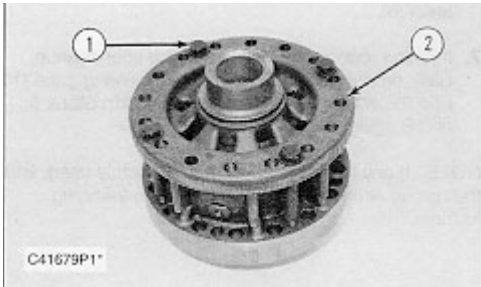


1. Remove four bolts (1) and the washers that hold case assembly (2). Remove the case assembly.

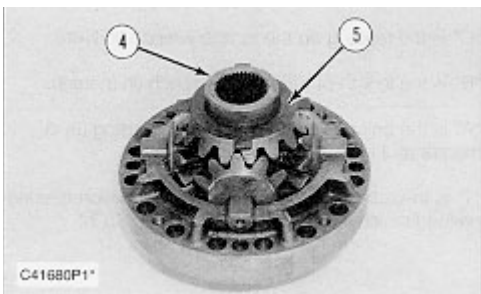

2. Remove thrust washer (5) and bevel gear (4).

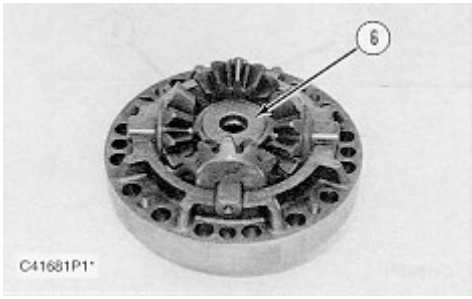


3. Remove spider and gear assembly (6).

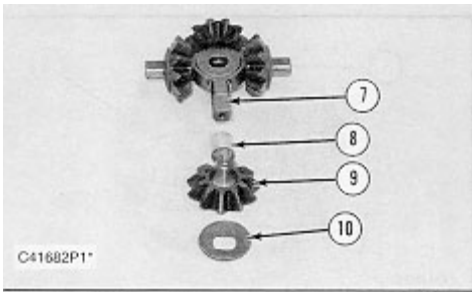


4. Disassemble the spider and gear assembly. Remove thrust washer (10), bevel pinion (9) and sleeve bearing (8) from spider (7).

5. Disassemble the remainder of the spider and gear assembly as in Step 5.

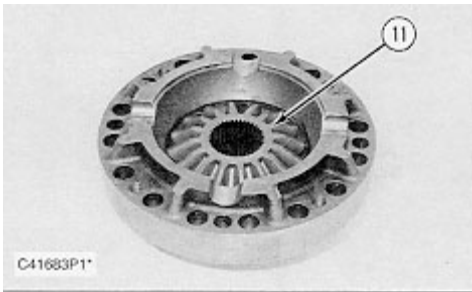


6. Remove bevel gear (11) from the case assembly.

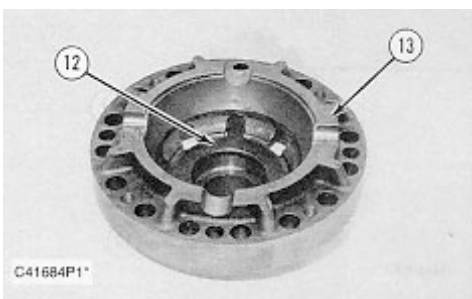


7. Remove thrust washer (12) from case assembly (13).


Assemble Differential (Standard)

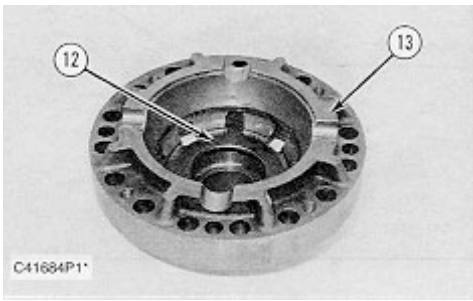

1. Install thrust washer (12) in case assembly (13).

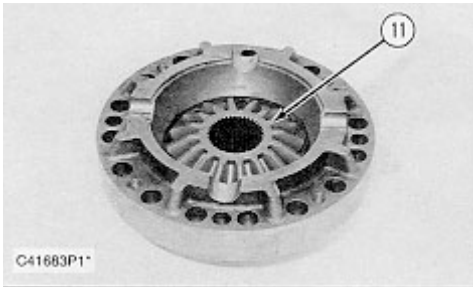


2. Install bevel gear (11) in the case assembly.

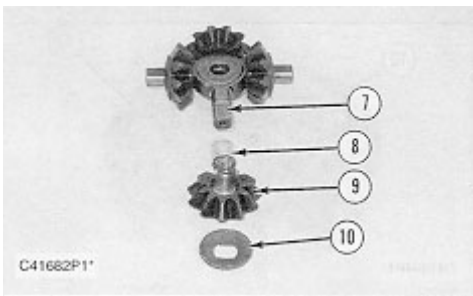


3. Assemble the spider and gear assembly. Install sleeve bearing (8), bevel pinion (9) and thrust washer (10) on spider (7).


4. Assemble the remainder of the spider and gear assembly as in Step 3.

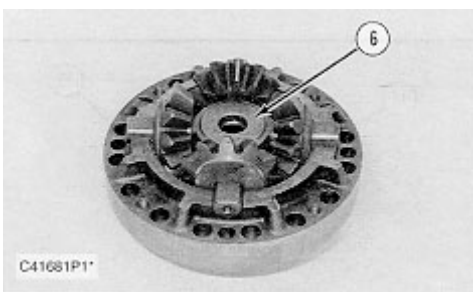

5. Install spider and gear assembly (6) in the case assembly.

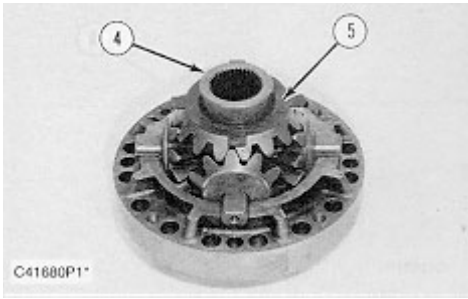

6. Install bevel gear (4) and thrust washer (5) in the case assembly.

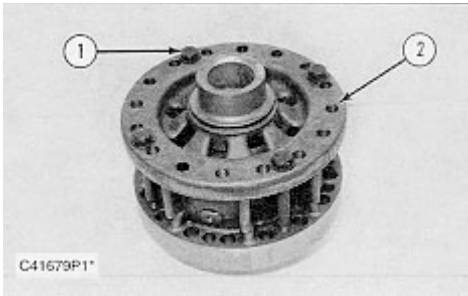

7. Put case assembly (2) in position, and install four bolts (1) and the washers that hold it.

End By:

a. install differentials and pinion assemblies

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com