CATERPILLAR®

Service Repair Manual

Models

CS-423E Vibratory Compactor

Product: VIBRATORY COMPACTOR
Model: CS-423E VIBRATORY COMPACTOR EAE
Configuration: CS-423E Vibratory Compactor EAE00001-UP (MACHINE) POWERED BY 3054C Engine

| Disassembly and Assembly | | |
|--|------------------------------|--|
| CP-433E, CS-423E and CS-433E Vibratory Compactors Machine Systems | | |
| Media Number -KENR3584-05 | Publication Date -01/09/2008 | |

Date Updated -29/09/2008

i02070847

Axle (with Brakes) - Disassemble

SMCS - 3260-015; 3278-015

Disassembly Procedure

| Required Tools | | | |
|----------------|-------------|-----------------------|-----|
| Tool | Part Number | Part Description | Qty |
| Α | 8H-0663 | Bearing Puller Gp | 1 |
| В | 1P-1863 | Retaining Ring Pliers | 1 |
| С | 180-3032 | Stand | 2 |
| D | 1P-1861 | Retaining Ring Pliers | 1 |
| Е | 1P-1855 | Retaining Ring Pliers | 1 |

Start By:

- A. Remove the axle. Refer to Disassembly and Assembly, "Axle Remove".
- 1. Drain the oil from the differential into a suitable container. The capacity of the differential is approximately 12 L (3 US gal).
- 2. Remove the bolts and the axle propel motor from the gearbox. Install the cover and the bolts.

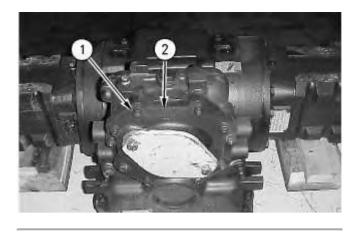


Illustration 1

g00847459

- 3. Drain the oil from the gearbox into a suitable container. The capacity of the gearbox is approximately 1.2 L (0.3 US gal).
- 4. Remove bolts (1) and cover (2).

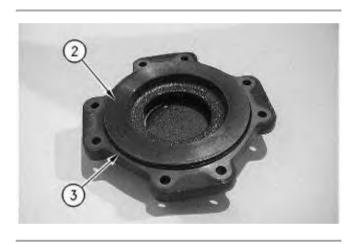


Illustration 2

g00847460

5. Remove O-ring seal (3) from cover (2).

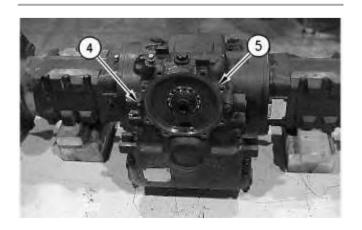


Illustration 3

6. Remove bolts (4) and cover (5).

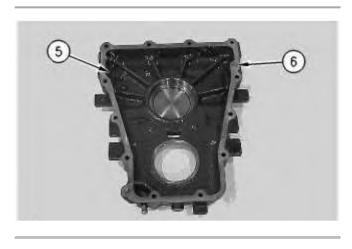


Illustration 4

g00847462

7. Remove dowels (6) from cover (5).

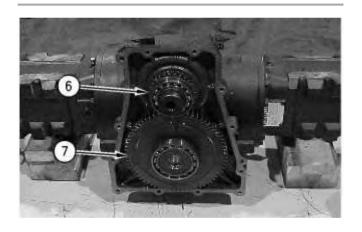


Illustration 5

g00847463

8. Remove gear (6) and (7).

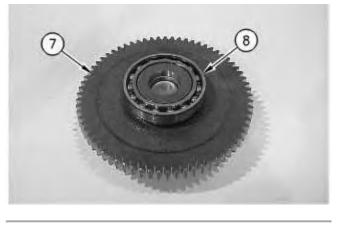


Illustration 6

g00847464

9. Use Tooling (A) and a suitable press to remove bearing (8) from gear (7).

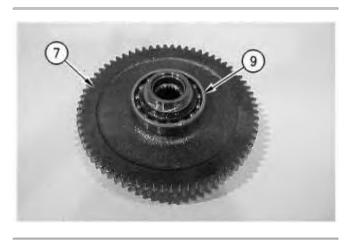


Illustration 7

g00847465

10. Use Tooling (A) and a suitable press to remove bearing (9) from gear (7).

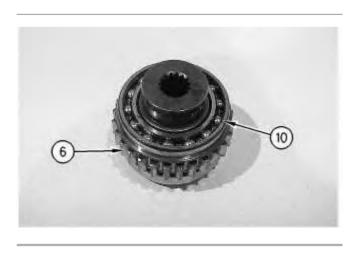


Illustration 8

g00847466

11. Use Tooling (A) and a suitable press to remove bearing (10) from gear (6).

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com