



# Service Repair Manual

## **Models**

**D25C ARTICULATED  
DUMP TRUCK**

---

Product: ARTICULATED TRUCK

Model: D25C ARTICULATED TRUCK 9YC

Configuration: D25C ARTICULATED DUMP TRUCK 9YC00001-01011 (MACHINE) POWERED BY 3306 ENGINE

## Disassembly and Assembly 3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SEN5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i00903481

## Fuel Ratio Control - Install

SMCS - 1278-012

## Installation Procedure

---

### NOTICE

**Keep all parts clean from contaminants.**

**Contaminants may cause rapid wear and shortened component life.**

---

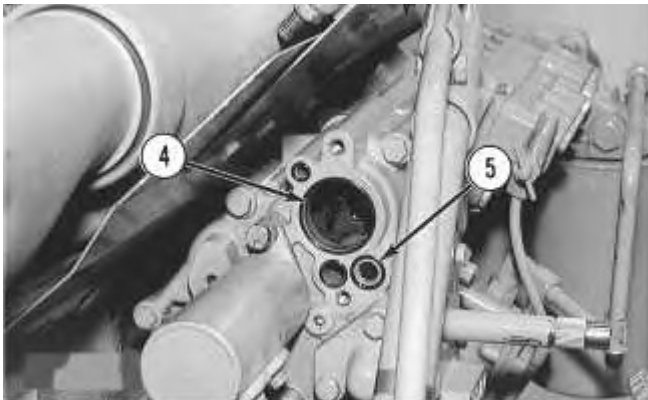


Illustration 1

g00460631

1. Screen assembly (5) and four O-ring seals (4) should be inspected, replaced and installed.
-

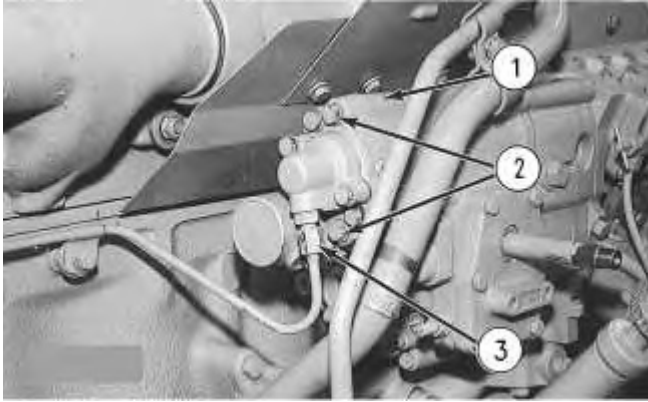


Illustration 2

g00460630

2. Put fuel ratio control (1) in position and engage the fuel ratio control with the lever assembly in the governor.
3. Install bolts (2) that hold the fuel ratio control and connect fuel pressure line (3) to fuel ratio control (1). Refer to Testing and Adjusting, "Fuel System" for more information on the adjustment procedure for the fuel ratio control.

Product: ARTICULATED TRUCK

Model: D25C ARTICULATED TRUCK 9YC

Configuration: D25C ARTICULATED DUMP TRUCK 9YC00001-01011 (MACHINE) POWERED BY 3306 ENGINE

## Disassembly and Assembly 3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SEN5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i00879991

# Fuel Shutoff Solenoid - Remove and Install

SMCS - 1259-010

## Removal Procedure

---

### NOTICE

**Keep all parts clean from contaminants.**

**Contaminants may cause rapid wear and shortened component life.**

---

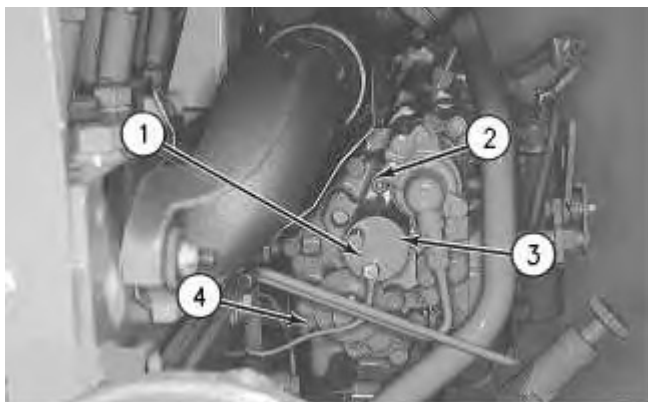


Illustration 1

g00475568

1. Remove nut (1) and the washer. Disconnect ground wire (4) from the fuel shutoff solenoid.
2. Remove two nuts (2) and the washers.

3. Remove fuel shutoff solenoid (3) and the gasket.

## Installation Procedure

---

### NOTICE

**Keep all parts clean from contaminants.**

**Contaminants may cause rapid wear and shortened component life.**

---

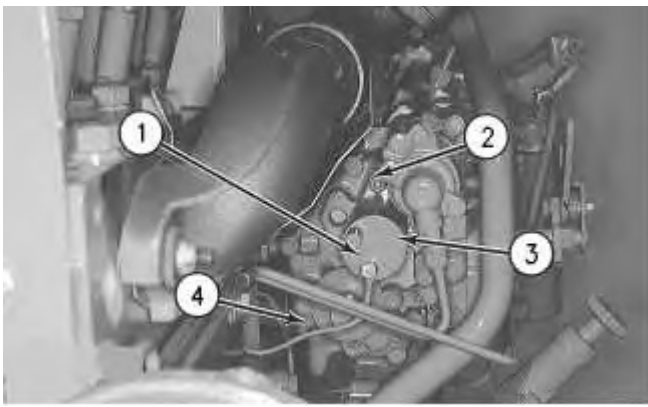


Illustration 2

g00475568

1. Install the gasket and fuel shutoff solenoid (3) .
2. Apply **9S-3263** Thread Lock Compound on the threads for two nuts (2) .
3. Install the washers and two nuts (2) .
4. Connect ground wire (4) to the fuel shutoff solenoid. Install nut (1) and the washer.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)