



---

## ***Service Manual***

### ***Model*** ***TH255C***

SN JK200150 to Present  
SN JK300150 to Present

***31200927***  
***UENR6264-03***

*Revised*  
*August 11, 2016*

---

# SECTION CONTENTS

<b>Section</b>	<b>Subject</b>	<b>Page</b>
<b>Section 1</b>		
<b>Safety Practices</b> .....		<b>1-1</b>
1.1	Introduction.....	1-2
1.2	Disclaimer.....	1-2
1.3	Operation & Maintenance Manual.....	1-2
1.4	Do Not Operate Tags .....	1-2
1.5	Safety Information.....	1-2
1.6	Safety Instructions.....	1-3
1.7	Safety Decals.....	1-4
<b>Section 2</b>		
<b>General Information and Specifications</b> .....		<b>2-1</b>
2.1	Replacement Parts and Warranty Information .....	2-3
2.2	Specifications.....	<b>2-4</b>
2.3	Fluids, Lubricants and Capacities.....	2-6
2.4	Maintenance Schedule .....	2-11
2.5	Lubrication Schedule .....	2-14
2.6	Thread Locking Compound.....	2-15
2.7	Torque Charts .....	2-16
2.8	Hydraulic Connection Assembly and Torque Specification .....	2-26
<b>Section 3</b>		
<b>Boom</b> .....		<b>3-1</b>
3.1	Boom System Component Terminology .....	3-2
3.2	Safety Information.....	3-3
3.3	Two Section Boom System.....	3-3
3.4	Boom Assembly Maintenance.....	3-3
3.5	Boom Wear Pads .....	3-10
3.6	Quick Coupler Assembly.....	3-11
3.7	Forks.....	3-12
3.8	Boom Prop (If Equipped).....	3-13
3.9	Emergency Boom Lowering Procedure.....	3-14
3.10	Troubleshooting.....	3-16
<b>Section 4</b>		
<b>Cab</b> .....		<b>4-1</b>
4.1	Operator Cab Component Terminology .....	4-2
4.2	Safety Information.....	4-3
4.3	Operator Cab.....	4-3
4.4	Cab Components.....	4-3
4.5	Cab Removal .....	4-12
4.6	Cab Installation.....	4-13

<b>Section</b>	<b>Subject</b>	<b>Page</b>
<b>Section 5</b>		
<b>Axles, Drive Shafts, Wheels and Tires .....</b>		<b>5-1</b>
5.1	Axle, Drive Shaft and Wheel Component Terminology.....	5-2
5.2	Safety Information .....	5-3
5.3	General Information .....	5-3
5.4	Axle Assemblies .....	5-3
5.5	Drive Shafts.....	5-9
5.6	Wheels and Tires.....	5-10
5.7	Steering Angle Adjustment .....	5-11
5.8	Brakes.....	5-11
5.9	Towing a Disabled Machine .....	5-11
<b>Section 6</b>		
<b>Transmission .....</b>		<b>6-1</b>
6.1	Transmission Assembly Component Terminology .....	6-2
6.2	Safety Information .....	6-3
6.3	Transmission Description.....	6-3
6.4	Transmission Specifications .....	6-3
6.5	Transmission Replacement.....	6-3
<b>Section 7</b>		
<b>Engine .....</b>		<b>7-1</b>
7.1	Introduction.....	7-2
7.2	Engine Serial Number.....	7-4
7.3	Specifications and Maintenance Information.....	7-4
7.4	Engine Cooling System.....	7-4
7.5	Engine Electrical System .....	7-8
7.6	Fuel System.....	7-8
7.7	Engine Exhaust System.....	7-10
7.8	Air Cleaner Assembly .....	7-11
7.9	Engine Replacement.....	7-13
<b>Section 8</b>		
<b>Hydraulic System .....</b>		<b>8-1</b>
8.1	Hydraulic Component Terminology .....	8-3
8.2	Safety Information .....	8-4
8.3	General Information .....	8-4
8.4	Specifications.....	8-4
8.5	Hoses, Tube Lines, Fittings, Etc.....	8-4
8.6	Hydraulic Pressure Diagnosis.....	8-5
8.7	Hydraulic Schematic .....	8-8
8.8	Hydraulic Reservoir .....	8-16
8.9	Hydraulic System Pump.....	8-18
8.10	Front Drive Motor.....	8-19
8.11	Control Valves .....	8-20
8.12	Hydraulic Cylinders .....	8-33

Section	Subject	Page
<b>Section 9</b>		
<b>Electrical System .....</b>		<b>9-1</b>
9.1	Electrical Component Terminology.....	9-3
9.2	Safety Information.....	9-5
9.3	Fuses and Relays .....	9-5
9.4	Electrical System Schematics.....	9-8
9.5	Dielectric Grease Application .....	9-26
9.6	Engine Start Circuit .....	9-29
9.7	Charging Circuit.....	9-31
9.8	Battery .....	9-32
9.9	Electrical System Components .....	9-34
9.10	Window Wiper/Washer .....	9-35
9.11	Cab Heater/AC and Fan .....	9-37
9.12	Switches, Solenoids and Senders.....	9-38
9.13	Load Stability Indicator System (LSI).....	9-42
9.14	Analyzer (CE & AUS) .....	9-51
9.15	Analyzer Software Accessibility .....	9-53
9.16	Diagnostic Trouble Codes (DTC) on Ground Module .....	9-57
9.17	Engine Diagnostic Trouble Code E.....	9-61



# Section 1

## Safety Practices

---

### Contents

---

PARAGRAPH	TITLE	PAGE
1.1	<b>Introduction</b> .....	1-2
1.2	<b>Disclaimer</b> .....	1-2
1.3	<b>Operation &amp; Maintenance Manual</b> .....	1-2
1.4	<b>Do Not Operate Tags</b> .....	1-2
1.5	<b>Safety Information</b> .....	1-2
	1.5.1    Safety Alert System and Signal Words.....	1-2
1.6	<b>Safety Instructions</b> .....	1-3
	1.6.1    Personal Hazards.....	1-3
	1.6.2    Equipment Hazards .....	1-3
	1.6.3    General Hazards .....	1-3
	1.6.4    Operational Hazards .....	1-4
1.7	<b>Safety Decals</b> .....	1-4

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**