



---

# ***Service Manual***

## ***Models***

***TH336C, TH337C,  
TH406C, TH407C,  
TH414C, TH514C,  
TH417C***

S/N MJR00150 & After, S/N THM00150 & After,  
S/N DJB00150 & After, S/N SXJ00150 & After,  
S/N GAT00150 & After, S/N RCH00150 & After,  
S/N MLH00150 & After, S/N JJT00150 & After,  
S/N KEK00150 & After, S/N RWW00150 & After,  
S/N MWC00150 & After, S/N KKW00150 & After,  
S/N RRJ00150 & After, S/N RRW00150 & After

**31200799**  
**UENR6251-05**

*Revised*  
*February 22, 2016*

---

# SECTION CONTENTS

Section	Subject	Page
<b>Section 1</b>		
<b>Safety Practices</b> .....		<b>1-1</b>
1.1	Introduction .....	1-2
1.2	Disclaimer .....	1-2
1.3	Operation & Maintenance Manual .....	1-2
1.4	Do Not Operate Tags .....	1-2
1.5	Safety Information .....	1-2
1.6	Safety Alert System and Signal Words .....	1-2
1.7	Safety Instructions .....	1-3
1.8	Safety Decals .....	1-4
<b>Section 2</b>		
<b>General Information and Specifications</b> .....		<b>2-1</b>
2.1	Replacement Parts and Warranty Information .....	2-2
2.2	Thread Locking Compound .....	2-2
2.3	Torque Charts .....	2-3
2.4	Specifications .....	2-14
2.5	Fluids and Lubricant Capacities .....	2-19
2.6	Service and Maintenance Schedules .....	2-22
2.7	Lubrication Schedules .....	2-27
<b>Section 3</b>		
<b>Boom</b> .....		<b>3-1</b>
3.1	Boom System Component Terminology - TH336C, TH337C, TH406C & TH407C .....	3-4
3.2	Boom System - Two Section .....	3-5
3.3	Boom Assembly Maintenance .....	3-5
3.4	Boom System Component Terminology - TH414C .....	3-11
3.5	Boom System - Three Section .....	3-12
3.6	Boom Assembly Maintenance .....	3-12
3.7	Boom Chain Removal/Installation .....	3-18
3.8	Extend/Retract, Tilt and Auxiliary Circuit Hose Removal/Installation .....	3-20
3.9	Extend/Retract Cylinder Removal/Installation .....	3-21
3.10	Boom Sections Adjustment .....	3-22
3.11	Boom System Component Terminology - TH514C .....	3-24
3.12	Boom System - Three Section .....	3-25
3.13	Boom Assembly Maintenance .....	3-25
3.14	Extend/Retract, Tilt and Auxiliary Circuit Hose Removal/Installation .....	3-32
3.15	Tandem Extend/Retract Cylinders Removal/Installation .....	3-34
3.16	Boom System Component Terminology - TH417C .....	3-38
3.17	Boom System - Four Section Boom .....	3-39
3.18	Boom Assembly Maintenance .....	3-39
3.19	Boom Chain Removal/Installation .....	3-48
3.20	Boom Sections Adjustment .....	3-48
3.21	Boom Extend and Retract Chains - TH414C & TH417C .....	3-49
3.22	Boom Wear Pads .....	3-54
3.23	Quick Coupler .....	3-55
3.24	Forks .....	3-56

Section	Subject	Page
3.25	Boom Prop (If Equipped) . . . . .	3-56
3.26	Emergency Boom Lowering Procedure . . . . .	3-57
3.27	Boom Retract Sensor Adjustment . . . . .	3-59
3.28	Troubleshooting . . . . .	3-61
<b>Section 4</b>		
<b>Cab and Covers . . . . .</b>		<b>4-1</b>
4.1	Operator Cab and Covers Component Terminology . . . . .	4-2
4.2	Operator Cab . . . . .	4-3
4.3	Cab Components . . . . .	4-3
4.4	Cab Removal . . . . .	4-10
4.5	Cab Installation . . . . .	4-12
<b>Section 5</b>		
<b>Axles, Drive Shafts, Wheels and Tires . . . . .</b>		<b>5-1</b>
5.1	Axle, Drive Shaft and Wheel Component Terminology . . . . .	5-2
5.2	Axle Serial Number . . . . .	5-3
5.3	Axle Specifications and Maintenance Information . . . . .	5-3
5.4	Axle Replacement . . . . .	5-3
5.5	Mechanical Park Brake . . . . .	5-5
5.6	Hydraulic Park Brake . . . . .	5-6
5.7	Brake Inspection . . . . .	5-8
5.8	Steering Angle Adjustment . . . . .	5-8
5.9	Axle Assembly and Drive Shaft Troubleshooting . . . . .	5-9
5.10	Drive Shafts . . . . .	5-12
5.11	Wheels and Tires . . . . .	5-13
5.12	Towing a Disabled Machine . . . . .	5-14
<b>Section 6</b>		
<b>Transmission . . . . .</b>		<b>6-1</b>
6.1	Transmission Assembly Component Terminology . . . . .	6-2
6.2	Transmission Serial Number . . . . .	6-3
6.3	Specifications and Maintenance Information . . . . .	6-3
6.4	Transmission Replacement . . . . .	6-3
6.5	Torque Converter Diaphragm . . . . .	6-5
6.6	Troubleshooting . . . . .	6-6
<b>Section 7</b>		
<b>Engine . . . . .</b>		<b>7-1</b>
7.1	Introduction . . . . .	7-3
7.2	Engine Serial Number . . . . .	7-8
7.3	Specifications and Maintenance Information . . . . .	7-8
7.4	Engine Cooling System . . . . .	7-9
7.5	Engine Electrical System . . . . .	7-14
7.6	Fuel System . . . . .	7-14
7.7	Engine Exhaust System . . . . .	7-17
7.8	Air Cleaner Assembly . . . . .	7-23
7.9	Engine Replacement . . . . .	7-27

Section	Subject	Page
<b>Section 8</b>		
<b>Hydraulic System</b> .....		<b>8-1</b>
8.1	Hydraulic Component Terminology .....	8-2
8.2	Safety Information .....	8-3
8.3	Specifications .....	8-3
8.4	Hydraulic Pressure Diagnosis .....	8-3
8.5	Hydraulic Circuits .....	8-4
8.6	Hydraulic Schematics .....	8-6
8.7	Hydraulic Reservoir .....	8-12
8.8	Engine Implement Pump .....	8-14
8.9	Auxiliary Pump (Platform Equipped Models Only) .....	8-15
8.10	Control Valves .....	8-16
8.11	Hydraulic Cylinders .....	8-21
8.12	Boom Ride Control (TH336C, TH337C, TH406C, TH407C - If Equipped) .....	8-26
<b>Section 9</b>		
<b>Electrical System</b> .....		<b>9-1</b>
9.1	Electrical Component Terminology .....	9-3
9.2	Specifications .....	9-4
9.3	Safety Information .....	9-4
9.4	Keypad and Display Screen .....	9-4
9.5	Software Level 2 Accessibility .....	9-5
9.6	Operator Tools .....	9-11
9.7	Fuses and Relays .....	9-13
9.8	Electrical System Schematics .....	9-16
9.9	Circuit Breakdowns .....	9-30
9.10	Engine Start Circuit .....	9-32
9.11	Window Wiper/Washer Windshield Wiper Motor .....	9-34
9.12	Solenoids, Sensors and Senders .....	9-36
9.13	Dash Switches .....	9-41
9.14	Platform Interlock Checks .....	9-43
9.15	Platform Load System Check .....	9-43
9.16	Load Stability Indicator (LSI) (CE & AUS) .....	9-44
9.17	LSI Sensor .....	9-45
9.18	LSI System Calibration .....	9-48
9.19	Hand Held Analyzer .....	9-54
9.20	Fault Codes .....	9-57
9.21	Machine Fault Codes .....	9-58
9.22	Engine Fault Codes .....	9-88



# Section 1

## Safety Practices

---

### Contents

---

PARAGRAPH	TITLE	PAGE
1.1	Introduction .....	1-2
1.2	Disclaimer .....	1-2
1.3	Operation & Maintenance Manual .....	1-2
1.4	Do Not Operate Tags .....	1-2
1.5	Safety Information .....	1-2
1.6	Safety Alert System and Signal Words .....	1-2
1.7	Safety Instructions .....	1-3
1.7.1	Personal Hazards .....	1-3
1.7.2	Equipment Hazards .....	1-3
1.7.3	General Hazards .....	1-3
1.7.4	Operational Hazards .....	1-4
1.8	Safety Decals .....	1-4

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)