



---

# *Service Manual*

## *Models*

### *TH414C GC,*

### *TH417C GC*

S/N KRF00150 & After,  
S/N LYN00150 & After,  
S/N NAB00150 & After,  
S/N NMM00150 & After,

**31200959**

*Revised*  
*May 9, 2014*

---

# SECTION CONTENTS

Section	Subject	Page
<b>Section 1</b>		
<b>Safety Practices</b> .....		<b>1-1</b>
1.1	Introduction .....	1-2
1.2	Disclaimer .....	1-2
1.3	Operation & Maintenance Manual .....	1-2
1.4	Do Not Operate Tags .....	1-2
1.5	Safety Information .....	1-2
1.6	Safety Alert System and Signal Words .....	1-2
1.7	Safety Instructions .....	1-3
1.8	Safety Decals .....	1-4
<b>Section 2</b>		
<b>General Information and Specifications</b> .....		<b>2-1</b>
2.1	Replacement Parts and Warranty Information .....	2-2
2.2	Thread Locking Compound .....	2-2
2.3	Torque Charts .....	2-3
2.4	Specifications .....	2-14
2.5	Fluids, Lubricants and Capacities .....	2-17
2.6	Service and Maintenance Schedules .....	2-20
2.7	Lubrication Schedule .....	2-25
<b>Section 3</b>		
<b>Boom</b> .....		<b>3-1</b>
3.1	Boom System Component Terminology - TH414C GC .....	3-3
3.2	Boom System - TH414C GC .....	3-4
3.3	Boom Assembly Maintenance - TH414C GC .....	3-4
3.4	Boom Chain Removal/Installation - TH414C GC .....	3-12
3.5	Tilt and Auxiliary Circuit Hose Removal/Installation - TH414C GC .....	3-14
3.6	Extend/Retract Cylinder Removal/Installation - TH414C GC .....	3-15
3.7	Boom Sections Adjustment - TH414C GC .....	3-15
3.8	Boom System Component Terminology - TH417C GC .....	3-17
3.9	Boom System - TH417C GC .....	3-18
3.10	Boom Assembly Maintenance - TH417C GC .....	3-18
3.11	Hose Carrier Assembly .....	3-29
3.12	Bottom Tilt and Auxiliary Circuit Hose Removal/Installation - TH417C GC .....	3-29
3.13	Boom Chain Removal/Installation - TH417C GC .....	3-31
3.14	Boom Sections Adjustment - TH417C GC .....	3-31
3.15	Boom Extend and Retract Chains - TH414C GC & TH417C GC .....	3-33
3.16	Boom Wear Pads .....	3-37
3.17	Quick Coupler .....	3-38
3.18	Forks .....	3-39
3.19	Boom Prop (If Equipped) .....	3-39
3.20	Emergency Boom Lowering Procedure .....	3-40
3.21	Troubleshooting .....	3-42

Section	Subject	Page
<b>Section 4</b>		
<b>Cab and Covers</b> .....		<b>4-1</b>
4.1	Operator Cab and Covers Component Terminology .....	4-2
4.2	Operator Cab .....	4-3
4.3	Cab Components .....	4-3
4.4	Cab Removal .....	4-8
4.5	Cab Installation .....	4-10
<b>Section 5</b>		
<b>Axles, Drive Shafts, Wheels and Tires</b> .....		<b>5-1</b>
5.1	Axle, Drive Shaft and Wheel Component Terminology .....	5-2
5.2	Axle Serial Number .....	5-3
5.3	Axle Specifications and Maintenance Information .....	5-3
5.4	Axle Replacement .....	5-3
5.5	Brake Inspection .....	5-5
5.6	Park Brake adjustment - TH414C GC .....	5-6
5.7	Steering Angle Adjustment .....	5-6
5.8	Axle Assembly and Drive Shaft Troubleshooting .....	5-7
5.9	Drive Shafts .....	5-10
5.10	Wheels and Tires .....	5-11
5.11	Towing a Disabled Machine .....	5-12
<b>Section 6</b>		
<b>Transmission</b> .....		<b>6-1</b>
6.1	Transmission Assembly Component Terminology .....	6-2
6.2	Transmission Serial Number .....	6-3
6.3	Specifications and Maintenance Information .....	6-3
6.4	Transmission Replacement .....	6-3
6.5	Torque Converter Diaphragm .....	6-5
6.6	Troubleshooting .....	6-5
<b>Section 7</b>		
<b>Engine</b> .....		<b>7-1</b>
7.1	Introduction .....	7-2
7.2	Engine Serial Number .....	7-2
7.3	Specifications and Maintenance Information .....	7-2
7.4	Engine Cooling System .....	7-4
7.5	Engine Electrical System .....	7-7
7.6	Fuel System .....	7-7
7.7	Engine Exhaust System .....	7-9
7.8	Air Cleaner Assembly .....	7-12
7.9	Engine Replacement .....	7-13
7.10	Troubleshooting .....	7-15

Section	Subject	Page
<b>Section 8</b>		
<b>Hydraulic System</b> .....		<b>8-1</b>
8.1	Hydraulic Component Terminology .....	8-2
8.2	Safety Information .....	8-3
8.3	Specifications .....	8-3
8.4	Hydraulic Pressure Diagnosis .....	8-3
8.5	Hydraulic Circuits .....	8-4
8.6	Hydraulic Schematics .....	8-6
8.7	Hydraulic Reservoir .....	8-8
8.8	Engine Implement Pump .....	8-10
8.9	Control Valves .....	8-11
8.10	Hydraulic Cylinders .....	8-19
<b>Section 9</b>		
<b>Electrical System</b> .....		<b>9-1</b>
9.1	Electrical Component Terminology .....	9-3
9.2	Specifications .....	9-4
9.3	Safety Information .....	9-4
9.4	Power Distribution Board .....	9-4
9.5	Electrical System Schematics .....	9-6
9.6	Engine Start Circuit .....	9-13
9.7	Wiper/Washer Wiper Motor .....	9-15
9.8	Solenoids, Sensors and Senders .....	9-19
9.9	Dash Switches .....	9-23
9.10	Load Stability Indicator (LSI) .....	9-25
9.11	Hand Held Analyzer .....	9-30
9.12	Fault Codes .....	9-34
9.13	Machine Fault Codes .....	9-35



# Section 1

## Safety Practices

---

### Contents

---

PARAGRAPH	TITLE	PAGE
1.1	Introduction .....	1-2
1.2	Disclaimer .....	1-2
1.3	Operation & Maintenance Manual .....	1-2
1.4	Do Not Operate Tags .....	1-2
1.5	Safety Information .....	1-2
1.6	Safety Alert System and Signal Words .....	1-2
1.7	Safety Instructions .....	1-3
1.7.1	Personal Hazards .....	1-3
1.7.2	Equipment Hazards .....	1-3
1.7.3	General Hazards .....	1-3
1.7.4	Operational Hazards .....	1-4
1.8	Safety Decals .....	1-4

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)