

Product: TRACK-TYPE TRACTOR

Model: D5B TRACK-TYPE TRACTOR 46X

Configuration: D5B LGP TRACTOR / POWER SHIFT / 46X00724-UP (MACHINE) POWERED BY 3306 ENGINE

Disassembly and Assembly 3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SEN5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i00984196

Fuel Priming Pump - Remove and Install

SMCS - 1258-010

Removal Procedure

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the machine. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Caterpillar Tools and Shop Products Guide", for tools and supplies suitable to collect and contain fluids in Caterpillar machines.

Dispose of all fluids according to local regulations and mandates.

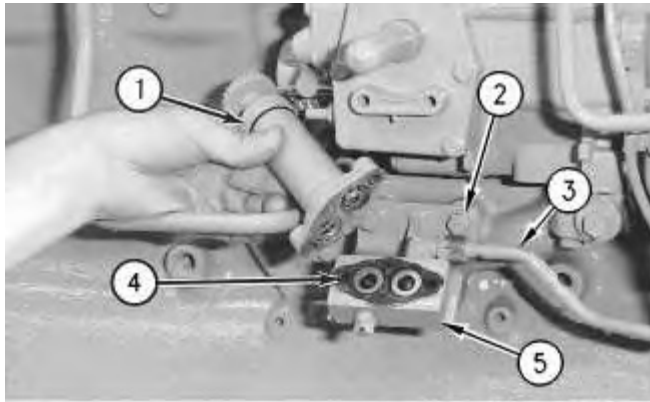


Illustration 1

g00500957

1. Turn the fuel supply line valve to the OFF position.
2. Remove the bolts and the washers that secure fuel priming pump (1) to base (5). Remove gasket (4) .
3. Disconnect tube assembly (3) .
4. Remove two bolts (2), the washers and base (5) from the cylinder block.

Installation Procedure

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

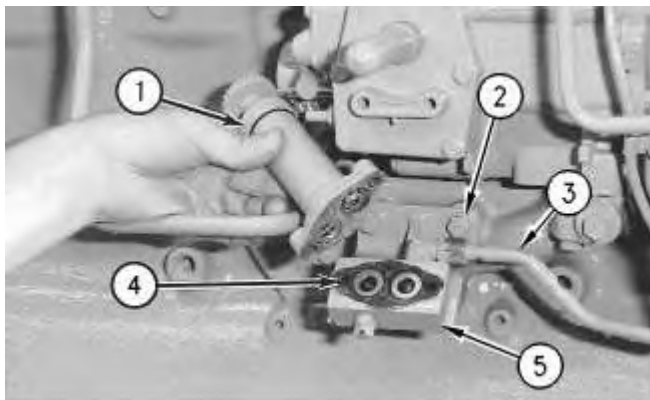


Illustration 2

g00500957

1. Install base (5), the washers and two bolts (2) .

2. Connect tube assembly (3) to base (5) .

Note: Check the condition of the gaskets. If the gaskets are worn or damaged, use new parts for replacement.

3. Install gasket (4). Install fuel priming pump (1) and the bolts that secure the fuel priming pump to base (5) .

4. Turn the fuel supply line valve to the ON position.

Product: TRACK-TYPE TRACTOR

Model: D5B TRACK-TYPE TRACTOR 46X

Configuration: D5B LGP TRACTOR / POWER SHIFT / 46X00724-UP (MACHINE) POWERED BY 3306 ENGINE

Disassembly and Assembly 3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SEN5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i00917143

Fuel Filter Base - Remove and Install

SMCS - 1262-010

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	2P-8250	Strap Wrench Assembly	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the machine. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Caterpillar Tools and Shop Products Guide", for tools and supplies suitable to collect and contain fluids in Caterpillar machines.

Dispose of all fluids according to local regulations and mandates.

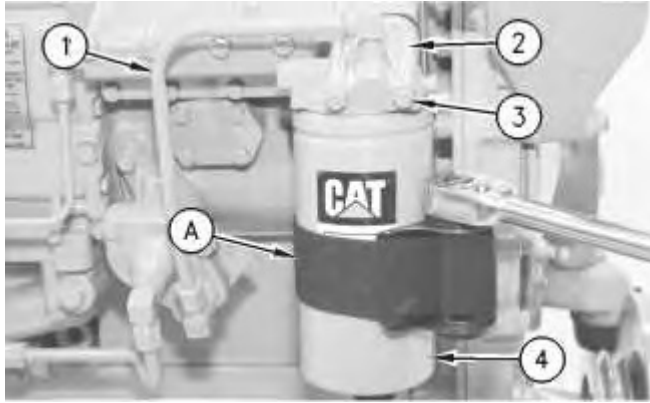


Illustration 1

g00468389

1. Use Tool (A) to remove fuel filter (4) .
2. Disconnect fuel line (1) from fuel filter base (2) .
3. Remove two bolts (3), the washers, fuel filter base (2) and the gasket from the fuel injection pump housing.

Installation Procedure

Table 2

Required Tools			
Tool	Part Number	Part Description	Qty
A	2P-8250	Strap Wrench Assembly	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com