

Perkins New 1000 Series

Models AJ to AS and YG to YK

WORKSHOP MANUAL

4 and 6 cylinder diesel engines for industrial and agricultural applications

Publication TPD 1350E issue 3

© Proprietary information of Perkins Engines Company Limited, all rights reserved.

The information is correct at the time of print.

Published in March 2000 by Technical Publications.



Chapters

- 10 General information**
- 11 Specifications**
- 12 Cylinder head assembly**
- 13 Piston and connecting rod assemblies**
- 14 Crankshaft assembly**
- 15 Timing case and drive assembly**
- 16 Cylinder block assembly**
- 17 Engine timing**
- 18 Aspiration system**
- 19 Lubrication system**
- 20 Fuel system**
- 21 Cooling system**
- 22 Flywheel and housing**
- 23 Electrical equipment**
- 24 Auxiliary equipment**
- 25 Special tools**

The following pages contain a detailed table of contents.

Contents

10 General information

Introduction	15
Engine identification	17
General safety precautions	18
Engine lift equipment	19
Viton seals	20
POWERPART recommended consumable products	21

11 Specifications

Basic engine data	23
Thread sealant	24
Standard torque tensions	25
Specific torque tensions	26
Compression test data	29

12 Cylinder head assembly

General description	31
Rocker cover	
12-1 To remove and to fit	32
Rocker assembly	
12-2 To remove and to fit	33
12-3 To dismantle and to assemble	34
12-4 To inspect and to correct	34
Valve tip clearances	
12-5 To check and to adjust	35
Valve springs	
12-6 To change the valve springs (with cylinder head fitted) .	37
Cylinder head assembly	
12-7 To remove and to fit	39
Valves and valve springs	
12-8 To remove and to fit	49
12-9 To inspect and to correct	50
Valve guides	
12-10 To inspect	51
12-11 To remove and to fit	52
Cylinder head	
12-12 To inspect and to correct	54
12-13 To correct a valve seat with a valve seat cutter	55
12-14 To fit valve seat inserts	56
Data and dimensions	57

13 Piston and connecting rod assemblies

General description	63
Big end bearing	
13-1 To remove and to fit	65
13-2 To inspect	66
Piston and connecting rod	
13-3 To remove and to fit	67
13-4 To check the piston height above the cylinder block	70
Piston rings	
13-5 To remove and to fit	71
Piston and connecting rod assembly	
13-6 To dismantle and to assemble	72
13-7 To check the length of a connecting rod	73
Piston and piston rings	
13-8 To inspect	74
Connecting rod	
13-9 To inspect	75
Partially finished small end bush	
13-10 To remove and to fit	75
Piston cooling jets	
13-11 To remove and to fit	76
13-12 To check the jet alignment	76
Data and dimensions	77

14 Crankshaft assembly

General description	79
Crankshaft pulley	
14-1 To remove and to fit - four cylinder engines	80
Crankshaft pulley and damper	
14-2 To remove and to fit - six cylinder engines	81
14-3 To inspect	83
Rear oil seal assembly	
14-4 To remove and to fit	84
14-5 To renew the rear oil seal	85
Thrust washers	
14-6 To check crankshaft end-float	86
14-7 To remove and to fit	87
Main bearings	
14-8 To remove and to fit (with the crankshaft in position)	89
14-9 To inspect	90
Crankshaft	
14-10 To remove and to fit	91
14-11 To inspect	94
Balancer unit	
14-12 To remove and to fit	95
14-13 To dismantle and to assemble	96
14-14 To inspect	101
14-15 To remove and to fit the needle roller bearings for the drive shaft	102
14-16 To remove and to fit the bushes for the balance weights	103
Data and dimensions	104

15 Timing case and drive assembly

General description	109
Timing case cover	
15-1 To remove and to fit	110
Front oil seal	
15-2 To remove and to fit	111
15-3 To fit wear sleeve	112
Idler gear and hub	
15-4 To remove and to fit	113
Idler gear and hub for the Bendix compressor	
15-5 To remove and to fit	116
Fuel pump gear	
15-6 To remove and to fit	118
Camshaft gear	
15-7 To remove and to fit	120
Crankshaft gear	
15-8 To remove and to fit	121
Timing case	
15-9 To remove and to fit	122
Camshaft and tappets	
15-10 To remove and to fit	124
Data and dimensions	125

16 Cylinder block assembly

General description	127
Cylinder block	
16-1 To dismantle and to assemble	128
16-2 To inspect	129
Cylinder liner	
16-3 To inspect	130
16-4 To remove and to fit	131
Cylinder bore, engine types AR and AS	
16-5 To inspect	136
Data and dimensions	137

17 Engine timing

General description	141
Engine timing	
17-1 To set number 1 piston to TDC on the compression stroke	143
17-2 Another method to set number 1 piston to TDC on the compression stroke	144
17-3 To check the valve timing	144
17-4 To check the timing of the fuel injection pump	145
Data and dimensions	146

18 Aspiration system

General description	147
Turbocharger	
18-1 To remove and to fit	149
18-2 To clean the impeller and the compressor casing	151
18-3 To remove and to fit the actuator assembly of the waste-gate unit	152
18-4 To check and adjust the operation of the waste-gate	153
Turbocharger faults	154
Engine breather	
18-5 To clean and to renew	156
18-6 To clean and to renew	157

Data and dimensions	158
----------------------------------	-----

19 Lubrication system

General description	159
Filter canister	
19-1 To renew	163
Filter head	
19-2 To remove and to fit	164
Sump	
19-3 To remove and to fit	165
Oil strainer and suction pipe	
19-4 To remove and to fit	165
16-5 To inspect and to correct	166
Lubricating oil pump	
19-6 To remove and to fit	167
19-7 To renew the shaft for the idler gear	169
19-8 To inspect	173
Relief valve	
19-9 To remove and to fit	174
19-10 To dismantle and to assemble	175
19-11 To inspect	175
Flexible oil pipes	
19-12 To remove, to fit and to inspect	176
Data and dimensions	178

Buy Now



Our support email:

ebooklibonline@outlook.com