



2950 Tractor



 
JOHN DEERE

TECHNICAL MANUAL 2950 Tractor

TM4407 (01AUG86) English

John Deere Werke Mannheim
TM4407 (01AUG86)

LITHO IN U.S.A.
ENGLISH



2950 TRACTOR TECHNICAL MANUAL TM-4407 (Apr-86)

CONTENTS

The engine information has been removed from this manual. For engine information, refer to engine component technical manual, CTM-4, 3179, 4239, and 6359 Engines.

SECTION 10 - GENERAL

- Group 00 - Specifications and Special Tools
- Group 05 - Predelivery, Delivery, and After-Sales Inspections
- Group 10 - Lubrication and Service
- Group 15 - Tune-Up
- Group 20 - Tractor Separation

SECTION 20 - ENGINE

- Group 00 - Specifications
- Group 05 - Radiator

SECTION 30 - FUEL AND AIR INTAKE SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - General Information, and Diagnosing Malfunctions
- Group 10 - Fuel Tank and Water Trap
- Group 15 - Cold Weather Starting Aids
- Group 20 - Speed Control Linkage
- Group 25 - Air Cleaner

SECTION 40 - ELECTRICAL SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Diagnosing Malfunctions and Tests
- Group 06 - Connector Repair
- Group 10 - Wiring Harnesses
- Group 15 - Controls and Instruments
- Group 20 - Lighting System
- Group 25 - Wiring Diagrams
- Group 30 - Starting Motor
- Group 35 - Alternator

SECTION 50 - POWER TRAIN

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Operation and Lubrication System
- Group 10 - Clutch Operating Linkages
- Group 15 - Engine Clutch
- Group 20 - Hi-Lo Shift Unit
- Group 25 - Creeper Transmission
- Group 30 - Transmission Shift Linkages
- Group 35 - Synchronized Transmission and Transmission Oil Pump
- Group 40 - Differential
- Group 45 - Final Drives
- Group 50 - Independent PTO
- Group 55 - Mechanical Front Wheel Drive

SECTION 60 - STEERING SYSTEM AND BRAKES

- Group 00 - Specifications and Special Tools
- Group 05 - Steering System
- Group 10 - Brakes

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT® 1986
DEERE & COMPANY
Moline, Illinois
All rights reserved
Previous Edition
Copyright® 1982, 1984
Deere & Company

CONTENTS—Continued**SECTION 70 - HYDRAULIC SYSTEM**

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Diagnosing Malfunctions and Tests
- Group 10 - Oil Reservoir, Filter, Valves and Oil Cooler
- Group 15 - Hydraulic Pump
- Group 20 - Rockshaft
- Group 25 - Selective Control Valve (Poppet Valve Type) and Breakaway Coupler
- Group 26 - Selective Control Valve (Spool Type) and Quick Coupler
- Group 30 - Remote Cylinder

SECTION 90 - OPERATOR'S STATION

- Group 00 - Specifications and Special Tools
- Group 05 - Air Conditioning System
- Group 10 - Cab Ventilation and Heating
- Group 15 - Seats
- Group 20 - SOUND-GARD Body
- Group 25 - ROLL-GARD Protective Structure

SECTION 80 - ENGINE

- Group 00 - Specifications
- Group 05 - Front Axle
- Group 10 - Front and Rear Wheels

Section 10 GENERAL

CONTENTS OF THIS SECTION

	Page		Page
GROUP 00 - SPECIFICATIONS AND SPECIAL TOOLS		GROUP 05 - PREDELIVERY, DELIVERY AND AFTER-SALES INSPECTIONS	
Specifications	10-00-3	Tractor Storage	10-05-1
Serial Numbers	10-00-3	Predelivery Inspection	10-05-2
Model Numbers	10-00-3	Delivery Inspection	10-05-9
Engine	10-00-3	After-Sales Inspection	10-05-10
Engine Clutch	10-00-4		
Cooling System	10-00-4	GROUP 10 - LUBRICATION AND SERVICE	
Fuel System	10-00-4	Lubrication and Service	10-10-1
Electrical System	10-00-4		
Synchronized Transmission	10-00-4	GROUP 15 - TUNE-UP	
Hi-Lo Shift Unit	10-00-4	Preliminary Engine Testing	10-15-1
Creeper Transmission	10-00-5	Dynamometer Test	10-15-1
Differential and Final Drives	10-00-5	Testing Compression Pressure	10-15-2
Differential Lock	10-00-5	Engine Tune-Up	10-15-2
PTO	10-00-5	Checking Tractor Operation	10-15-7
Mechanical Front Wheel Drive	10-00-5	Standard Torques	10-15-8
Hydrostatic Steering	10-00-6		
Foot Brakes	10-00-6	GROUP 20 - TRACTOR SEPARATION	
Handbrake	10-00-6	Separating between Engine and	
Hydraulic System	10-00-6	Tractor Front End	10-20-1
Capacities	10-00-6	Removal and Installation of Engine	10-20-5
Travel Speeds	10-00-6	Removal and Installation of	
Front and Rear Wheels	10-00-6	Clutch Housing	10-20-8
Dimensions and Weights	10-00-6	Removal and Installation of	
Predelivery, Delivery and		Final Drives	10-20-10
After-Sales Inspections	10-00-7	Removal and Installation of	
Lubrications and Service	10-00-8	Rockshaft	10-20-15
Tune-up	10-00-9	Removal and Installation of	
Tractor Separation	10-00-10	SOUND-GARD® Body	10-20-17
Standard Torques	10-00-11		
Special Tools	10-00-13		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com