


# **646B Compactor**

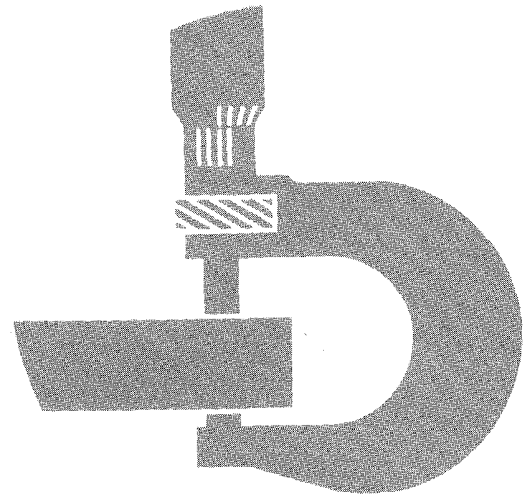

## **TECHNICAL MANUAL**

**John Deere Dubuque Works**

**TM-1116**

LITHO IN U.S.A.

## SECTION AND GROUP CONTENTS OF THIS MANUAL

### SECTION I - GENERAL INFORMATION

- Group I - Contents
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Lubrication

### SECTION 1 - WHEELS

- Group 0110 - Powered Wheels, Tires and Fastenings
- Group 0199 - Specifications and Special Tools

### SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shafts
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

### SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts
- Group 0341 - Housings and Covers
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Transmission Hydraulics
- Group 0399 - Specifications and Special Tools

### SECTION 4 - ENGINES

- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshafts and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block (Liners)
- Group 0407 - Engine Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Piping
- Group 0419 - Engine Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting System
- Group 0433 - Flywheel, Housing and Fasteners
- Group 0499 - Specifications and Special Tools

### SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Engine Cooling Systems
- Group 0520 - Intake System
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

### SECTION 6 - TORQUE CONVERTER

- Group 0641 - Converter Housing and Cover
- Group 0651 - Converter Turbine, Gears, Shafts Etc.
- Group 0699 - Specifications and Special Tools

### SECTION 9 - STEERING SYSTEMS

- Group 0960 - Power Steering
- Group 0999 - Specifications and Special Tools

### SECTION 10 - SERVICE BRAKES

- Group 1011 - Service Brake Active Elements
- Group 1060 - Brake Hydraulics
- Group 1099 - Specifications and Special Tools

### SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Parking Brake Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

### SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Vehicle Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1699 - Specifications and Special Tools

### SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1741 - Engine Frame
- Group 1742 - Equipment Frame
- Group 1746 - Bottom Guards
- Group 1749 - Chassis Weights
- Group 1799 - Specifications and Special Tools

SECTION 18 - OPERATOR'S STATION

- Group 1806 - Safety Equipment
- Group 1808 - Comfort and Convenience Items
- Group 1810 - Operator Enclosure
- Group 1821 - Seat
- Group 1823 - Instruments and Indicators
- Group 1824 - External Engine Speed Controls
- Group 1830 - Heater
- Group 1899 - Specifications and Special Tools

SECTION 19 - SHEET METAL

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing

SECTION 31 - LOADER

- Group 3102 - Buckets
- Group 3115 - Controls Linkage
- Group 3140 - Loader Frames
- Group 3160 - Loader Hydraulics
- Group 3199 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System
- Group 9030 - Miscellaneous Components
- Group 9035 - Specifications and Special Tools

II INDEX



**COMPLETE PAGE LISTING  
 WITH LATEST DATE LINES**

I-I-1,2	(Nov-74)	3-0315-1,2	(Jun-80)	4-0401-11,12	(Jun-80)
I-I-3,4	(Nov-74)	3-0315-3,4	(Nov-74)	4-0402-1,2	(Jun-80)
I-I-5,6	(Jun-80)	3-0325-1,2	(Nov-74)	4-0402-3,4	(Jun-80)
I-I-7,8	(Jun-80)	3-0341-1,2	(Jun-80)	4-0402-5,6	(Jun-80)
I-II-1,2	(Nov-74)	3-0341-3,4	(Jun-80)		
I-II-3,4	(Jun-80)	3-0341-5,6	(Jun-80)	4-0403-1,2	(Jun-80)
I-II-5,6	(Jun-80)	3-0341-7,8	(Jun-80)	4-0403-3,4	(Jun-80)
I-II-7,8	(Jun-80)	3-0341-9,10	(Jun-80)	4-0403-5,6	(Jun-80)
I-III-1,2	(Jun-80)	3-0341-11,12	(Jun-80)	4-0403-7,8	(Jun-80)
I-III-3,4	(Jun-80)	3-0341-13,14	(Jun-80)	4-0404-1,2	(Jun-80)
I-IV-1,2	(Dec-78)	3-0341-15,16	(Jun-80)	4-0404-3,4	(Jun-80)
I-IV-3,4	(Dec-78)	3-0350-1,2	(Jun-80)	4-0404-5,6	(Jun-80)
I-IV-5,6	(Dec-78)	3-0350-3,4	(Dec-78)	4-0404-7,8	(Jun-80)
I-IV-7,8	(Dec-78)	3-0350-5,6	(Nov-74)	4-0404-9,10	(Jun-80)
I-IV-9,10	(Dec-78)	3-0350-7,8	(Oct-75)	4-0407-1,2	(Jun-80)
I-IV-11,12	(Dec-78)	3-0350-9,10	(Jun-80)	4-0407-3,4	(Jun-80)
I-IV-13,14	(Jun-80)	3-0350-11,12	(Oct-75)	4-0408-1,2	(Jun-80)
I-IV-15,16	(Dec-78)	3-0350-13,14	(Oct-75)	4-0409-1,2	(Jun-80)
I-IV-17,18	(Jun-80)	3-0350-15,16	(Jun-80)	4-0409-3,4	(Jun-80)
I-IV-19,20	(Dec-78)	3-0350-17,18	(Oct-75)	4-0409-5,6	(Jun-80)
I-IV-21,22	(Dec-78)	3-0350-19,20	(Jun-80)	4-0409-7,8	(Jun-80)
I-IV-23,24	(Dec-78)	3-0350-21,22	(Jun-80)	4-0410-1,2	(Jun-80)
I-IV-25,26	(Dec-78)	3-0350-23,24	(Jun-80)	4-0413-1,2	(Jun-80)
I-IV-27,28	(Dec-78)	3-0350-25,26	(Jun-80)	4-0413-3,4	(Jun-80)
I-IV-29,30	(Dec-78)	3-0350-27,28	(Jun-80)	4-0413-5,6	(Jun-80)
I-V-1,2	(Dec-78)	3-0350-29,30	(Jun-80)	4-0413-7,8	(Jun-80)
I-V-3,4	(Jun-80)	3-0350-31,32	(Jun-80)	4-0413-9,10	(Jun-80)
		3-0350-33,34	(Jun-80)	4-0413-11,12	(Jun-80)
1-0110-1,2	(Jun-80)	3-0350-35,36	(Jun-80)	4-0413-13,14	(Jun-80)
1-0110-3,4	(Jun-80)	3-0350-37,38	(Jun-80)	4-0414-1,2	(Jun-80)
1-0110-5,6	(Jun-80)	3-0350-39,40	(Jun-80)	4-0416-1,2	(Jun-80)
1-0110-7,8	(Jun-80)	3-0360-1,2	(Jun-80)	4-0416-3,4	(Jun-80)
1-0199-1,2	(Nov-74)	3-0360-3,4	(Jun-80)	4-0416-5,6	(Jun-80)
		3-0360-5,6	(Jun-80)	4-0416-7,8	(Jun-80)
2-0201-1,2	(Jun-80)	3-0360-7,8	(Jun-80)	4-0417-1,2	(Jun-80)
2-0201-3,4	(Jun-80)	3-0360-9,10	(Jun-80)	4-0417-3,4	(Jun-80)
2-0201-5,6	(Jun-80)	3-0360-11,12	(Jun-80)	4-0417-5,6	(Jun-80)
2-0210-1,2	(Jun-80)	3-0399-1,2	(Jun-80)	4-0417-7,8*	(Dec-78)
2-0210-3,4	(Jun-80)	3-0399-3,4	(Jun-80)	4-0418-1,2	(Jun-80)
2-0210-5,6	(Jun-80)	3-0399-5,6	(Jun-80)	4-0419-1,2	(Jun-80)
2-0210-7,8	(Jun-80)	3-0399-7,8	(Jun-80)	4-0420-1,2	(Jun-80)
2-0210-9,10	(Jun-80)	3-0399-9,10	(Jun-80)	4-0421-1,2	(Jun-80)
2-0210-11,12	(Jun-80)			4-0422-1,2	(Jun-80)
2-0210-13,14	(Jun-80)	4-0400-1,2	(Jun-80)	4-0422-3,4	(Jun-80)
2-0210-15,16	(Jun-80)	4-0400-3,4	(Jun-80)	4-0422-5,6	(Jun-80)
2-0225-1,2	(Dec-78)	4-0401-1,2	(Jun-80)	4-0422-7,8	(Jun-80)
2-0250-1,2	(Dec-78)	4-0401-3,4	(Jun-80)	4-0422-9,10	(Jun-80)
2-0250-3,4	(Nov-74)	4-0401-5,6	(Jun-80)	4-0422-11,12	(Jun-80)
2-0299-1,2	(Nov-74)	4-0401-7,8	(Jun-80)	4-0422-13,14	(Jun-80)
2-0299-3,4	(Jun-80)	4-0401-9,10	(Jun-80)	4-0422-15,16	(Jun-80)
2-0299-5,6	(Dec-78)				

Vertical lines indicate pages included in this revision.  
 \*Remove these pages from manual

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)