


# **755A Crawler Loader**

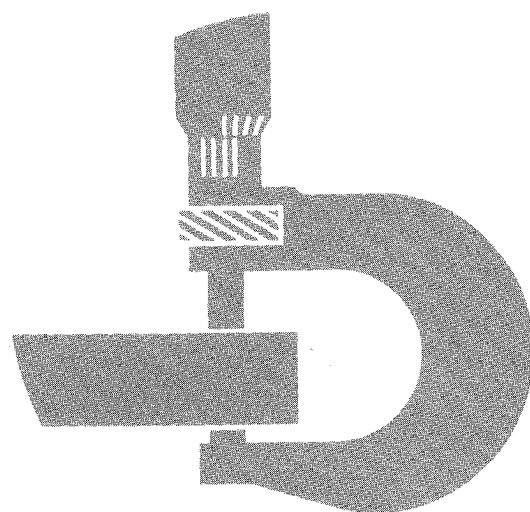

## **TECHNICAL MANUAL**

**TM-1231**

LITHO IN U.S.A.

**755A CRAWLER LOADER  
Technical Manual  
TM-1231 (Mar-84)**

**SECTION AND GROUP CONTENTS OF THIS MANUAL**

**SECTION I - GENERAL INFORMATION**

- Group I - Contents and Index
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Fuels and Lubricants

**SECTION 1 - TRACKS**

- Group 0130 - Track Systems
- Group 0199 - Specifications and Special Tools

**SECTION 2 - AXLES AND SUSPENSION  
SYSTEMS**

- Group 0201 - Drive Axle Housing
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

**SECTION 3 - TRANSMISSION**

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

**SECTION 4 - ENGINE**

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings, and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

**SECTION 5 - ENGINE AUXILIARY SYSTEMS**

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling System
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust System
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply System
- Group 0599 - Specifications and Special Tools

**SECTION 8 - TRANSFER DRIVE**

- Group 0841 - Housing and Covers
- Group 0851 - Gears, Shafts, Bearings
- Group 0899 - Specifications and Special Tools

**SECTION 11 - PARKING EMERGENCY BRAKE**

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1160 - Hydraulic System
- Group 1199 - Specifications and Special Tools

**SECTION 15 - EQUIPMENT ATTACHING**

- Group 1511 - Drawbar
- Group 1512 - Towbar

**SECTION 16 - ELECTRICAL SYSTEMS**

- Group 1671 - Batteries, Supports and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

**SECTION 17 - FRAME, CHASSIS OR SUPPORT-  
ING STRUCTURE**

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1749 - Chassis Weights

**SECTION 18 - OPERATOR'S STATION**

- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

## SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

### SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosures
- Group 1921 - Grille and Grille Housing

### SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2003 - Fire Extinguisher
- Group 2004 - Horn and Warning Devices
- Group 2006 - Cigar Lighter

### SECTION 31 - LOADER

- Group 3102 - Buckets
- Group 3115 - Controls Linkage
- Group 3140 - Frames
- Group 3160 - Hydraulic System
- Group 3199 - Specifications and Special Tools

### SECTION 42 - GROUND CONDITIONING TOOL

- Group 4201 - Blades, Teeth, Shanks
- Group 4215 - Controls Linkage
- Group 4260 - Hydraulic System

### SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Diagnosis and Testing and Operational Checkout Procedure
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9025A - Hydraulic System (Analyzer)
- Group 9026 - Hydrostatic System
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

*All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.*

## ALPHABETICAL INDEX

### A

Adjustment, hydrostatic system ..... 9026-90  
Air circulation blower motor ..... 1830-30  
Air conditioning operational test ..... 9031-17  
Air conditioning relay ..... 1674-4  
Air conditioning system ..... 1830-5  
Air conditioning system ..... 9031-2  
    Diagnosis and testing ..... 9031-5  
Air conditioning system service ..... 9031-9  
    Adding refrigerant-12 to system ..... 9031-15  
    Charging the system ..... 9031-13  
    Component location ..... 9031-19  
    Discharging the system ..... 9031-10  
    Electrical system ..... 9031-9  
    Evacuating the system ..... 9031-11  
    Flushing the system ..... 9031-10  
    Inspecting refrigerant hoses and tubing .. 9031-16  
    Installing manifold gauge set ..... 9031-9  
    Leak testing ..... 9031-16  
    Manifold gauge set ..... 9031-9  
    Purging the system ..... 9031-11  
Alternator ..... 1672-1  
Alternator and regulator, 16 amp ..... 1672-13  
Alternator, regulator, 42 amp ..... 1672-1  
Automatic control valve shutoff,  
    transmission ..... 0315-13  
    Valve control ..... 0315-13  
    Return-to-neutral linkage ..... 0315-14  
Automatic control valve variable,  
    transmission ..... 0315-10  
Automatic system control ..... 1675-1  
Axle housing ..... 0201-3  
Axle shaft, bearings and  
    reduction gears ..... 0250-1

### B

Batteries ..... 1671-3  
Battery cables ..... 1671-3  
Battery disconnect ..... 1674-2  
Battery supports ..... 1671-3  
Blades, shanks, teeth, ground  
    conditioning tool ..... 4201-3  
Bottom guards, frame ..... 1746-1  
Buckets, loader ..... 3102-3

### C

Cab ..... 1810-3  
Camshaft ..... 0402-1  
Carrier rollers ..... 0130-4  
Charging system wiring ..... 1672-1  
Cigar lighter ..... 2006-1  
Circuit protectors ..... 1674-3  
Clutch coil and housing ..... 1830-15  
Cold weather starting aids ..... 0505-3

Compressor ..... 1830-5  
Compressor hub and drive plate assembly .. 1830-8  
Compressor pulley and bearing ..... 1830-14  
Compressor relief valve ..... 1830-27  
Compressor shaft seal ..... 1830-10  
Condenser ..... 1830-21  
Connecting rods ..... 0403-1  
Control valve, loader ..... 3160-12  
Controls linkage, ground  
    conditioning tool ..... 4215-1  
Controls linkage, loader ..... 3115-1  
Counterweight ..... 1749-1  
Cowl ..... 1910-4  
Crankshaft ..... 0401-1  
Cylinder block ..... 0404-1  
Cylinder head and valves ..... 0409-1  
Cylinders, loader ..... 3160-16

### D

Diagnosing malfunctions,  
    hydrostatic system ..... 9026-31  
Diagnosing malfunctions,  
    miscellaneous components ..... 9031-1  
Double selector valve ..... 4260-1  
Double selector valve control linkage ..... 4215-1  
Drawbar ..... 1511-3

### E

Electric wiring harness ..... 1674-1  
Electrical systems ..... 1671-1  
Engine system testing ..... 9010-1  
    Component location ..... 9010-15  
    Diagnosing malfunction ..... 9010-2  
    General information ..... 9010-1  
    Testing and adjustments ..... 9010-7  
        Air intake system ..... 9010-12  
        Alternator and fan belts adjustments ... 9010-9  
        Basic engine ..... 9010-7  
        Engine cooling system ..... 9010-8  
        Engine lubrication system ..... 9010-7  
        Engine output check ..... 9010-8  
        Engine output check turbocharger  
            pressure test ..... 9010-12  
        Fuel system ..... 9010-9  
        Speed control linkage ..... 9010-11  
        Visual inspection ..... 9010-5  
Electrical system testing ..... 9015-1  
    Complete electrical schematic ..... 9015-27  
    Complete electrical wiring diagram ..... 9015-28  
    Component location ..... 9015-31

Electrical system testing —Continued

Diagnosing malfunctions .....	9015-3
Precautions .....	9015-6
Testing and adjustments .....	9015-8
Accessory circuits .....	9015-21
Air conditioning circuit .....	9015-25
Instruments and indicators .....	9015-21
Lighting circuit .....	9015-20
Miscellaneous accessories .....	9015-23
Return-to-dig circuit .....	9015-24
Charging circuit .....	9015-16
Starting circuit .....	9015-9
Engine .....	0400-3
Engine coolant heater .....	0505-5
Engine cooling system .....	0510-1
Engine oil cooler .....	9419-1
Engine side shields .....	1910-5
Evaporator .....	1830-24
Exhaust manifold .....	0410-1
Expansion valve, regulatory controls .....	1830-25
External exhaust system .....	0530-1
External fuel supply system .....	0560-1

**F**

Fan drive .....	0429-1
Filters, loader .....	3160-6
Final drive housing cover with gears and shaft .....	0250-5
Fire extinguisher .....	2003-3
Flywheel, housing and fasteners .....	0433-1
Forward and reverse speed control, transmission .....	0315-7
Control head .....	0315-8
Control linkage .....	0315-10
Frame bottom guards .....	1746-1
Frames, loader .....	3140-1
Front idler .....	0130-42
Fuel filter .....	0420-1
Fuel injection nozzles .....	0413-4
Fuel injection pump .....	0413-1
Fuel injection system .....	0413-1
Fuel transfer pump .....	0421-1

**G**

General specifications .....	I-III-1
Grille .....	1921-1
Grille housing .....	1921-1

**H**

Heater blowers .....	1830-3
Heater core .....	1830-2
Heater hoses .....	1830-3
Heating and air conditioning .....	9031-1
Heater valve .....	1830-1

Heating system .....	1830-1
Heating system testing .....	9031-1
High temperature switch .....	1830-29
Hood .....	1910-3
Hood or engine enclosures .....	1910-1
Horn .....	2004-1
Hydraulics, loader .....	3160-2
Hydraulic system testing (analyzer) .....	9025A-1
Hydraulic system testing (flow meter) .....	9025-1
Component location .....	9025-25
Diagnosing malfunction .....	9025-14
General information .....	9025-2
Operation .....	9025-4
Schematic and block diagrams .....	9025-5
Testing and adjustments .....	9025-17
Auxiliary control valve lift check test .....	9025-18
Boom control valve lift check test .....	9025-18
Bucket control valve lift check test .....	9025-18
Checking hydraulic pump flow .....	9025-19
Checking hydraulic sump .....	9025-17
Checking loader circuits for leaks .....	9025-18
Checking oil lines and hoses .....	9025-17
Circuit relief valves .....	9025-21
Hydraulic cylinder leakage test .....	9025-17
Visual inspection .....	9025-13
Hydraulic system, ground conditioning tool .....	4260-1
Hydrostatic system adjustments .....	9026-90
Hydrostatic system brake valve .....	9026-28
Hydrostatic system component location drawings .....	9026-135
Hydrostatic system control circuit diagrams .....	9026-131
Hydrostatic system diagnosing malfunctions .....	9026-31
Hydrostatic system oil cooler bypass valve .....	9026-29
Hydrostatic system testing .....	9026-1
Hydrostatic transmission .....	0360-1
Hydrostatic transmissions testing .....	9026-3
Charge pump .....	9026-6
Manifold valve assembly .....	9026-11
Motor displacement control valve .....	9026-11
Pump displacement control valve operation .....	9026-7
Transmission bypass valve operation .....	9026-12
Transmission operating pressure valve ..	9026-13

**I**

Input drive shafts and U-joints, transmission .....	0325-1
Instrument and indicators .....	1676-1

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)