


**John Deere  
JD855  
Crawler Loader**

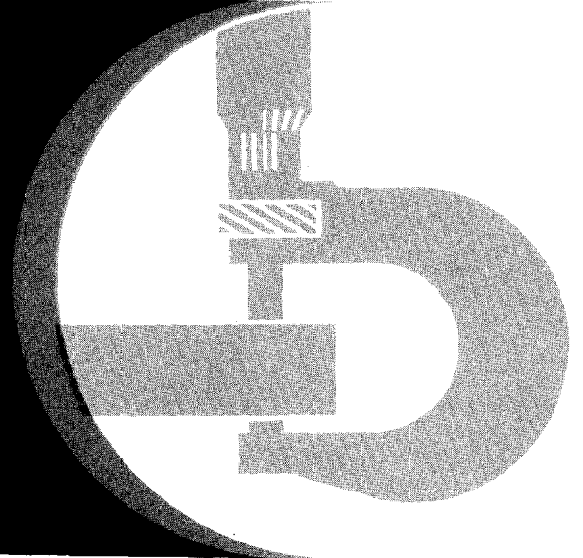

**TECHNICAL MANUAL**

**TM-1165**

Litho in U.S.A. (T) New

## SECTION AND GROUP CONTENTS OF THIS MANUAL

### SECTION I - GENERAL INFORMATION

- Group I - Contents and Index
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Fuels and Lubricants

### SECTION 1 - TRACKS

- Group 0130 - Track Systems
- Group 0199 - Specifications and Special Tools

### SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

### SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

### SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor
- Group 0423 - Alternator and Generator Mounting
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fasteners
- Group 0499 - Specifications and Special Tools

### SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling System
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust System
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply System
- Group 0599 - Specifications and Special Tools

### SECTION 8 - TRANSFER DRIVE

- Group 0841 - Housing and Covers
- Group 0851 - Gears, Shafts, Bearings
- Group 0899 - Specifications and Special Tools

### SECTION 11 - PARKING-EMERGENCY BRAKE

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1160 - Parking Brake Hydraulic
- Group 1199 - Specifications and Special Tools

### SECTION 15 - EQUIPMENT ATTACHING

- Group 1511 - Drawbar
- Group 1512 - Towbar

### SECTION 16 - ELECTRICAL SYSTEM

- Group 1671 - Batteries, Supports and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

### SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1749 - Chassis Weights

### SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1821 - Seat
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

---

**SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued**

**SECTION 19 - SHEET METAL AND STYLING**

- Group 1910 - Hood or Engine Enclosures
- Group 1913 - Miscellaneous Shields
- Group 1921 - Grille and Grille Housing
- Group 1927 - Fenders

**SECTION 20 - SAFETY, CONVENIENCE  
AND MISCELLANEOUS**

- Group 2003 - Fire Extinguisher
- Group 2004 - Horn and Warning Devices
- Group 2006 - Cigar Lighter

**SECTION 31 - LOADER**

- Group 3102 - Buckets
- Group 3115 - Controls Linkage
- Group 3140 - Loader Frames
- Group 3160 - Hydraulic System
- Group 3199 - Specifications and Special Tools

**SECTION 40 - PTO OR WINCH DRIVE**

- Group 4041 - Housing and Covers

**SECTION 42 - GROUND CONDITIONING TOOL**

- Group 4215 - Controls Linkage
- Group 4260 - Hydraulic System

**SECTION 90 - SYSTEM TESTING**

- Group 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9025A - Hydraulic System (Analyzer)
- Group 9026 - Hydrostatic System
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

## ALPHABETICAL INDEX

### A

After-sale inspection	I-IV-16 - I-IV-28
Air cleaner	I-IV-20
Air intake hose	I-IV-20
Alternator-fan compressor	
belt tension	I-IV-20 - I-IV-22
Batteries	I-IV-26
Cab air filter	I-IV-25
Charging system	I-IV-27
Engine coolant conditioner	
filter	I-IV-22
Engine crankcase oil and	
filter element	I-IV-17
Final drive housing oil level	I-IV-19
Fluid leakage	I-IV-28
Fuel tank sump	I-IV-23
Hydraulic brake (park brake)	I-IV-28
Hydraulic oil level	I-IV-18
Hydrostatic transmission	
oil level	I-IV-18
Indicator lights and gauges	I-IV-26 - I-IV-27
Lubrication	I-IV-25
Radiator coolant level	I-IV-22
Splitter gearbox oil level	I-IV-19
Track shoe cap screws	I-IV-25
Track tension adjustment	I-IV-23 - I-IV-24
Air conditioning relay	1674-4
Air conditioning system	1830-5 - 1830-30
Blower motor	1830-29
Components	1830-30
Compressor	1830-5 - 1830-20
Compressor relief valve	1830-26
Condenser	1830-21 - 1830-22
Evaporator	1830-24
Expansion valve	1830-25
High temperature switch	1830-28
Receiver - dryer	1830-23
Superheat shut-off switch	1830-27
Thermal fuse	1830-27
Thermostatic temperature control	
switch	1830-25 - 1830-26
Air conditioning system testing	9031-2 - 9031-19
Component location	9031-2 - 9031-3
Diagnosing malfunctions	9031-8
Diagnosis flow chart	9031-10
Operational diagnostic chart	9031-9
Safety precautions	9031-11
Schematic	9031-11

### Air conditioning system testing—Continued

System service	9031-12 - 9031-19
Adding refrigerant - 12 to	
system	9031-18
Charging system	9031-16 - 9031-17
Discharging system	9031-14
Electrical testing	9031-14
Evacuating system	9031-15
Flushing system components	9031-19
Inspecting refrigerant	
hoses and tubing	9031-20
Leak testing	9031-19
Operational test	9031-14
Purging the system	9031-20
Pressure gauges	9031-12 - 9031-13
Visual operating checks	9031-7
Visual preliminary checks	9031-7
Air intake system, engine	0520-1 - 0520-2
Air restriction indicator	1676-2
Alarm, reverse warning	2004-2
Alternator, 16 amp	1672-2 - 1672-13
Components	1672-4
Test after assembly	1672-13
Alternator, 50 amp	1672-14 - 1672-26
Components	1672-16
Automatic control valve shut-	
off valve control	0315-13 - 0315-14
Automatic control valve variable	
orifice linkage	0315-10 - 0315-11
Axle shaft, bearings, and	
reduction gears	0250-1 - 0250-18
Components	0250-1
Final drive housing cover with	
gears and shafts	0250-12 - 0250-18
Planet housing with pinions and	
shafts	0250-2 - 0250-11
Axles and suspension systems:	
Axle shaft, bearings and reduc-	
tion gears	0250-1 - 0250-18
Drive axle housing and support	0201-3 - 0201-6

### B

Batteries, support and cables	1671-3 - 1671-7
Charging battery	1671-7
Inspection	1671-4 - 1671-5
Testing	1671-5 - 1671-6
Battery disconnect switch	1674-2
Block, cylinder	0404-1 - 0404-6
Blower motor	1830-29

Brake valve ..... 1160-1 - 1160-4  
Brakes, parking-emergency  
  Active elements ..... 1111-3 - 1111-5  
  Controls linkage ..... 1115-1 - 1115-2  
  Hydraulic system ..... 1160-1 - 1160-4  
Brush shields ..... 1910-6  
Buckets ..... 3102-3 - 3102-4  
Bypass valve, transmission ..... 0360-38 - 0360-39

**C**

Cab ..... 1810-3 - 1810-5  
Cab relay ..... 1674-4  
Camshaft and valve actuating  
  means ..... 0402-1 - 0402-4  
Carrier rollers ..... 0130-4 - 0130-7  
Chain, track ..... 0130-13 - 0130-22  
Charge pump ..... 0360-31 - 0360-32  
Chassis weights ..... 1749-1  
Cigar, lighter ..... 2006-1  
Circuit breakers ..... 1674-5  
Clutch disconnect and controls ..... 0370-1 - 0370-6  
  Clutch elements ..... 0370-3 - 0370-6  
  Controls ..... 0370-1 - 0370-2  
Cold weather starting aids ..... 0505-3 - 0505-5  
  Engine coolant heater ..... 0505-5  
  Starting aid adapter, line  
    and nozzle ..... 0505-4  
  Starting aid solenoid ..... 0505-3 - 0505-4  
  Starting aid switch ..... 0505-4  
Component location:  
  Air conditioning system ..... 9031-2 - 9031-3  
  Electrical system ..... 9015-2 - 9015-5  
  Engine system ..... 9010-2 - 9010-4  
  Heating system ..... 9031-2 - 9031-3  
  Hydraulic system (flow meter) ..... 9025-3  
  Power train system ..... 9020-2 - 9020-3  
Compressor ..... 1830-5 - 1830-20  
Compressor relief valve ..... 1830-26  
Condenser ..... 1830-21 - 1830-22  
Connecting rods and pistons ..... 0403-1 - 0403-6  
Control valve, loader ..... 3160-13 - 3160-21  
Controls linkage, double selector  
  valve ..... 4215-3  
Coolant filter/conditioner ..... 0510-1 - 0510-3  
Cooling systems, engine ..... 0510-1 - 0510-4  
Cover, PTO ..... 4041-3  
Cowl ..... 1910-4  
Crankshaft and main bearings ..... 0401-1 - 0401-7  
  Installation ..... 0401-4 - 0401-7  
Cylinder block ..... 0404-1 - 0404-6

Cylinder, loader ..... 3160-22 - 3160-32  
Cylinder head and valves ..... 0409-1 - 0409-6  
Cylinder, track adjuster ..... 0130-29 - 0130-31

**D**

Delco-Remy starting motor ..... 0422-1 - 0422-10  
Delivery service ..... I-IV-16  
Diagnosing malfunctions:  
  Air conditioning system ..... 9031-8  
  Electrical system ..... 9015-8 - 9015-10  
  Engine system ..... 9010-5 - 9010-7  
  Heating system ..... 9031-1  
  Hydraulic system (flow meter) ..... 9025-21 - 9025-23  
  Power train system ..... 9020-10 - 9020-11  
  Track ..... 9030-1  
Double selector valve ..... 4260-1  
Double selector valve control linkage ..... 4215-3  
Drawbar ..... 1511-3  
  Components ..... 1511-3  
Drive axle housing and support ..... 0201-3 - 0201-6

**E**

Electrical sensing gauges and  
  indicators ..... 1676-4 - 1676-6  
Electrical system testing ..... 9015-1 - 9015-32  
  Block diagram ..... 9015-6  
  Component location ..... 9015-2 - 9015-5  
  Diagnosing malfunctions ..... 9015-8 - 9015-10  
  Precautions ..... 9015-11 - 9015-12  
  Schematic ..... 9015-7, 9015-31  
  Testing and adjustments ..... 9015-13 - 9015-30  
  Visual inspection ..... 9015-12  
  Wiring diagram ..... 9015-7, 9015-32  
Electrical systems:  
  Alternator, regulator and  
    charging system wiring ..... 1672-1 - 1672-26  
  Batteries, support and cables ..... 1671-3 - 1671-7  
  Instruments and indicators ..... 1676-1 - 1676-6  
  Lighting system ..... 1673-1 - 1673-2  
  System controls ..... 1675-1 - 1675-2  
  Wiring harness and switches ..... 1674-1 - 1674-6  
Engine:  
  Camshaft and valve actuating  
    means ..... 0402-1 - 0402-4  
  Connecting rods and pistons ..... 0403-1 - 0403-6  
  Crankshaft and main bearings ..... 0401-1 - 0401-7  
  Cylinder block ..... 0404-1 - 0404-6  
  Cylinder head and valves ..... 0409-1 - 0409-6  
  Engine balancer ..... 0415-1 - 0415-2  
  Exhaust manifold ..... 0410-1 - 0410-2  
  Fan drive ..... 0429-1  
  Flywheel, housing and  
    fastenings ..... 0433-1 - 0433-2

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)