


3150 Tractor

TECHNICAL MANUAL



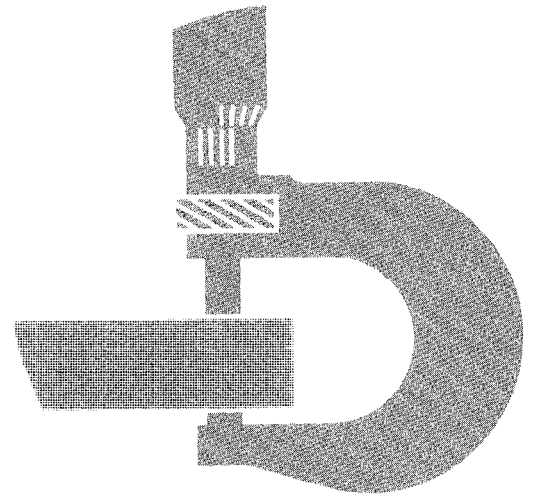

3150 TRACTOR TECHNICAL MANUAL TM-4410

SECTION CONTENTS IN GROUPS – REPAIR

10 – GENERAL

- 05 – Specifications
- 10 – Pre-delivery, delivery and after-sales inspections
- 15 – Lubrication and service
- 20 – Tune-up
- 25 – Tractor separation

20 – ENGINE

- 05 – Radiator

30 – FUEL AND AIR INTAKE SYSTEM

- 05 – Fuel tank, auxiliary tank and water trap
- 10 – Cold weather starting aids
- 15 – Speed control linkage
- 20 – Air filter

40 – ELECTRICAL SYSTEM

- 05 – Wiring harnesses
- 10 – Controls and instruments
- 15 – Lighting system
- 20 – Starting motor
- 25 – Alternator

50 – POWER TRAIN

- 05 – Clutch operating linkage
- 10 – Engine clutch
- 15 – Hi-Lo shift unit
- 20 – Transmission shift linkage
- 25 – Synchronized transmission and transmission oil pump
- 30 – Differential

- 35 – Final drives
- 40 – PTO
- 45 – Front PTO
- 50 – Front wheel drive u.j. drive shaft and disk clutch

60 – STEERING SYSTEM AND BRAKES

- 05 – Hydrostatic steering
- 10 – Hydraulic brakes
- 15 – Handbrake

70 – HYDRAULIC SYSTEM

- 05 – Valves
- 10 – Hydraulic pumps
- 15 – Rockshaft
- 20 – Front hitch
- 25 – Selective control valves (poppet valve type)
- 30 – ISO breakaway couplers
- 35 – Remote cylinder

80 – MISCELLANEOUS

- 05 – Front and rear wheels

90 – OPERATOR'S STATION

- 05 – Air conditioning system
- 10 – Cab ventilation and heating
- 15 – Operator's seat
- 20 – SOUND-GARD body
- 25 – FOUR-POST ROLL GARD

© by Deere & Co., European Office,
D-6800 Mannheim

INHALT-LA901AE-020186

SECTION CONTENTS IN GROUPS – OPERATION AND TESTS

220 – ENGINE

- 05 – Radiator
- 10 – Tests

230 – FUEL AND AIR INTAKE SYSTEM

- 05 – Fuel tank, auxiliary tank and water trap
- 10 – Cold weather starting aids
- 15 – Speed control linkage
- 20 – Air filter

240 – ELECTRICAL SYSTEM

- 05 – Operation, diagnosing malfunctions, wiring diagrams
- 10 – Testing circuits and components
- 15 – Lighting system
- 20 – Starting motor
- 25 – Alternator

250 – POWER TRAIN

- 05 – Clutch operating linkage
- 10 – Engine clutch
- 15 – Hi-Lo shift unit
- 20 – Transmission shift linkage
- 25 – Synchronized transmission and transmission oil pump
- 30 – Differential
- 35 – Final drives
- 40 – Independent PTO
- 45 – Front PTO
- 50 – Front wheel drive u.j. drive shaft and disk clutch

260 – STEERING SYSTEM AND BRAKES

- 05 – Hydrostatic steering
- 10 – Hydraulic brakes
- 15 – Handbrake

270 – HYDRAULIC SYSTEM

- 05 – Operation and tests
- 10 – Hydraulic pumps
- 15 – Rockshaft
- 20 – Front hitch
- 25 – Selective control valves (poppet valve type)
- 30 – ISO breakaway couplers
- 35 – Remote cylinder

290 – OPERATOR'S STATION

- 05 – Air conditioning system
- 10 – Cab ventilation and heating

INHALT-LA902AE-020186

Group 10 GENERAL

CONTENTS OF THIS SECTION IN GROUPS

05 – SPECIFICATIONS

Specifications	10-05-1
– Serial number plates	10-05-1
– Product identification number	10-05-1
– Engine serial number	10-05-1
– Transmission serial number	10-05-1
– Front wheel drive serial number	10-05-2
– SOUND-GARD Body serial number	10-05-2
– ROLL-GARD serial number	10-05-2
– Model serial numbers	10-05-3
– Engine	10-05-4
– Engine clutch	10-05-5
– Cooling system	10-05-5
– Fuel system	10-05-5
– Electrical system	10-05-5
– Synchronized transmission	10-05-5
– Hi-Lo shift unit	10-05-5
– Differential and final drives	10-05-6
– Differential lock	10-05-6
– PTO	10-05-6
– Front PTO	10-05-6
– PTO speeds	10-05-6
– Front wheel drive	10-05-7
– Hydrostatic steering	10-05-7
– Foot brakes	10-05-7
– Hand brake	10-05-7
– Hydraulic system	10-05-7
– Rockshaft	10-05-7
– Front hitch	10-05-7
– Ground travel speeds	10-05-7
– Front and rear wheels	10-05-8
– Dimensions and weights	10-05-8
– Capacities	10-05-8
– Standard torques for hardware	10-05-8

10 – PREDELIVERY, DELIVERY AND AFTER-SALES INSPECTIONS

Special tools	10-10-1
Specifications	10-10-2
Capacities	10-10-3
Torques for hardware	10-10-3
Predelivery inspection	10-10-4
Delivery inspection	10-10-20
After-sales inspection	10-10-21

15 – LUBRICATION AND SERVICE

Specifications	10-15-1
Capacities	10-15-1
Service intervals	10-15-1
Lubrication and service intervals	10-15-2
Capacities and service period	10-15-3
General	10-15-4
Engine oil	10-15-4
Transmission/hydraulic oil	10-15-5
Oil for mechanical front wheel drive	10-15-5
EP multi-purpose grease	10-15-6
Storing lubricants	10-15-6
Brake fluid for clutch operating system	10-15-6
Engine coolant	10-15-7
Checking engine oil level	10-15-7
Changing engine oil	10-15-8
Changing engine oil filter	10-15-8
Checking fuel filter	10-15-9
Replacing fuel filter	10-15-9
Replacing coolant	10-15-10
Checking transmission/hydraulic system oil level	10-15-11
Changing transmission/hydraulic oil	10-15-12
Replacing transmission/hydraulic oil filter element	10-15-13

ALLGEM-LA91001AE-091285

CONTENTS OF THIS SECTION IN GROUPS

15 – LUBRICATION AND SERVICE (Contd.)

Cleaning hydraulic pump filter
strainer 10-15-13
Replacing brake fluid for clutch
operating system 10-15-13
Checking axle housing oil level 10-15-14
Checking oil level in wheel hub
 housings 10-15-14
Changing axle housing oil 10-15-14
Changing wheel hub housing oil 10-15-14
Cleaning lubricating points 10-15-15
Lubricating universal-jointed
drive shaft 10-15-15
Lubricating front axle carrier 10-15-15
Lubricating oscillating support 10-15-15
Lubricating front wheel drive axle 10-15-16
Lubricating three-point hitch 10-15-16
Lubricating rear axle bearings 10-15-16
Lubricating front hitch 10-15-16

20 – TUNE-UP

Specifications 10-20-1
Preliminary engine testing 10-20-2
Checking air cleaner element 10-20-3
Checking air intake system connections
for leaks 10-20-3
Checking crankcase vent tube for
clogging 10-20-3
Cleaning radiator side panels and
grille screens 10-20-3
Cleaning radiator and oil cooler 10-20-4
Cleaning condenser 10-20-4
Checking radiator cap 10-20-4
Checking radiator for leaks 10-20-4
Checking thermostats 10-20-5
Checking fuel transfer pump 10-20-5
Checking fuel filter 10-20-5
Checking fuel tank 10-20-6
Checking auxiliary fuel tank 10-20-6
Cleaning water trap 10-20-6
Checking fuel injection pump
adjustment 10-20-6
Checking engine slow and fast
idle speeds 10-20-7
Checking speed control linkage
adjustment 10-20-7
Checking batteries 10-20-7
Checking fan belt tension 10-20-8
Checking compressor belt tension 10-20-8

Checking lighting system 10-20-8
Checking operation of start safety
switch 10-20-8
Checking operation of starting
motor 10-20-9
Final engine check 10-20-9
Checking tractor operation 10-20-9

25 – TRACTOR SEPARATION

Special tools 10-25-1
Torques for hardware 10-25-5
Capacities 10-25-7
Standard torques for hardware 10-25-7
Important notes 10-25-9
Removing tractor front end 10-25-10
Installing tractor front end 10-25-17
Separating between engine and clutch
housing 10-25-19
Joining tractor between engine
and clutch housing 10-25-27
Removing engine 10-25-30
Installing engine 10-25-31
Removing clutch housing 10-25-32
Installing clutch housing 10-25-33
Removing transmission 10-25-34
Installing transmission 10-25-40
Removing final drives 10-25-44
Installing final drives 10-25-52
Removing rockshaft 10-25-55
Installing rockshaft 10-25-57
Removing front wheel drive axle 10-25-59
Installing front wheel drive axle 10-25-61
Removing SOUND-GARD Body or
ROLL-GARD 10-25-64
Installing SOUND-GARD Body or
Roll-Gard 10-25-74
Removing front hitch 10-25-77
Installing front hitch 10-25-80
Removing front PTO 10-25-82
Installing front PTO 10-25-84

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com