

317 Hydrostatic Tractor



TECHNICAL MANUAL

317 Hydrostatic Tractor

TM1208 (01OCT81) English

John Deere Lawn & Grounds Care Division TM1208 (01OCT81)

> LITHO IN U.S.A. ENGLISH



INTRODUCTION

This technical manual contains service and maintenance information for the John Deere 317 Hydrostatic Tractor.

The manual is divided into sections. Each section pertains to a certain component or operational system of the tractor. The information is divided into groups within each section.

All sections of this technical manual should be carefully studied by the service technician. Much basic information such as the principles of 4-cycle engine operation, carburetion and ignition have been omitted. Such information can be found in any good library and is recommended reading for the new service technician before consulting this manual for service procedures.

Emphasis is placed on diagnosing malfunctions, analysis and testing. Diagnosing malfunctions lists possible troubles, their causes and how to correct them. Under specific components these troubles are analyzed to help the service technician understand what is causing the problem so it can be corrected rather than just replace parts and have the same problem keep recurring.

Specifications are found at the end of each Section for easy reference.



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Metric equivalents have been included, where applicable, throughout this technical manual.

Vertical lines appear in the margins of many of the pages. These lines identify new material and revised information that affects specifications, procedures, and other important instructions.

JOHN DEERE 317 HYDROSTATIC TRACTOR

Technical Manual TM-1208 (Oct-81)

TABLE OF CONTENTS

SECTION 10 - GENERAL SECTION 40 - ELECTRICAL SYSTEM Group 5 - Tractor Identification Group 5 - General Information Group 10 - Cranking System Group 7 - Tractor and Engine Change Identifica-Group 15 - Ignition System Group 10 - Specifications Group 20 - Charging System Group 15 - Fuel and Lubricants Group 25 - Lights Group 20 - Tune-up and Adjustments Group 30 - PTO Clutch SECTION 20 - ENGINE - SER. NO. SECTION 50 - POWER TRAIN Group 5 - General Information -11,025,872) (Group 5 - General Information Group 10 - Brakes Group 10 - Cylinder Heads, Valves and Breather Group 15 - Hydrostatic Transmission Group 15 - Engine Removal and Installation Group 20 - Hydrostatic Control Linkage Group 20 - Internal Components Group 25 - Differential and Axle Group 25 - Specifications SECTION 60 - HYDRAULIC SYSTEM SECTION 22 - ENGINE - SER. NO. Group 5 - General Information (11,025,873-Group 10 - Hydraulic Circuit Group 5 - General Information Group 15 - Hydraulic Control Valve Group 10 - Cylinder Heads, Valves and Breather Group 17 - Flow Diverter Valve Group 15 - Engine Removal and Installation Group 20 - Hydraulic Cylinder Group 20 - Internal Components SECTION 70 - MISCELLANEOUS Group 25 - Specifications Group 5 - Steering Linkage SECTION 30 - FUEL SYSTEM Group 10 - Front Wheels and Axles Group 5 - General Information SECTION 80 - SPECIAL SERVICE TOOLS Group 10 - Carburetor - Engine Serial Group 5 - Engine Essential Service Tools No. (-11.053.429) Group 10 - Engine Convenience Service Tools Group 12 - Carburetor - Engine Serial Group 15 - Tractor Convenience Service Tools No. (11,053,430-Group 15 - Governor SECTION 90 - TRACTOR ATTACHMENTS Group 20 - Fuel Tank Group 5 - 49 Snow Thrower Group 25 - Fuel Pump Group 10 - 41 and 48 Rotary Mowers Group 30 - Air Cleaner - Engine Serial Group 15 - 33 Rotary Tiller No. (-11,025,872) Group 20 - 542 PTO Attachment Group 32 - Air Cleaner - Engine Serial No. (11,025,873-11,053,429) Group 34 - Air Cleaner - Engine Serial No. (11,053,430-Group 35 - Specifications

(All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice).

Copyright ® 1981 Deere & Company Previous Editions Copyright ® 1980 Deere & Company Copyright ® 1978 Deere & Company

Section 10 GENERAL

TABLE OF CONTENTS


Page	Page
GROUP 05 - TRACTOR IDENTIFICATION	GROUP 15 - FUELS AND LUBRICANTS
Tractor Serial Number 5-01	Fuel
Engine Serial Number	Choose Proper Engine Oil 15-02
Transmission Serial Number5-01	Choose Proper Hydraulic Oil
	Choose Proper Grease 15-03
GROUP 07 - TRACTOR AND ENGINE	Capacities
CHANGE IDENTIFICATION	Service Intervals
General	Check Transmission Fluid Level 15-04
Tractor Serial No. (-156,000) 7-01	Change Transmission Fluid and Filter 15-05
Tractor Serial No. (156,001-160,062) 7-04	Check Engine Oil Level 15-05
Tractor Serial No. (160,063-) 7-05	Change Engine Oil
	Lubricate Linkage
GROUP 10 - SPECIFICATIONS	
Tractor Specifications	GROUP 20 - TUNE-UP AND ADJUSTMENTS
Bolt Torque Chart	General
Set Screw Seating Torque Chart 10-02	Engine Tune-up
ı	Tractor Adjustment

1208/1005A/080781

Group 05 TRACTOR IDENTIFICATION


TRACTOR SERIAL NUMBER

The tractor serial number plate (A) is located on the pedestal just above the key switch.

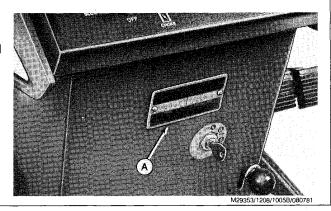


ENGINE SERIAL NUMBER

The engine serial number plate (A) is located on top of the blower housing.

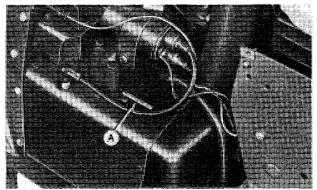

TRANSMISSION SERIAL NUMBER

The transmission serial number (A) is located above the oil filter on the front of the transmission.

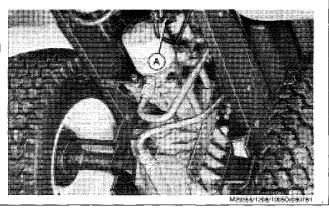

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com