


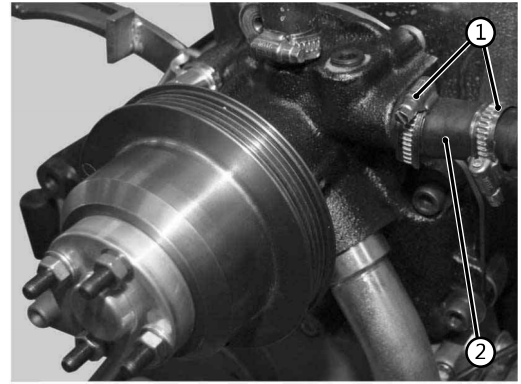

Engine coolant pump


If the coolant line was not previously removed, loosen clamps (1) and disconnect hose (2).



1.

Loosen the clamps and disconnect hoses (3).

Loosen screw (4) and remove alternator support (5).

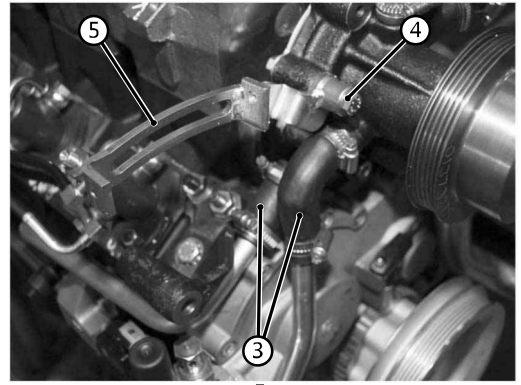


2.

Unscrew screw (6) and remove pipe (7).




NOTE

Renew oil seal (8) on reassembly.

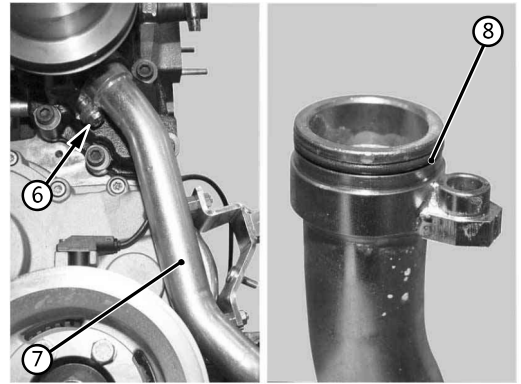

3.

Loosen and remove the four screws (9) with washer then remove engine coolant pump (10).

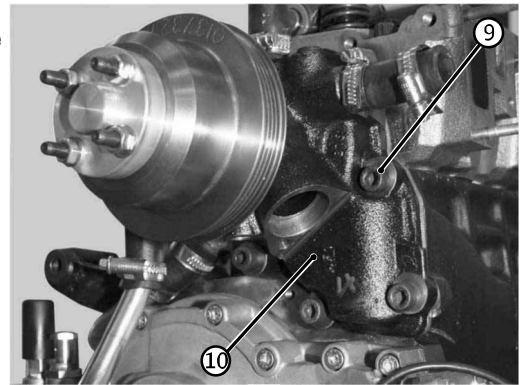


4.

Remove gasket (11).

NOTE



Renew gasket (11) after every removal.

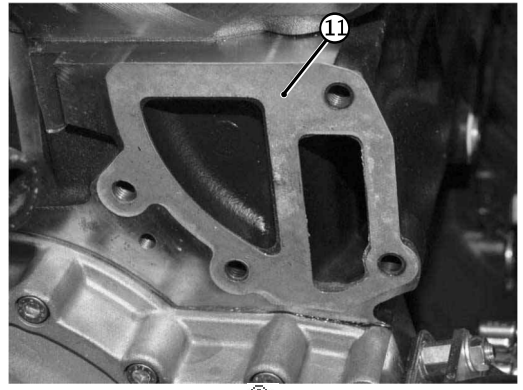

5.


T.\$37.21.B0.09.01.00.01 - v1



Thermostatic valve

Removal

Loosen clamps (1), undo screw (2) and remove pipe (3).

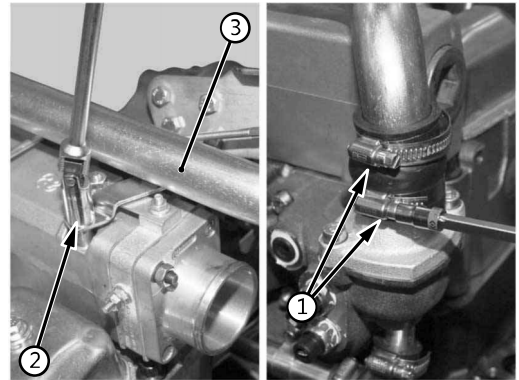


1.

Loosen and remove screws (4) and remove cover (5) and gasket (6).




NOTE

Renew the gasket at each disassembly.

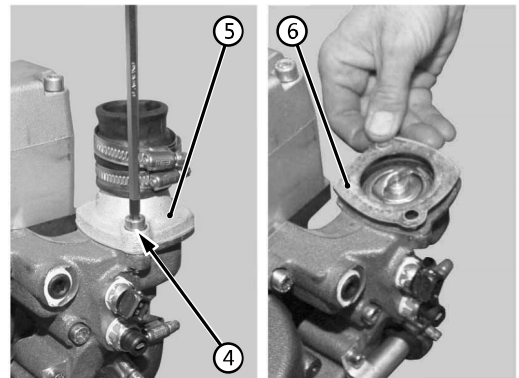

2.

Remove thermostatic valve (7).

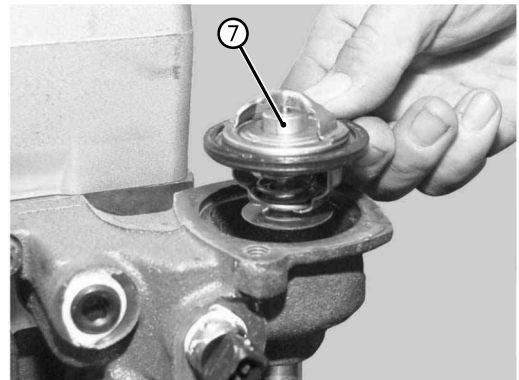

3.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com