

Service Information

Document Title:Function Group:Engine, description200		Information Type: Service Information	Date: 2015/3/16
Profile: EXC, EC330B LC [GB]			

Go back to Index Page

Engine, description

Machine serial no. EC330B: 10001 ~ 10235, EC360B: 10001 ~ 10828

The engine is a straight six cylinder, four stroke, direct injection diesel with 9.6 liter cylinder volume, turbocharged, inter cooled and electronic controlled fuel injection, EMS (Engine Management System), with a cast iron block and cylinder head. The cylinder block and head are designed with internal passages formed as sets for lubrication and cooling. An engine driven power take off for a hydraulic pump can be provided for the D10 as extra equipment.

Structure, fuel filter side view



Figure 1 Engine, fuel filter side view

- 1. Fuel feed pump
- 2. Fuel filter
- 3. Engine oil filter (bypass)
- 4. EMS (Engine Management System)
- 5. Fuel inlet
- 6. Water outlet
- 7. Engine PTO (Power Take Off)
- 8. Fan drive and pulley
- 9. Oil cooler
- 10. Engine oil filter (full)
- 11. Breather

Structure, turbocharger side view



Figure 2 Engine, turbocharger side view

- 1. Fuel pump
- 2. Turbocharger
- 3. Cooler block heater (1 3/4" -16UN 2B)
- 4. Cab heater supply (1/2" 14UPSI)
- 5. Engine lifting eye
- 6. Coolant filter heater (1/2" 14UPSI)
- 7. Starter
- 8. Fuel shut off solenoid
- 9. Dipstick
- 10. Oil drain valve
- 11. Oil pan
- 12. Coolant filter return (M 22 × 1.5)
- 13. Cab heater return (M 22 × 1.5)

Structure, top view



Engine, top view

- 1.
- Air intake port Oil filter (bypass) 2.
- Coolant vent 3.
- 4. Air exhaust port

Structure, front side view



Figure 4 Engine, front side view

- Dipstick gauge 1.
- 2. Water inlet
- 3. Alternator

Structure, rear side view



Engine, rear side view

- 1. Fuel filter
- 2. Oil filter (bypass)
- 3. Oil cooler
- 4. Flywheel housing



Document Title: Engine, description	Document Title:Function Group:Engine, description200		Date: 2015/3/16
Profile: EXC, EC330B LC [GB]			

Go back to Index Page

Engine, description

Machine serial no. EC330B: 10236 ~ 10712, EC360B: 10829 ~ 12151

- D12C EC(D,E)E2 is the model number of the volvo 12 liter engine for the EC330B/360B excavator.
- The engine is a 6-cylinder, 4-stroke, direct injection diesel with a 12 liter cylinder volume, turbocharger, charged air cooler and electronic controlled fuel injection, EMS (Engine Management System).
- The serial number of the engine is to be found stamped in the cylinder block on the rear left side.
- The cylinder head is of cast iron and manufactured in one piece which is necessary in order to provide stable bearings for the overhead camshaft.
- The cylinder liner is sealed against the coolant casing with rubber rings.
- The D12C EC(D,E)E2 has a four-valve system and overhead camshaft.
- The engine timing gear transmission is located at the front of the engine on a 10 mm thick steel plate bolted to the cylinder block.
- The crankshaft is drop forged and has induction hardened bearing surfaces and fillets.
- The engine is force fed lubricated by an oil pump which is gear driven from the engine crankshaft via an intermediate gear
- The fuel system for D12C EC(D,E)E2 has electronic control with unit injectors one for each cylinder and which operate at a very high pressure.
- The fuel feed pump is a gear driven type and is driven from the engine timing gear with the same gear.

Engine, structure



Figure 1 Engine, structure 1

View A :fuel pump side View B : front side		B : front side	Detail C : Power Take Off (option)		
1	Fan drive and pulley	7	Speed sensor	13	Lifting bracket
2	Fuel pump	8	Starter	14	To charged air cooler
3	EMS (Engine Management System)	9	Breather	15	Fan belt
4	Dipstick gauge	10	Oil pan	16	Crankshaft pulley
5	Fuel feed pump	11	Oil drain valve	17	Belt tensioner
6	Remote fuel filter	12	From charged air cooler	18	Power take off drive





View B

Figure 2 Engine, structure 2

View A : top side		View B : turbocharger side			View C : rear side	
1	From charged air cooler	6	Alternator	11	Turbocharger	
2	Engine oil filter	7	To charged air cooler	12	Flywheel	
3	Flywheel housing	8	Valve cover	13	Power take off (option)	
4	Starter	9	Lifting bracket	14	Coolant pump	
5	Breather	10	Oil filler cap			

V1021865



Document Title:	Function Group:	Information Type:	Date:				
Engine, description	200	Service Information	2015/3/16				
Profile: EXC, EC330B LC [GB]							

Go back to Index Page

Engine, description

Machine serial no. EC330B: 10713 ~ , 80001 ~ , EC360B: 12152 ~ , 80001 ~

Model	Engine model number	Machine serial number
EC330B	D12DEBE2	10712 ~
	D12DEBE3	80001 ~
EC360B	D12DEBE2	12152 ~
	D12DEBE3	80001 ~

- D12DEBE2 and D12DEBE3 are the model number of the Volvo 12 liter engine.
- The engine is a 6-cylinder, 4-stroke, direct injection diesel with a 12 liter cylinder volume, turbocharger, charged air cooler and electronic controlled fuel injection, EMS (Engine Management System).
- The serial number of the engine is to be found stamped in the cylinder block on the rear left side.
- The cylinder head is of cast iron and manufactured in one piece which is necessary in order to provide stable bearings for the overhead camshaft.
- The cylinder liner is sealed against the coolant casing with rubber rings.
- The D12DEBE2 and D12DEBE3 have a four-valve system and overhead camshaft.
- The engine timing gear transmission is located at the front of the engine on a 10 mm thick steel plate bolted to the cylinder block.
- The crankshaft is drop forged and has induction hardened bearing surfaces and fillets.
- The engine is force fed lubricated by an oil pump which is gear driven from the engine crankshaft via an intermediate gear
- The fuel system for D12DEBE2 and D12DEBE3 have electronic control with unit injectors one for each cylinder and which operate at a very high pressure.
- The fuel feed pump is a gear driven type and is driven from the engine timing gear with the same gear.



Figure 1 D12DEBE2 Engine, structure

А	Water from engine	В	To charged air cooler		
1	Crankshaft pulley	9	Fuel filter	17	Breather
2	Belt tensioner	10	Alternator	18	Starter
3	Water from engine	11	Fan drive and pulley	19	Speed sensor
4	Lifting bracket	12	Air-condenser compressor	20	Fuel pump
5	ITo charged air cooler	13	Alternator belt	21	Engine oil filter
6	Fuel feed pump	14	Fan belt	22	Water separator
7	E-ECU	15	Oil pan	23	Flywheel housing
8	Coolant temperature sensor	16	Oil drain valve	24	Engine oil filter



Figure 2 D12DEBE3 Engine, structure

А	Form charged air cooler	В	To charged air cooler		
1	Crankshaft pulley	9	Fuel filter	17	Breather
2	Belt tensioner	10	Alternator	18	Starter
3	Intake to charged air cooler	11	Fan drive and pulley	19	Speed sensor
4	Lifting bracket	12	Air-condenser compressor	20	Fuel pump
5	To charged air cooler	13	Alternator belt	21	Engine oil filter
6	Fuel feed pump	14	Fan belt	22	Water separator
7	E-ECU	15	Oil pan	23	Flywheel housing
8	Coolant temperature sensor	16	Oil drain valve	24	Engine oil filter



Service Information

Document Title:	Function Group:	Information Type:	Date:
Valves, adjusting	214	Service Information	2015/3/16
Profile: EXC, EC330B LC [GB]			

Valves, adjusting

Op nbr 214-012

88820003 Setting tool 9993590 Gear wheel

Feeler gauge



Risk of burns - stop the diesel engine and allow it to cool down before starting any work.

- 1. Place the machine in service position B. See <u>091 Service positions</u>
- 2. Open the engine hood.
- 3. Remove step (1).





4. Remove crankcase ventilation hose (1).



V1043982

Figure 2 Removal, crankcase ventilation hose

5. Remove valve cover (1).



Figure 3 Removal, valve cover

6. Remove the protective cover on the flywheel housing and install tool 9993590, an extension and a ratchet handle.



Figure 4 9993590, extension and ratchet handle

Adjusting inlet valve

7. Turn the flywheel with tool 9993590 until the nearest dash marking on the camshaft is between the marks on the bearing cap.

NOTE!

The number identifies the cylinder for which both inlet and exhaust valves are in correct position for adjusting.

NOTE!

Cylinder 1 is closest to the engine timing gear.



Figure 5 Camshaft marking

 Loosen lock nut (2) on the rocker arm and adjust screw (1) to get the correct valve clearance according to <u>214 Valve mechanism, double rocker arm</u> and tighten the lock nut. Tightening torque: see <u>214 Valve mechanism, tightening torques</u>



Figure 6

- 1. Adjusting screw
- 2. Lock nut
- 3. Feeler gauge

Adjusting exhaust valve

 Loosen lock nut (2) on the rocker arm and adjust screw (1) to get the correct valve clearance according to <u>214 Valve mechanism, double rocker arm</u> and tighten the lock nut. Tightening torque: see <u>214 Valve mechanism, tightening torques</u>





- 1. Adjusting screw
- 2. Lock nut
- 3. Feeler gauge

10. Check-measure the valve clearance according to 214 Valve mechanism, double rocker arm.

NOTE!

Before checking the double rocker arm's clearance, check that the exhaust valve clearance is correct according to <u>214 Valve mechanism, double rocker arm</u>

Checking, double rocker arm (IEGR)

11. Loosen the drain nipple and drain air and oil from the double rocker arm.





Our support email: ebooklibonline@outlook.com