

# Nos. 202 and 202H Two-Bottom Two-Way Tractor Plows



## OPERATORS MANUAL

Nos. 202 and 202H Two-Bottom  
Two-Way  
Tractor Plows

OMA311052 (01OCT52) English

OMA311052 (01OCT52)

LITHO IN U.S.A.  
ENGLISH



# *your new plow*

Behind your new plow is an organization that has specialized in designing and building plows for over one hundred and ten years. This plow was built in the world's largest plow factory by experienced men, many who have worked in this large plant for from ten to forty-five years, thus assuring the utmost in good design, high-grade workmanship, and thorough inspection, so essential to the production of good plows.

High-quality materials, precision production methods, and accurately-controlled heat-treating assure maximum strength and long life for every part.

This manual has been carefully prepared and profusely illustrated, so that you may make the necessary adjustments for adapting your plow to work properly in practically all types of soil and field conditions. These adjustments, such as proper hitching and adjusting for width and depth of cut, are fully covered in this manual, which has been prepared by plow experts. Study the manual carefully and make it your guide.

Occasionally your plow may need new parts to replace worn parts, or emergency service may be required that is not covered in this manual. If so, we suggest that you take advantage of the facilities offered by your John Deere dealer, which assure you of genuine JOHN DEERE Parts and prompt "know-how" service in the field or shop.


If you will furnish your dealer the part number, description, and the information which should be recorded at the bottom of this page, when the plow is delivered, he can give you prompt and efficient service.

**John Deere No. 202 or 202H Two-Way Tractor Plow**

No. of Plow ..... Date Purchased ..... 19.....  
(To be filled in by Purchaser)

# TABLE OF CONTENTS

	<i>Page</i>
IDENTIFICATION OF PLOW PARTS.....	2-3
SPECIFICATIONS.....	4
OPERATING AND ADJUSTING INSTRUCTIONS.....	5-11
Depth and Leveling.....	9
Enclosed Lifting Clutch.....	10
Hitch.....	6-7-8
Hitch Lock Control.....	8
Jointer.....	11
Powr-Trol Remote Cylinder.....	6
Reducing Plow.....	11
Rolling Coulter.....	10-11
MAINTENANCE SUGGESTIONS.....	12-13
Hardening Soft Center Steel Shares.....	12
Plow Bottoms, Coulters and Jointers.....	12
Setting Shares.....	12
Sharpening the Coulter Blade.....	13
Sharpening the Share.....	12
Care of Pneumatic Tires.....	13
LUBRICATION.....	13-14
SETTING-UP INSTRUCTIONS.....	15-21
Assemble Truck.....	16
Attaching Beams to Truck.....	18
Beam Bundles.....	17
Clutch Trip Ropes.....	20
Hitch and Rope Guide.....	16
Hitch Lock Control.....	20
Hose Support.....	21
Jointers.....	20
Latch Control Arm.....	18
Lifting Frame.....	19
Lock Control Arm and Crank.....	17
Remote Cylinder.....	21
Rolling Coulters.....	20
Shipping Bundles.....	15
INDEX TO PARTS LIST.....	23
PARTS LISTS AND ILLUSTRATIONS.....	24-53
NUMERICAL INDEX.....	54-56

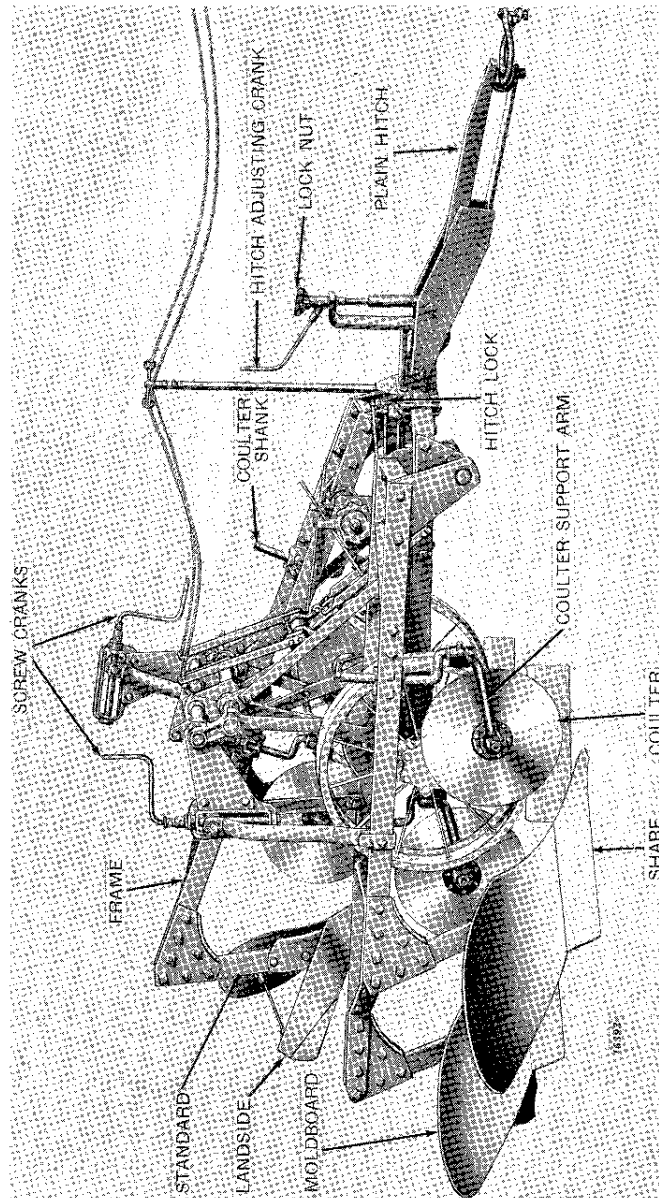

*Figure 1—No. 202 Two-Way Flow*

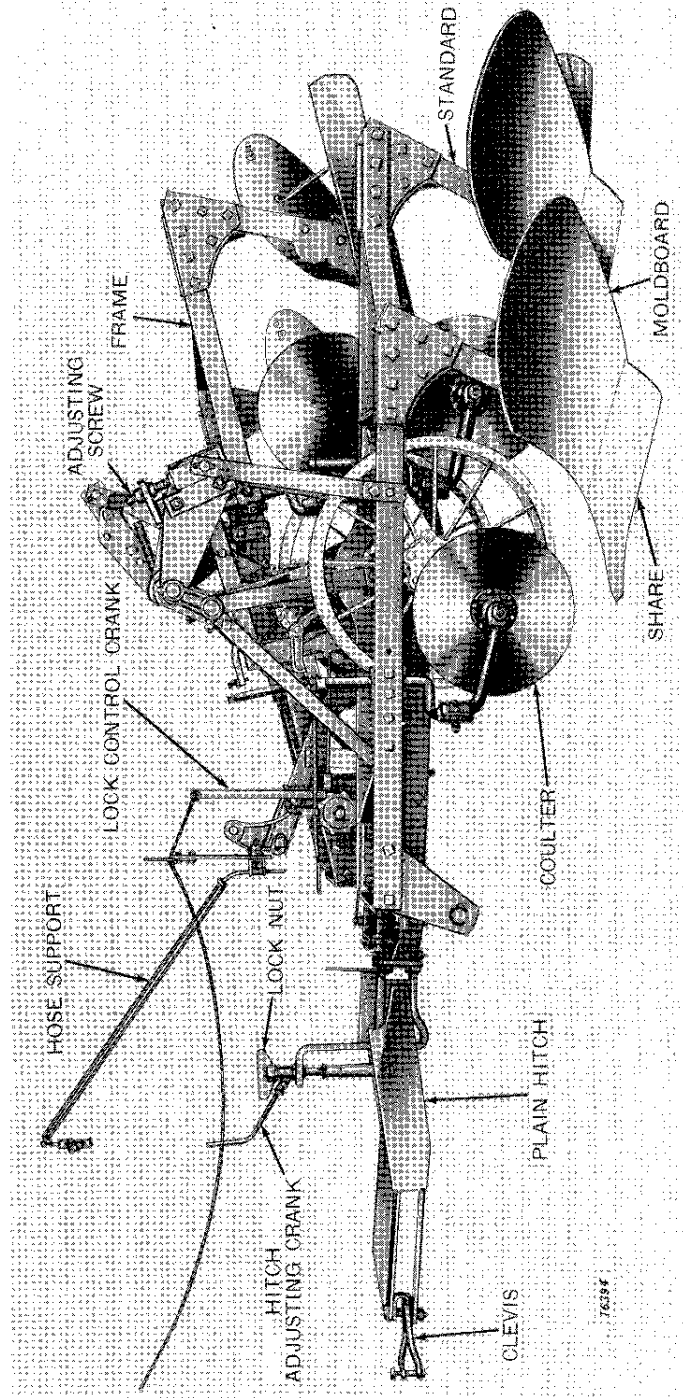


Figure 2—No. 202H Two-Way Plow

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)