

8560

(001673-)

8760


(002653-)

8960

(001768-)

Tractors

**OPERATORS
MANUAL**

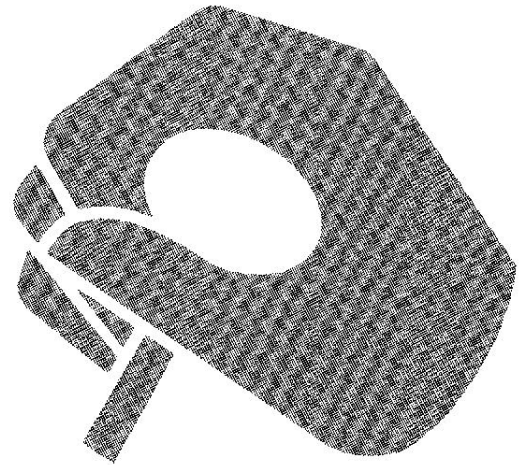

John Deere Waterloo Works
OMAR109479 Issue B0
(Mark old manual OMRW25626K9 for
machines up to Serial No. above.)

LITHO IN U.S.A.

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



RW15247
-JUN-07DEC88

Contents

	Page		Page
Safety	05-1	12-Speed Syncro and 24-Speed POWRSYNC® Transmission	45-2
Safety Signs	10-1	Power Shift Transmission	45-6
Controls and Instruments		Three-Point Hitch	
Control Location	15-1	Component Identification	50-1
Instrument Identification	15-3	Hitch Control Lever	50-2
Gauges and Indicators Description	15-3	Sway Blocks	50-5
Tachometer	15-7	Attaching Implement Hitch	50-6
Performance Monitor	15-10	Adjusting Implement Level	50-7
Radar Sensor	15-16	Removing Implement	50-8
Lighting and Signals		Remote Hydraulic Cylinders	
Switch	20-1	Hose Tips	55-1
Lamps and Signals	20-1	Identifying SCV	55-1
Electrical Outlets	20-4	Connecting Cylinder Hoses	55-2
Load Center	20-6	Operating SCV	55-4
Operator's Station		Setting Remote Cylinder Stroke	55-6
SOUND-GARD® Body Temperature Controls	25-1	Disconnecting Cylinder Hoses	55-7
Window Wipers	25-3	Drawbar and PTO	
Windows	25-3	Drawbar Adjustments	60-1
Radio	25-4	Power Take-Off (PTO)	60-3
Seat	25-7	Ballast	
Steering Wheel	25-10	Importance of Ballast	65-1
Engine Break-in	30-1	Measuring Wheel Slip	65-2
Prestarting Checks	35-1	Determining Ballast	65-5
Operating the Engine		Wheels, Tires, and Treads	
Start-up Procedures	40-1	Wheel Tightening	70-1
Cold Weather Starting	40-4	Tread Width Limitations	70-3
Starting Aids	40-5	Adjusting Tread Width	70-5
Warm-up and Operation	40-7	Steering Stops	70-8
Stopping the Engine	40-10	Inflation Pressure	70-9
Operating the Tractor		Transporting	
Brakes	45-1	Driving	75-1
Differential Lock	45-1	Carrier	75-3
		Towing	75-4

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR109479 B0-19-06MAR90

COPYRIGHT® 1990
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

	Page		Page
Fuels, Lubricants, and Coolant			
Fuel	80-1	Lighting	135-27
Engine Oil	80-4	Brakes	135-33
Coolant	80-5	Heating	135-37
Transmission/Hydraulic Oil	80-6	Air Conditioner	135-37
Lubricants	80-8	Rollover Protective Structure	135-40
Lubricant Storage	80-8		
Lubrication and Maintenance/10 Hour ...	85-1	Storage	
Lubrication and Maintenance/After 100 Hours	90-1	Placing Tractor in Storage	140-1
Lubrication and Maintenance/250 Hours ..	95-1	Removing Tractor From Storage	140-4
Lubrication and Maintenance/500 Hours ...	100-1	Crime Prevention Tips	145-1
Lubrication and Maintenance/750 Hours ...	105-1	Specifications	
Lubrication and Maintenance/1500 Hour ...	110-1	General	150-1
Lubrication and Maintenance/Annually ...	115-1	Ground Speeds	150-4
Lubrication and Maintenance/2 Year	120-1	Identification Numbers	
Lubrication and Maintenance/As Required	125-1	Identification Plates	155-1
Operational Checkout and Troubleshooting		Daily Maintenance	160-1
Operational Checkout	130-1	Lubrication and Maintenance Records ...	165-1
Engine	130-14		
Transmission	130-17		
Drive Line	130-17		
Hydraulic System	130-18		
Brakes	130-19		
Axles	130-19		
3-Point Hitch and Quick-Coupler	130-20		
Remote Hydraulic Cylinders	130-21		
Electrical	130-22		
SOUND-GARD® Body	130-24		
Service			
Access	135-1		
Air Cleaner	135-3		
Fuel System	135-6		
Cooling System	135-11		
Belts	135-17		
Electrical	135-22		
Fuses	135-26		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



O53.ALERT -19-26JAN90

T81389 -JUN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



O53.SIGNAL -19-26JAN90


TS187 -19-30SEP88

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

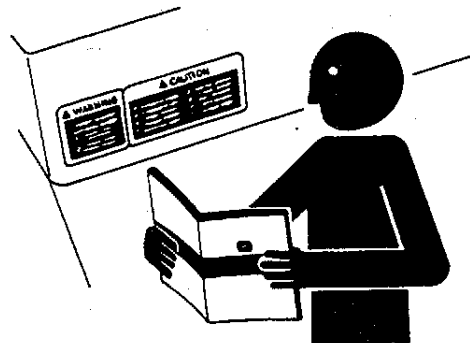

O53.READ -19-26JAN90

TS201 -JUN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com