

4055

(003397-)

4255

(003934-)

4455

(006676-)

Tractors

John Deere Waterloo Works

OMAR110015 Issue K0

**(Mark old manual OMRW25629K9 for
machines up to Serial No. above.)**

North American Edition

LITHO IN U.S.A.

ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



RW17680
-UN-30OCT89

Contents

	Page		Page
Safety	05-1	QUAD-RANGE™ Transmission	45-6
Safety Signs	10-1	Mechanical Front-Wheel Drive (MFWD)	45-10
Controls and Instruments		Rockshaft and 3-Point Hitch	
Control Location	15-1	Component Identification	50-1
Instrument Identification	15-2	Rockshaft Control Lever	50-1
Indicators Description	15-3	Rockshaft Selector Lever	50-3
Tachometer	15-5	Rate-of-Drop	50-5
Performance Monitor	15-8	Sway Blocks	50-5
Radar Sensor	15-14	Hitch	50-6
		Connecting Implement	50-10
		Hi-Crop Hitch	50-15
Lighting and Signals		Remote Hydraulic Cylinders	
Switch	20-1	Hose Tips	55-1
Lamps	20-1	Identifying SCV	55-1
Electrical Outlets	20-3	Connecting Cylinder Hoses	55-2
Operator's Station		Operating SCV	55-4
SOUND-GARD® Body Temperature		Setting Remote Cylinder Stroke	55-6
Controls	25-1	Disconnecting Cylinder Hoses	55-7
Window Wipers and Washers	25-2	Adjusting SCV Linkage	55-8
Windows	25-3	Drawbar and PTO	
Radio	25-4	Drawbar Adjustments	60-1
Seat	25-7	Power Take-Off (PTO)	60-4
Steering Wheel	25-11	Ballast	
Engine Break-in	30-1	Importance of Ballast	65-1
Prestarting Checks	35-1	Measuring Wheel Slip	65-2
Operating the Engine		Rear Ballast	65-4
Start-up Procedure	40-1	Front Ballast	65-7
Cold Weather Starting	40-5	Installing QUICK-TATCH™ Weights	65-10
Starting Aids	40-7	Wheels, Tires and Treads	
Warm-Up and Operation	40-9	Wheel Tightening	70-1
Stopping the Engine	40-12	Front Wheel Spacing	70-4
Operating the Tractor		Toe-in	70-6
Brakes	45-1	Toe-in (MFWD)	70-8
Differential Lock	45-2	Rear Wheel Spacing	70-10
Power Shift Transmission	45-3	Tire Pressures	70-27

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR110015 K0-19-14NOV90

COPYRIGHT© 1990
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

	Page		Page
MFWD Wheel Spacing	70-28	Cooling System	130-13
Front Fender Adjustment	70-32	Electrical	130-18
Transporting		Fuses	130-23
Driving	75-1	Lighting	130-25
Carrier	75-4	Brakes	130-31
Towing	75-4	Tires	130-32
Fuels, Lubricants and Coolants		Heating and Air Conditioner	130-35
Fuel	80-1	ROPS	130-39
Engine Oil	80-4	Storage	
Engine Coolant	80-5	Placing Tractor in Long-Term Storage	135-1
Transmission-Hydraulic Oil	80-6	Short-Term Idle Periods	135-4
Lubricants	80-7	Removing Tractor From Storage	135-5
Lubrication and Maintenance		Crime Prevention Tips	140-1
First 100 Hours	85-2	Specifications	
Lubrication and Maintenance/10 Hour	90-1	General	145-1
Lubrication and Maintenance/250 Hour	95-1	Ground Speeds	145-5
Lubrication and Maintenance/750 Hour	100-1	Identification Numbers	150-1
Lubrication and Maintenance/1500 Hour	105-1	Daily Maintenance	155-1
Lubrication and Maintenance/Annual	110-1	Lubrication and Maintenance Records	160-1
Lubrication and Maintenance/2 Year	115-1	Index	
Lubrication and Maintenance/As Required	120-1		
Troubleshooting			
Engine	125-1		
Transmission	125-4		
Hydraulic System	125-5		
Brakes	125-5		
Rockshaft 3-Point Hitch	125-6		
Remote Hydraulic Cylinders	125-7		
Electrical	125-8		
SOUND-GARD Body	125-10		
Service			
Access	130-1		
Air Cleaner	130-4		
Belts	130-7		
Fuel System	130-10		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

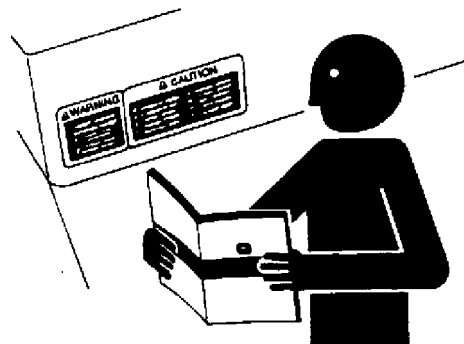

DX,READ -19-04JUN90

TS201 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com