

**8560**  
(P.I.N. 002331- )

**8760**  
(P.I.N. 004322- )

**8960**  
(P.I.N. 002939- )

**Tractors**

**John Deere Waterloo Works**  
**OMAR110222 Issue G1**  
**(Mark old manual OMAR110222A1 for**  
**machines up to Serial No. above.)**  
North American Edition  
LITHO IN U.S.A.  
ENGLISH

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT AND LEFT sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



RW19143 -JUN-18DEC90

# Contents

|   | Page  |  | Page  |
|---|-------|--|-------|
| <b>Safety</b> .....                     | 05-1  | 12-Speed Syncro and 24-Speed<br>POWRSYNC® Transmission ..... | 45-2  |
| <b>Safety Signs</b> .....               | 10-1  | Power Shift Transmission .....                               | 45-6  |
| <b>Controls and Instruments</b>         |       | <b>Three-Point Hitch</b>                                     |       |
| Control Location .....                  | 15-1  | Component Identification .....                               | 50-1  |
| Instrument Identification .....         | 15-3  | Hitch Control Lever .....                                    | 50-2  |
| Gauges and Indicators Description ..... | 15-3  | Sway Blocks .....  | 50-5  |
| Tachometer .....                        | 15-7  | Attaching Implement Hitch .....                              | 50-5  |
| Performance Monitor .....               | 15-10 | Adjusting Implement Level .....                              | 50-7  |
| Radar Sensor .....                      | 15-16 | Removing Implement .....                                     | 50-8  |
| <b>Lighting and Signals</b>             |       | <b>Remote Hydraulic Cylinders</b>                            |       |
| Switch .....                            | 20-1  | Hose Tips .....  | 55-1  |
| Lamps and Signals .....                 | 20-1  | Identifying SCV .....  | 55-2  |
| Electrical Outlets .....                | 20-4  | Connecting Cylinder Hoses .....                              | 55-3  |
| Load Center .....                       | 20-6  | Operating SCV .....  | 55-5  |
| <b>Operator's Station</b>               |       | Setting Remote Cylinder Stroke .....                         | 55-7  |
| SOUND-GARD® Body Temperature            |       | Disconnecting Cylinder Hoses .....                           | 55-8  |
| Controls .....                          | 25-1  | <b>Drawbar and PTO</b>                                       |       |
| Window Wipers .....                     | 25-3  | Drawbar Adjustments .....                                    | 60-1  |
| Windows .....                           | 25-3  | Power Take-Off (PTO) .....                                   | 60-3  |
| Radio .....                             | 25-4  | <b>Ballast</b>   |       |
| Seat .....                              | 25-7  | Importance of Ballast .....                                  | 65-1  |
| Steering Wheel .....                    | 25-10 | Measuring Wheel Slip .....                                   | 65-2  |
| <b>Engine Break-in</b> .....            | 30-1  | Determining Ballast .....                                    | 65-5  |
| <b>Prestarting Checks</b> .....         | 35-1  | <b>Wheels, Tires, and Treads</b>                             |       |
| <b>Operating the Engine</b>             |       | Wheel Tightening .....                                       | 70-1  |
| Start-up Procedures .....               | 40-1  | Tread Width Limitations .....                                | 70-3  |
| Cold Weather Starting .....             | 40-4  | Adjusting Tread Width (Steel) .....                          | 70-7  |
| Starting Aids .....                     | 40-5  | Adjusting Tread Width (Cast) .....                           | 70-9  |
| Warm-up and Operation .....             | 40-7  | Steering Stops .....   | 70-11 |
| Stopping the Engine .....               | 40-10 | Inflation Pressure .....                                     | 70-12 |
| <b>Operating the Tractor</b>            |       | <b>Transporting</b>  |       |
| Brakes .....                            | 45-1  | Driving .....  | 75-1  |
| Differential Lock .....                 | 45-1  | Carrier .....  | 75-3  |
|   |       | Towing .....   | 75-4  |

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMAR110222 G1-19-24JUN91

COPYRIGHT© 1991  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual

Contents

|  | <b>Page</b>  |  | <b>Page</b>  |
|--|--------------|--|--------------|
| <b>Fuels, Lubricants, and Coolant</b>                        |              |  |              |
| Fuel . . . . .   | 80-1         | Brakes . . . . .                                     | 135-32       |
| Engine Oil . . . . .   | 80-4         | Heating . . . . .                                    | 135-35       |
| Coolant . . . . .  | 80-5         | Air Conditioner . . . . .                            | 135-36       |
| Transmission/Hydraulic Oil . . . . .                         | 80-6         | Rollover Protective Structure . . . . .              | 135-39       |
| Lubricants . . . . .   | 80-7         |  |              |
| Lubricant Storage . . . . .                                  | 80-8         | <b>Storage</b>                                       |              |
|  |              | Placing Tractor in Storage . . . . .                 | 140-1        |
| <b>Lubrication and Maintenance/10 Hour . . . . .</b>         | <b>85-1</b>  | Removing Tractor From Storage . . . . .              | 140-3        |
|  |              | <b>Crime Prevention Tips . . . . .</b>               | <b>145-1</b> |
| <b>Lubrication and Maintenance/After 100 Hours . . . . .</b> | <b>90-1</b>  |  |              |
|  |              | <b>Specifications</b>                                |              |
| <b>Lubrication and Maintenance/250 Hours . . . . .</b>       | <b>95-1</b>  | General . . . . .                                    | 150-1        |
|  |              | Ground Speeds . . . . .                              | 150-4        |
| <b>Lubrication and Maintenance/500 Hours . . . . .</b>       | <b>100-1</b> | <b>Identification Numbers</b>                        |              |
|  |              | Identification Plates . . . . .                      | 155-1        |
| <b>Lubrication and Maintenance/750 Hours . . . . .</b>       | <b>105-1</b> | <b>Daily Maintenance . . . . .</b>                   | <b>160-1</b> |
|  |              | <b>Lubrication and Maintenance Records . . . . .</b> | <b>165-1</b> |
| <b>Lubrication and Maintenance/1500 Hour . . . . .</b>       | <b>110-1</b> |  |              |
|  |              | <b>Index</b>   |              |
| <b>Lubrication and Maintenance/Annually . . . . .</b>        | <b>115-1</b> |  |              |
|  |              |  |              |
| <b>Lubrication and Maintenance/2 Year . . . . .</b>          | <b>120-1</b> |  |              |
|  |              |  |              |
| <b>Lubrication and Maintenance/As Required . . . . .</b>     | <b>125-1</b> |  |              |
|  |              |  |              |
| <b>Troubleshooting</b>                                       |              |  |              |
| Engine . . . . .   | 130-1        |  |              |
| Transmission . . . . .                                       | 130-4        |  |              |
| Drive Line . . . . .   | 130-4        |  |              |
| Hydraulic System . . . . .                                   | 130-5        |  |              |
| Brakes . . . . .   | 130-6        |  |              |
| Axles . . . . .  | 130-6        |  |              |
| 3-Point Hitch and Quick-Coupler . . . . .                    | 130-7        |  |              |
| Remote Hydraulic Cylinders . . . . .                         | 130-8        |  |              |
| Electrical . . . . .   | 130-9        |  |              |
| SOUND-GARD® Body . . . . .                                   | 130-11       |  |              |
|  |              |  |              |
| <b>Service</b>   |              |  |              |
| Access . . . . .   | 135-1        |  |              |
| Air Cleaner . . . . .  | 135-3        |  |              |
| Fuel System . . . . .  | 135-6        |  |              |
| Cooling System . . . . .                                     | 135-11       |  |              |
| Belts . . . . .  | 135-17       |  |              |
| Electrical . . . . .   | 135-21       |  |              |
| Fuses . . . . .  | 135-26       |  |              |
| Lighting . . . . .   | 135-27       |  |              |

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

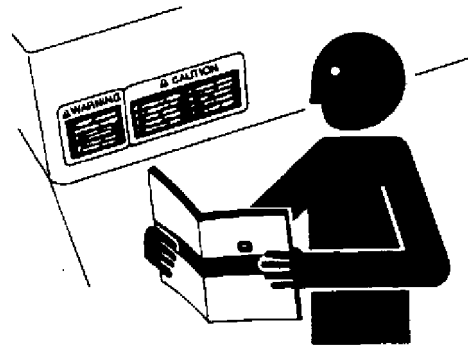

DX,READ -19-04JUN90

TS201 -UN-23AUG88

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)