

4055, **4255,**
(P.I.N. 003397-) (P.I.N. 003934-)
4455, **4755,**
(P.I.N. 006676-) (P.I.N. 003767-)
and 4955
(P.I.N. 004650-)
Tractors

John Deere Waterloo Works
OMAR110280 Issue K0
(Mark old manual OMRW25631K9 for
machines up to Serial No. listed)
European Edition
LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer in order to guarantee the reliable operation of the machine.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural operations. Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.

Contents

	Page		Page
Identification View	00-1	Operating the Tractor	
Safety	05-1	Emergency Steering	45-1
Safety Signs	10-1	Brakes	45-2
Controls and Instruments		Secondary Brake	45-2
Controls		Differential Lock	45-3
SOUND-GARD Body	15-1	Transmission Operation	45-3
Tractor	15-1	Mechanical Front-Wheel Drive (MFWD)	45-5
Shift Console	15-2	Rockshaft and Three-Point Hitch	
Instrument Identification	15-2	Component Identification	50-1
Signals Description	15-3	Rockshaft Controls	
Indicators Description	15-4	4055, 4255 and 4455 Tractors	50-1
Tachometer Functions	15-6	4755 and 4955 Tractors	50-6
Performance Monitor Functions	15-9	Rockshaft Troubleshooting—4755 and	
Lighting and Signals		4955 Tractors	50-13
Switch	20-1	Sway Blocks	50-13
Lamps	20-2	Hitch Conversion—4055, 4255 and 4455	
Electrical Outlets	20-3	Tractors	50-15
Operator's Station		Attaching Implement—4055, 4255 and	
SOUND-GARD Body Temperature		4455 Tractors	50-16
Controls	25-1	Adjusting Implement—4055, 4255 and	
Window Wipers and Washer	25-2	4455 Tractors	50-19
Rear Window	25-3	Removing Implement—4055, 4255 and	
Seat	25-3	4455 Tractors	50-20
Steering Wheel	25-6	Implement Hitch—Hook Type Draft Links	
Engine Break-in	30-1	Attaching—4755 and 4955 Tractors	50-21
Prestarting Checks	35-1	Attaching—4755 and 4955 Tractors	50-22
Operating the Engine		Removing—4755 and 4955 Tractors	50-24
Start-up Procedure	40-1	Attaching Implement to Quick	
Cold Weather Starting	40-5	Coupler—4755 and 4955 Tractors	50-25
Starting Aids	40-7	Adjusting Level with Quick Coupler—4755	
Warm-up and Operation	40-9	and 4955 Tractors	50-27
Stopping the Engine	40-12	Adjusting Level with Walterscheid	
		Hitch—4755 and 4955 Tractors	50-27
		Removing Implement—4755 and 4955	
		Tractors	50-28
		Trailer Hitch	50-30
		Remote Hydraulic Cylinders	
		Hose Tips	55-1
		Identifying SCV	55-1

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR110280 K0-19-27MAR91

COPYRIGHT© 1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

Page	Page
Connecting Cylinder Hoses	55-2
Operating SCV	55-3
Lever Locks and Lockouts	55-6
Remote Cylinder Adjustments	55-7
Disconnecting Cylinder Hoses	55-8
Adjusting SCV Linkage	55-8
Drawbar and PTO	
Drawbar Loads	60-1
Drawbar Adjustments	60-1
Clevis Assembly	60-4
Power Take-Off (PTO) Master Shield	60-5
PTO Stub Shaft—4055, 4255 and 4455 Tractors	60-6
PTO Adapter	60-7
Attaching PTO Driven Implement	60-7
Operating PTO	60-8
Ballast	
Importance of Ballast	65-1
Measuring Wheel Slip	65-2
Rear Ballast	65-3
Front Ballast	65-5
Installing QUIK-TATCH Weights	65-7
Wheels, Tires and Treads	
Wheel Tightening	70-1
Axle Cover	70-2
Rear Wheel Tread Settings	70-2
Adjusting Rear Wheels	70-5
Reversing Wheels	70-7
Inflation Pressures	70-9
MFWD Toe-In	70-10
MFWD Wheel Spacing	70-12
MFWD Steering Stops	70-15
Front Fender Adjustment	70-18
Tire Combinations	70-22
Transporting	
Driving	75-1
Hauling	75-4
Towing	75-5
Fuels, Lubricants and Coolant	
Fuel	80-1
Engine Oil	80-2
Engine Coolant	80-3
Transmission-Hydraulic Oil	80-4
Lubricants	80-5
Lubrication and Maintenance	
Break-In Service	85-2
Service Intervals Chart	85-3
Lubrication and Maintenance/10 Hour	90-1
Lubrication and Maintenance/250 Hour	95-1
Lubrication and Maintenance/750 Hour	100-1
Lubrication and Maintenance/1500 Hour	105-1
Lubrication and Maintenance/Annual	110-1
Lubrication and Maintenance/2 Year	115-1
Lubrication and Maintenance/As Required	120-1
Troubleshooting	
Engine	125-1
Transmission	125-4
Hydraulic	125-5
Brakes	125-5
Rockshaft 3-Point Hitch	125-6
Remote Hydraulic Cylinders	125-8
Electrical	125-9
SOUND-GARD Body	125-11
Service	
Access	130-1
Air Cleaner	130-4
Belts	130-7
Fuel System	130-9
Cooling System	130-12
Electrical	130-18
Fuses	130-22
Lighting	130-24
Brakes	130-31
Tires	130-32
Heating and Air Conditioning	130-34
Roll-Over Protective Structure (ROPS)	130-38
Storage	135-1
Specifications	
General	140-1
Ground Speed Charts	140-5
Torque Chart	140-7

Continued on next page

Contents

Page

Identification Numbers

Serial Number Plates 145-1

Daily Maintenance 150-1

Lubrication and Maintenance Records . . . 155-1

Index

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com