

**8570, 8770, 8870  
and 8970  
Tractors**

**John Deere Waterloo Works**  
**OMAR112116 Issue A6**  
**(This manual replaces OMAR112116 G4)**  
North American Edition  
LITHO IN U.S.A.  
**ENGLISH**

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File

the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

## CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



8770 Tractor

RW55709  
-JUN-20DEC95

RXIFC,704WD -19-19DEC95

# Contents

	Page		Page
<b>Safety</b> .....	05-1	<b>Operating the Tractor</b>	
<b>Safety Signs</b> .....	10-1	Brakes .....	45-2
<b>Controls and Instruments</b>		Differential Lock .....	45-2
Control Location .....	15-1	Transmission	
Instrument Identification .....	15-3	12-Speed Syncro and 24-Speed	
Gauges and Indicators Description .....	15-3	POWRSYNC® .....	45-3
Tachometer .....	15-7	Power Shift .....	45-7
Performance Monitor .....	15-10	<b>Hitch</b>	
Radar Sensor .....	15-16	Component Identification .....	50-1
<b>Lights</b>		Hitch Control Lever .....	50-1
Switch .....	20-1	Sway Blocks .....	50-8
Lights and Signals .....	20-1	Implement	
Electrical		Attaching .....	50-8
Outlets .....	20-4	Adjusting Level .....	50-10
Load Center .....	20-6	Removing .....	50-11
<b>Operator Station</b>		<b>Remote Hydraulic Cylinders</b>	
SOUND-GARD® Body Temperature		Hose Tips .....	55-1
Controls .....	25-1	Identifying SCV .....	55-2
Window Wipers .....	25-3	Connecting Cylinder Hoses .....	55-2
Windows .....	25-3	Operating SCV .....	55-4
Radio .....	25-4	Setting Remote Cylinder Stroke .....	55-6
Seat .....	25-7	Disconnecting Cylinder Hoses .....	55-7
Steering Wheel .....	25-10	<b>Drawbar and PTO</b>	
<b>Engine Break-in</b> .....	30-1	Drawbar Adjustments .....	60-1
<b>Prestarting Checks</b> .....	35-1	Power Take-Off (PTO) .....	60-3
<b>Operating the Engine</b>		<b>Optimum Performance/Ballast</b>	
Start-up Procedures .....	40-1	Guidelines .....	65-1
Cold Weather Starting .....	40-4	Importance of Ballast .....	65-1
Starting Aids .....	40-5	Power Hop .....	65-3
Warm-up and Operation .....	40-7	Inflation Pressures .....	65-8
Field Cruise .....	40-9	Measuring Wheel Slip .....	65-10
Stopping the Engine .....	40-11	<b>Wheels, Tires, and Treads</b>	
		Wheel Tightening .....	70-1

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMAR112116 A6-19-21FEB97

COPYRIGHT© 1996  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1994, 1993 Deere & Company

Contents

	Page		Page
Tread Width		Inspect Tractor For Loose Bolts	100-8
Limitations	70-3	Rollover Protective Structure	100-9
Adjusting (Steel)	70-6	Check Neutral Start System	100-9
Adjusting (Cast)	70-9	Check Brakes	100-10
Steering Stops	70-12	Inspect Fire Extinguisher	100-10
		Lubricate Hitch Sensor	100-11
<b>Transporting</b>		<b>Service/500 Hours</b>	
Driving	75-1	Lubricate Axle Bearings	105-1
Carrier	75-3	Check Coolant Conditioner	105-1
Towing	75-4	Replace Fuel Filters	105-2
<b>Fuels, Lubricants, and Coolant</b>		<b>Service/750 Hours</b>	
Fuel	80-1	Change Transmission Oil Filter (12-Speed and 24-Speed)	110-1
Engine		Change Hydraulic Oil Filter	110-1
Oil	80-3	Check Hoses	110-1
Break-in Oil	80-4	Clean Crankcase Vent Tube	110-2
Coolant	80-5	Drain Fuel Tank Sump	110-2
Transmission and Hydraulic Oil	80-7	Inspect Hydraulic Pump Screen and Reservoir Breather	110-2
Lubricants	80-8	Inspect Fuel Tank Breather	110-3
Lubricant Storage	80-9	<b>Service/1000 Hours</b>	
<b>Service</b>		Adjust Engine Valve Clearance	115-1
Engine Access	85-2	Change Transmission Oil (Power Shift)	115-1
Battery Compartment Access	85-3	<b>Service/1500 Hours</b>	
High-Pressure Washers	85-4	Change Transmission Oil (12-Speed and 24-Speed)	120-1
First 100 Hours—After 100 Hours	85-5	Change Hydraulic and Differential Oil	120-2
Service Interval Chart	85-6	Clean Front Axle Suction Screen	120-3
<b>Service/Daily or Every 10 Hours</b>		Check Fuel Injection Nozzle	120-3
Coolant Level	90-1	Clean Transmission Sump Screen	120-3
Tires	90-2	Service Cooling System	120-4
Engine Oil Level	90-3	<b>Service/2000 Hours</b>	
Water Separator	90-3	Adjust Engine Valve Clearance	125-1
Transmission Oil Level	90-3	<b>Service/Annually</b>	
Hydraulic Oil Level	90-4	Replace Air Filters	130-1
Hinge Pins	90-4	Replace AQS Filter	130-2
Axle Bearings	90-4	Lubricate Hitch Sensor	130-2
Lift Cylinders	90-5	Check Engine Mounts	130-3
<b>Service/After 100 Hours</b>	95-1	<b>Service/2 Year</b>	
<b>Service/250 Hours</b>		Service Cooling System	135-1
Lubricate Driveline Bearings	100-1	Replace Thermostats	135-1
Clean SGB Air Filter	100-2		
Lubricate Hitch	100-2		
Change Engine Oil and Filters	100-3		
Oil Filter (Power Shift)	100-3		
Service Batteries	100-4		
Check and Adjust Belt Tensions	100-6		

Continued on next page

Contents

	Page		Page
<b>Service/As Required</b>		<b>Identification Numbers</b>	
Replace Air Filters . . . . .	140-1	Identification Plates . . . . .	165-1
Clean AQS Filter . . . . .	140-3	<b>Daily Maintenance</b> . . . . .	170-1
Clean Evaporator/Heater Core . . . . .	140-3	<b>Lubrication and Maintenance Records</b> . . . . .	175-1
Change Transmission Filter . . . . .	140-3	<b>John Deere Service Keeps You On The Job</b>	
Replace Hydraulic Filter . . . . .	140-4	<b>Index</b>	
Clean Hydraulic Filter Charge Makeup Screen . . . . .	140-4		
Check Engine Oil Filler Cap . . . . .	140-4		
Replace Fuel Filters . . . . .	140-5		
Bleed Fuel System . . . . .	140-6		
Drain Fuel Tank Sump . . . . .	140-10		
Bleed Brakes . . . . .	140-10		
Clean Hydraulic Reservoir Sump Screen . . . . .	140-11		
Clean Exhaust Stack and Muffler Area . . . . .	140-11		
Clean Engine Compartment . . . . .	140-11		
Inspect Engine Crankshaft Damper . . . . .	140-13		
Inspect Transmission Drive Shaft Damper . . . . .	140-13		
Adjust Park Brake . . . . .	140-13		
Replace Fan Belts . . . . .	140-14		
Replace Batteries . . . . .	140-15		
Check Electrical Load Center . . . . .	140-16		
Fuses . . . . .	140-17		
Lighting . . . . .	140-18		
Adjust Head Lights . . . . .	140-21		
Connecting Starter and Alternator . . . . .	140-22		
Servicing Air Conditioner . . . . .	140-23		
Check Hydraulic Hoses . . . . .	140-25		
<b>Troubleshooting</b>			
Engine . . . . .	145-1		
Transmission . . . . .	145-4		
Drive Line . . . . .	145-4		
Hydraulic System . . . . .	145-5		
Brakes . . . . .	145-6		
Axles . . . . .	145-6		
Hitch and Quick-Coupler . . . . .	145-7		
Remote Hydraulic Cylinders . . . . .	145-9		
Electrical . . . . .	145-10		
SOUND-GARD® Body . . . . .	145-12		
Tractor Operation . . . . .	145-13		
<b>Storage</b> . . . . .	150-1		
<b>Crime Prevention Tips</b> . . . . .	155-1		
<b>Specifications</b> . . . . .	160-1		
Ground Speeds . . . . .	160-4		
Torque Charts . . . . .	160-6		
Battery Warranty . . . . .	160-8		

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)