

4560, 4760, and 4960 Tractors

**John Deere Waterloo Works
OMAR112280 Issue B3**

North American Edition

**LITHO IN U.S.A.
ENGLISH**

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



RW19361
-JUN-08MAY91

RXLCR,IFC -19-09DEC92

Contents

	Page		Page
Safety	05-1	Operating the Tractor	
Safety Signs	10-1	Brakes	45-1
Controls and Instruments		Differential Lock	45-2
Control Location	15-1	Power Shift Transmission	45-3
Instrument Location	15-1	QUAD-RANGE™ Transmission	45-6
Indicator Description	15-4	Mechanical Front-Wheel Drive (MFWD)	45-10
Tachometer	15-6		
Performance Monitor	15-8	Rockshaft and Three-Point Hitch	
Radar	15-14	Component Identification	50-1
Lighting and Signals		Rockshaft Controls	50-2
Switch	20-1	Rockshaft Control Lever	50-5
Lamps	20-2	Rate-of-Drop	50-6
Electrical Outlets	20-3	Rockshaft Raise/Lower Limit Switch	50-8
Operator Station		Rockshaft System Troubleshooting	50-9
SOUND-GARD® Body Temperature		Sway Blocks	50-10
Controls	25-1	Hitch Conversion	50-11
Window Wipers and Washers	25-2	Attaching Implement Hitch	50-13
Windows	25-2	Adjusting Implement Level	50-15
Radio	25-4	Removing Implement	50-16
Tape Player	25-6		
Seat Belt	25-7	Remote Hydraulic Cylinders	
Seat	25-7	Hose Tips	55-1
Steering Wheel	25-11	Identifying SCV	55-1
Engine Break-in	30-1	Connecting Cylinder Hoses	55-2
Prestarting Checks	35-1	Operating SCV	55-4
Operating the Engine		Setting Remote Cylinder Stroke	55-6
Start-up Procedure	40-1	Disconnecting Cylinder Hoses	55-7
Cold Weather Starting	40-5	Adjusting SCV Linkage	55-8
Starting Aids	40-5	Drawbar and PTO	
Booster Battery	40-9	Drawbar Adjustments	60-1
Warm-Up and Operation	40-9	Power Take-Off (PTO)	60-4
Stopping the Engine	40-12	Ballast	
		Guidelines	65-1
		Measuring Wheel Slip	65-2
		Determining Ballast	65-3
		Liquid Weight	65-5
		Rear Cast Iron Weights	65-6

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR112280 B3-19-02FEB93

COPYRIGHT© 1993
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1991 Deere & Company

	Page		Page
Implement Codes	65-7	Lubrication and Maintenance/2 Year	120-1
Quik-Tatch Weights	65-8	Lubrication and Maintenance/As Required	125-1
Wheels, Tires and Treads		Troubleshooting	
Guidelines	70-1	Engine	130-1
Implement-To-Tire Clearance	70-2	Transmission	130-4
Inflation Pressures	70-3	Hydraulic System	130-5
MFWD Tire Combinations	70-10	Brakes	130-5
Tightening Wheel and Axle Bolts	70-11	Rockshaft 3-Point Hitch	130-6
MFWD Wheels	70-12	Remote Hydraulic Cylinders	130-7
Front Axle, Wheels, Tread Settings	70-13	Electrical	130-8
Adjusting	70-14	SOUND-GARD Body	130-9
Check Toe-In	70-14	Service	
Adjustable	70-15	Access	135-1
MFWD	70-16	Air Cleaner	135-4
MFWD Tread Settings	70-18	Belts	135-6
Steering Stops	70-23	Fuel System	135-9
Adjust Front Fenders	70-29	Cooling System	135-12
Adjusting Rear Wheels	70-30	Electrical	135-18
Rear Tread Settings	70-35	Fuses	135-22
Dual Wheel Hub Extensions	70-40	Lighting	135-24
Transporting		Starter	135-29
Driving	75-1	Brakes	135-30
Carrier	75-3	Tires	135-31
Towing	75-4	Heating and Air Conditioner	135-33
Fuels, Lubricants and Coolant		ROPS	135-36
Fuel	80-1	Storage	
Engine Oil	80-4	Placing Tractor in Storage	140-1
Engine Coolant	80-5	Short-Term Idle Periods	140-4
Transmission-Hydraulic Oil	80-6	Removing Tractor From Storage	140-5
Lubricants	80-7	Crime Prevention Tips	145-1
Lubrication and Maintenance		Specifications	
First 100 Hours	85-2	General	150-1
Lubrication and Maintenance/10 Hour	90-1	Ground Speeds	150-5
Lubrication and Maintenance/250 Hour	95-1	Identification Numbers	155-1
Lubrication and Maintenance/750 Hour	100-1	Lubrication and Maintenance Records	160-1
Lubrication and Maintenance/1000 Hour	105-1	Index	
Lubrication and Maintenance/1500 Hour	110-1		
Lubrication and Maintenance/Annual	115-1		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-09JAN92

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

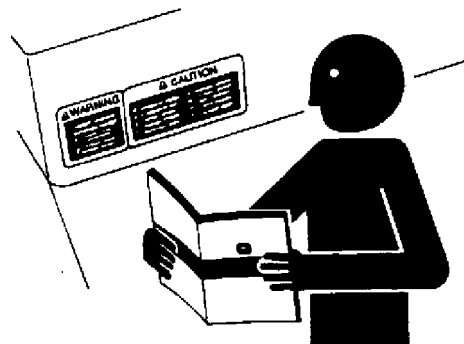

DX,READ -19-04JUN90

TS201 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com