

4755 and 4955 (P.I.N. 010001-) (P.I.N. 010001-) **Tractors**

John Deere Waterloo Works
OMAR112286 Issue D3
(This manual replaces OMAR110570 G1)
European Edition
LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer in order to guarantee the reliable operation of the machine.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural operations. Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.

Contents

	Page		Page
Identification View	00-1	Stopping the Engine	40-10
Safety	05-1	Operating the Tractor	
Safety Signs	10-1	Emergency Steering	45-1
Controls and Instruments		Brakes	45-2
Controls		Secondary Brake	45-2
SOUND-GARD Body	15-1	Differential Lock	45-3
Tractor	15-1	Transmission Operation	45-3
Shift Console	15-2	Mechanical Front-Wheel Drive (MFWD)	45-5
Instrument Identification	15-2	Rockshaft and Three-Point Hitch	
Signals Description	15-3	Component Identification	50-1
Indicators Description	15-4	Rockshaft Controls	
Tachometer Functions	15-6	Rockshaft Troubleshooting	50-10
Performance Monitor Functions	15-9	Implement Hitch—Hook Type Draft Links	
Lighting and Signals		Attaching Implement to Quick	
Switch	20-1	Coupler—4755 and 4955 Tractors	50-16
Lamps	20-2	Adjusting Level with Quick Coupler—4755	
Electrical Outlets	20-3	and 4955 Tractors	50-18
Operator Station		Adjusting Level with Walterscheid	
SOUND-GARD Body Temperature		Hitch—4755 and 4955 Tractors	50-18
Controls	25-1	Removing Implement	50-19
Window Wipers and Washer	25-2	Hitch Conversion	50-20
Rear Window	25-2	Trailer Hitch	50-21
Seat	25-3	Remote Hydraulic Cylinders	
Steering Wheel	25-6	Hose Tips	55-1
Engine Break-in	30-1	Identifying SCV	55-1
Prestarting Checks	35-1	Connecting Cylinder Hoses	55-2
Operating the Engine		Operating SCV	55-3
Start-up Procedure	40-1	Lever Locks and Lockouts	55-6
Cold Weather Starting	40-5	Remote Cylinder Adjustments	55-7
Starting Aids	40-6	Disconnecting Cylinder Hoses	55-8
Warm-up and Operation	40-8	Adjusting SCV Linkage	55-8
		Drawbar and PTO	
		Drawbar Loads	60-1
		Clevis Assembly	60-3
		Power Take-Off (PTO) Master Shield	60-3
		PTO Adapter	60-5

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR112286 D3-19-08APR93

COPYRIGHT© 1993
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1991 Deere & Company

Page	Page
Attaching PTO Driven Implement 60-5	Lubrication and Maintenance/Annual 115-1
Operating PTO 60-6	Lubrication and Maintenance/2 Year 120-1
Ballast	Lubrication and Maintenance/As
Guidelines 65-1	Required 125-1
Measuring Wheel Slip 65-2	Troubleshooting
Determining Ballast 65-3	Engine 130-1
Liquid Weight 65-4	Transmission 130-4
Rear Cast Iron Weights 65-5	Hydraulic 130-5
Installing QUIK-TATCH Weights 65-6	Brakes 130-5
Wheels, Tires and Treads	Rockshaft Three-Point Hitch 130-6
Guidelines 70-1	Remote Hydraulic Cylinders 130-7
Implement-To-Tire Clearance 70-2	Electrical 130-8
Inflation Pressures 70-3	SOUND-GARD Body 130-9
Tire Combinations 70-6	Service
Tightening Wheel Bolts 70-7	Access 135-1
Toe-In 70-8	Air Cleaner 135-3
Front Tread Settings 70-10	Belts 135-6
Steering Stops 70-15	Fuel System 135-9
Adjust Front Fenders 70-18	Cooling System 135-12
Adjusting Rear Wheels 70-19	Electrical 135-16
Rear Tread Settings 70-23	Fuses 135-21
Transporting	Lighting 135-23
Driving 75-1	Brakes 135-30
Hauling 75-3	Tires 135-31
Towing 75-4	Heating and Air Conditioning 135-33
Fuels, Lubricants and Coolant	Roll-Over Protective Structure (ROPS) 135-37
Fuel 80-1	Storage 140-1
Engine Oil 80-3	Specifications 145-1
Engine Coolant 80-4	Ground Speeds 145-5
Transmission-Hydraulic Oil 80-5	Torque Chart 145-6
Lubricants 80-6	Identification Numbers
Lubrication and Maintenance	Serial Number Plates 150-1
Break-In Service 85-2	Daily Maintenance 155-1
Service Intervals Chart 85-3	Lubrication and Maintenance Records . . . 160-1
Lubrication and Maintenance/10 Hour 90-1	Index
Lubrication and Maintenance/250 Hour 95-1	
Lubrication and Maintenance/750 Hour . . . 100-1	
Lubrication and Maintenance/1000 Hour . . 105-1	
Lubrication and Maintenance/1500 Hour . . 110-1	

Identification View



RX,110570,00,1 -19-02JUL91

RW19453 -JUN-09JUL91

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com