

694 CORN PLANTER



OPERATORS MANUAL 694 CORN PLANTER

OMB59958 F3 English

OMB59958 F3

LITHO IN THE U.S.A.
ENGLISH



YOUR NEW CORN PLANTER

Your new John Deere 694 Corn Planter will introduce you to a new concept of farming. Six-row farming for bigger savings in time . . . in labor . . . in money. It can mean the difference between getting all your corn in before a rain or having an uneven stand because of weather delays.

Your new planter was designed and built for unexcelled accuracy and dependability. Adjust and service it properly and it will give years of trouble-free service.

This Operator's Manual contains complete information on the proper

operation, adjustment, maintenance, and lubrication of your new planter. A parts list, with illustrations, is also provided.

When in need of parts, see your John Deere dealer. He will furnish genuine John Deere Parts and prompt and efficient service in the field or in the shop.


Right-hand and left-hand reference is determined by standing at the rear of the planter and facing the direction of travel.

Study this manual carefully. Keep it handy, in a safe place, for future reference.


694 CORN PLANTER			
Check off model of your planter, special equipment obtained, and record date purchased. Model: Hill-Drop with Runner Openers. Hill-Drop with Disk Openers. Drill with Runner Openers. Drill with Disk Openers. Check-Row Attachment. Transport Wheels. Fertilizer Attachment: Dry. Liquid.	Gauge Shoes		
\			

TABLE OF CONTENTS

	Page		Page
IDENTIFICATION VIEWS	2-3	Drill Planting	29-32
SPECIFICATIONS	4-5	Chain—Hill-Drop and	20
		Check-Row Planters	29 29
OPERATION	6-51	Chain—Drill Planter Drilling Distances	30
Preparing the Tractor	6	Chart — Approximate	30
Preparing the Planter	6–8	Drilling Distances	30
Row Widths	6 6	Chart - Approximate	
Tire Inflation	6	Pounds of Soybean per	
Markers	7	Acre	31
Seed Plates	. 7–8	Chart — Approximate	
Transporting the Planter	9-11	Pounds of Maize per	31
With Transport Wheels		Acre Chart — Approximate	Ji
and Hitch	9-10	Plant Population per	
Without Transport	11	Acre	32
Wheels and Hitch	11	Fertilizer Attachments	34-43
Hitching Planter for Field	11-15	Openers	34 - 37
Operation	11-13	Dry Fertilizer	38-41
Wheels and Hitch	11-13	Liquid Fertilizer	42-43
Attaching Planter to		Pre-Emergence Sprayer.,	44-47
Tractor	13	Trash Kickers	48
Marker Control Chain.	13–14	Double-Disk Opener	48
Hydraulic Remote Cyl-	1.4	Double-Disk Furrowers	48
inder	14	Covering Knives	48
Marker Lift Chains	15	Seed Packer Wheels	49
Safety Suggestions	15	Press Wheel Scrapers	49 49
Basic Field Operation	16–17 16	Press Wheel Bands Semi-Pneumatic Press	49
Transport Arm	16	Wheel Tires	50
Planting Depth	17	Gauge Shoes	50
Check-Row Planting	18-25	Insecticide Attachment	51
Sprocket Setting	18	Pea Attachment	51
Shift Lever	18		= 0
Laying Out the Wire	18-20	LUBRICATION	52
Starting to Plant	20-21	SERVICE	53-60
Planting	21-22	At the Beginning of the	
Reeling Up the Wire Check-Row Planting	23	Season	53
Charts	24-25	At the End of the Season	53
Hill-Drop Planting	26-28	Storing Planter	53
Chain, Hill-Drop Arm,		Causes for Common Diffi-	
and Strikers	26	culties Encountered	E4 EE
Rockshaft Spring	27	When Planting	
Hilling Distances and	0.5	Runner Alignment	56-57
Planting Speed	27	Rockshaft Bearings	57
Chain Adjustment	27	Timing the Planter	58-59 60
Chart—Approximate Hilling Distances and		Valve Adjustment	
Diameter County	28	PARTS LIST	61-97

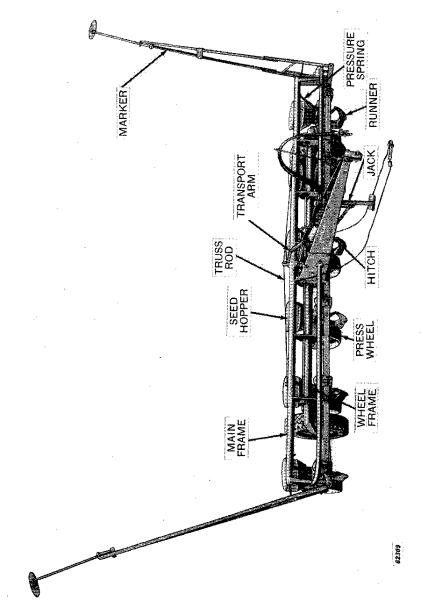

694 Hill-Drop Corn Planter

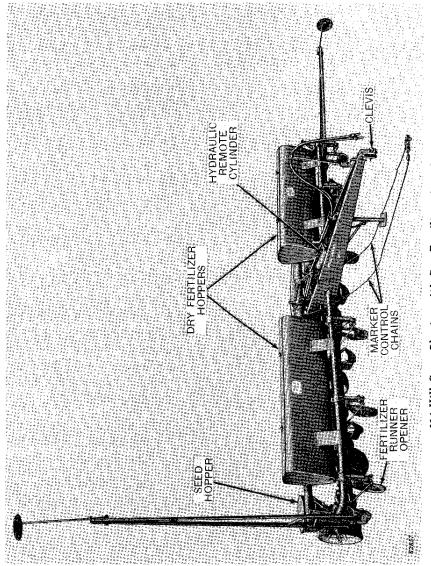

694 Hill-Drop Planter with Dry Fertilizer Attachment

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com