

Pre-Emergence Sprayer for 494, 495, 694, 695, or Two 494 or 495 Corn Planters



 
OPERATORS MANUAL

Pre-Emergence Sprayer for 494, 495, 694, 695, or
Two 494 or 495 Corn Planters

OMB681059 (01OCT59) English

OMB681059 (01OCT59)

LITHO IN U.S.A.
ENGLISH

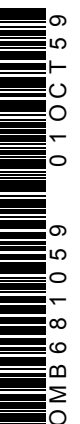

TO THE PURCHASER

Your new John Deere Pre-Emergence Sprayer is sturdy and dependable. It will give long and efficient service if given proper care and operation.

This Operator's Manual is provided to furnish information on the proper operation, adjustment, and lubrication of your Pre-Emergence Sprayer. A parts list, with illustrations, is provided.

When in need of parts, see your John Deere dealer. He will furnish genuine John Deere parts and prompt and efficient service in the field or shop.

Study this manual carefully. Keep it handy, in a safe place, for future reference.




Right-hand and left-hand reference is determined by standing at the rear of the machine and facing the direction of travel.

JOHN DEERE PRE-EMERGENCE SPRAYER

Date Purchased

TABLE OF CONTENTS

	<i>Page</i>
IDENTIFICATION VIEW	2
SPECIFICATIONS	3
OPERATION	4-12
Attaching to Tractor	4
Shut-Off Rod Adjustment	4
Pressure Control	5
Band Widths	5
Determining Rate of Application	6-9
Pump	10
Pump Selection	10
Transport (For Two 494 or 495 Corn Planters only)	11
Safety Suggestions	12
MAINTENANCE	13
ASSEMBLY	14-20
Shipping Bundles	14
494, 495, 694, Or 695 Planters Only	15-17
For Two 494 Or 495 Planters Only	18-20
PARTS LIST	21-29

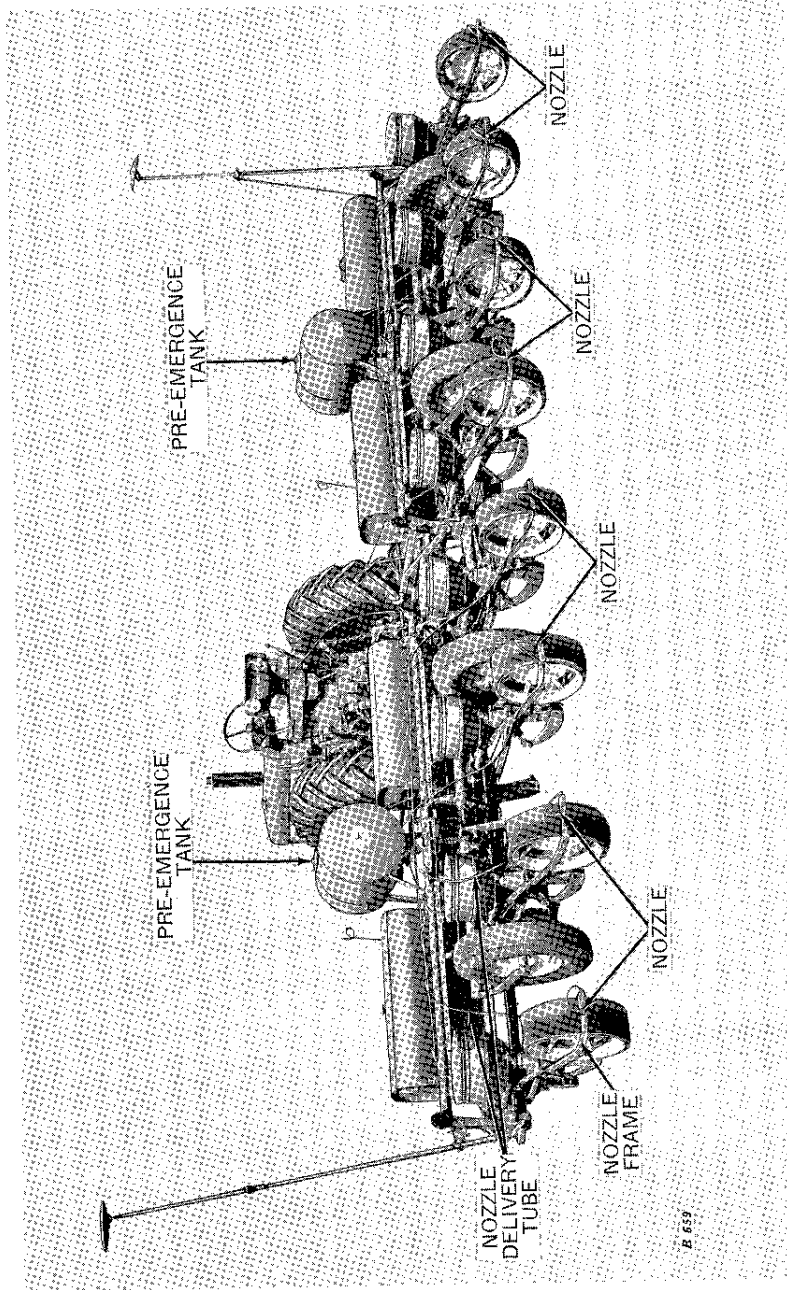

Pre-Emergence Sprayer for Two 494 Corn Planters

SPECIFICATIONS

The Pre-Emergence Sprayer is used to apply any commercial liquid form of herbicide in the row at the time of planting. It can be used with or without the liquid or dry fertilizer attachment. All parts are made from a chemical resistant material.

TANK CAPACITY—Approximately 36 gallons (4-row)—approximately 54 gallons (6-row).

PUMP—A gear pump operated by the tractor power take-off furnishes the pressure needed to operate the sprayer.

CONTROLS—The pressure regulator is easily accessible and the pressure gauge is visible from the tractor seat.

NOZZLES—Located at the rear of the press wheels.

NOZZLE TIPS—Nozzle tip number B11655B is furnished as regular equipment. Other nozzle tips of various sizes are available from your John Deere dealer.

WIDTH OF SPRAY BAND—Adjustable, by moving the nozzle frame up or down.

(Specifications and design subject to change without notice.)



THE COMPLETE OBSERVANCE of one simple rule would prevent many thousand serious injuries each year. THAT RULE IS: "NEVER ATTEMPT TO CLEAN, OIL, OR ADJUST A MACHINE WHILE IT IS IN MOTION."

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com